ARCHMI-7 SERIES User Manual

Release Date	Revision
Apr. 2013	V1.0
July. 2013	V1.1

®2013 Aplex Technology, Inc. All Rights Reserved. Published in Taiwan

Aplex Technology, Inc.
15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan
Tel: 886-2-82262881 Fax: 886-2-82262883 E-mail: aplex@aplex.com.tw URL: www.aplex.com.tw

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Disclaimer

This information in this document is subject to change without notice. In no event shall Aplex Technology Inc. be liable for damages of any kind, whether incidental or consequential, arising from either the use or misuse of information in this document or in any related materials.

Packing List

Accessories (as ticked) included in this package are:
☐ AC power cable ☐ Driver & manual CD disc ☐ Other._____(please specify)

Safety Precautions

Follow the messages below to prevent your systems from damage:

- Avoid your system from static electricity on all occasions.
- Prevent electric shock. Don‘t touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Table of Contents

Warning!……2
Disclaimer……2
Packing List……3
Safety Precautions……3

Chapter 1 Getting Started

1.1 Specifications……6
1.2 Dimensions……9
1.3 Brief Description……12
1.4Installation of HDD……13

Chapter 2 Hardware

2.1 Mainboard……17
2.2 Installations……20
2.3 Jumpers Setting and Connectors……21

Chapter 3 BIOS Setup

3.1 Operations after POST Screen……30
3.2 BIOS SETUP UTILITY……31
3.3 Main Settings……31
3.4 Advanced Settings……33
3.5 Chipset Settings……39
3.6 Boot Settings……43
3.7 Security Settings……46
3.8 Save and Exist Settings……47
3.9 Exit Options……53

Chapter 4 Installation of Drivers

4.1 Intel Chipset Driver……56
4.2 Intel Graphics Media Accelerator Driver……59
4.3 Intel (R) Network Adapter……62
4.4 Realtek ALC662 HD Audio Driver Installation……64

Chapter 5 Touch Screen Installation

5.2 Windows 2000/XP USB Driver Installation for PenMount 6000Series.66
5.1.1 Installing Software (Resistive Touch)……66

5.1.2 Installing Software (Projected Capacitive).....71
5.2.1 Software Functions(Resistive Touch).....76
5.2.2 Software Functions(Projected Capacitive)…….87

Figures

Figure 1.1:Dimensions of ARCHMI-707……..…....9
Figure 1.2:Dimensions of ARCHMI-708……..…..10
Figure 1.3:Dimensions of ARCHMI-712……10
Figure 1.3:Dimensions of ARCHMI-715……11
Figure 1.4: Front View of ARCHMI SERIES……...12
Figure 1.5: Rear View of ARCHMI-707/ARCHMI-708……..12
Figure 1.5: Rear View of ARCHMI-712/ARCHMI-715……..13
Figure 2.1: Mainboard Dimensions……..…….....19
Figure 2.2: Jumpers and Connectors Location_ Board Top……...20
Figure 2.3: Jumpers and Connectors Location_ Board Bottom……....21

Chapter 1 System

1.1 Specifications

	ARCHMI-707(P)	ARCHMI-708(P)	ARCHMI-712(P)	ARCHMI-715(P)
System				
CPU	Intel Atom Cedar View N2600 1.6GHz Dual Core Processors			
System Chipset	Intel NM10			
System Memory	Onboard DDR3 2GB 800 MHz			
IO Port				
USB	2 x USB 2.0 type A, USB4/5			
Serial/Parallel	1 x RS-232/422/485 DB-9, COM1, Default RS-232 1 x RS-232 DB-9, COM2			
Audio	1 x Line out phone jack			
LAN	2 x GbE RJ-45			
Power	3 pins terminal block connector, DC Power input			
Storage Space				
HDD	1 x 1.8” SATA 2 half size		1 x 2.5” SATA 2	
Movable device	1 x Internal SD slot		1 x Internal SD slot	
Expansion				
On board expansion bus	1 x Mini-PCIe half size			
Display				
Display Type	7” TFT-LCD	8” TFT-LCD	12.1” TFT-LCD	15” TFT-LCD
Max. Resolution	800x480	800x600	800x600	1024x768
Max. Color	262K	16.2M	16.2M	16.2M
Luminance (cd/m²)	350	350	330	330
View angle(H°/V°)	140/110	140/125	160/140	170/170
Touch screen				
Type	Resistive Touch / Projected Capacitive Touch (for P model)			
Interface	RS-232 / USB (for P model)			
Light Transmission(%)	80% / 90% (for P model)			
Power				
Power Input	9~36V DC			

Mechanical				
Construction	Sliver aluminum front bezel and chassis			
IP Rating	IP65 front panel			
Mounting	Panel mounting, VESA 75 x 75		Panel mounting, VESA 100 x 100	
Dimension (mm)	202 x 149 x 39	231 x 176 x 51	319 x 245 x 51.68	410 x 310 x 54.67
Net Weight (Kgs)	2.3	3.2	4.0	6.3
Environmental				
Operatiing temperature(℃)	0~50℃			
Storage temperature(℃)	-20~60℃			
Storage humidity	10 to 90% @ 40℃, non- condensing			
Certification	CE / FCC Class A			
Operating System Support	Windows XP pro, Windows XP Embedded, Windows Embedded CE6.0(Note 1), Windows 7 pro for Embedded Windows Embedded standard 7(Win 7 support 3D Graphic function)			

Note 1: ARCHMI series is covered by one or more of the following patents: US6, 570, 884, US6,115,776, and US6,327,625.

** Please be notice.

Due to the limitation for Intel N2000/D2000 EMGD driver, therefore ARCHMI will have some limitation under XP.

1. The Intel EMGD driver version is v1.15
2. It will have the unknown device under device management due to not support the Intel HDA device (refer to the photo below)
3. It will need install the correct driver by LCD panel size/resolution, totally four version : 800*480, 800*600, 1024*768(18bit), 1024*768(24bit)
4. The original driver not support VGA display will have to customize

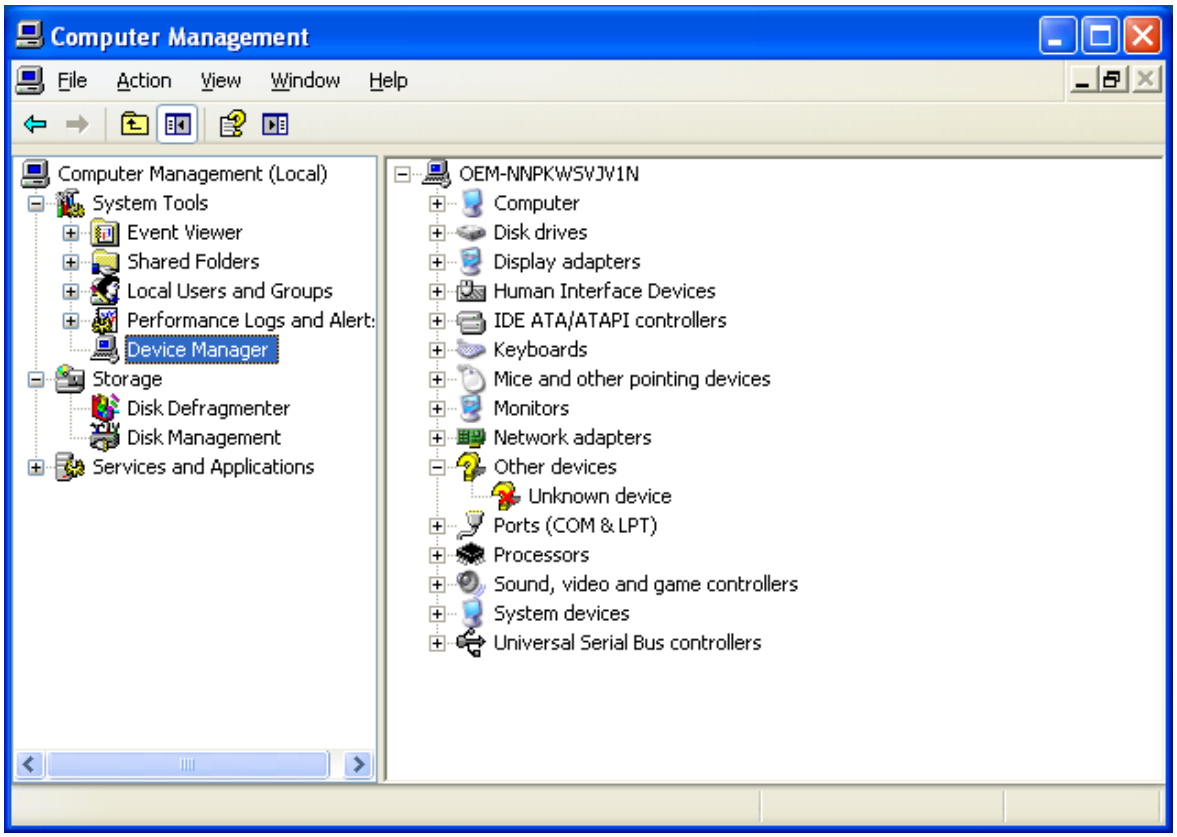
Computer Management
File Action View Window Help
Computer Management (Local)
System Tools
Event Viewer
Shared Folders
Local Users and Groups
Performance Logs and Alert
Device Manager
Storage
Disk Defragmenter
Disk Management
Services and Applications
OEM-NNPKWSVJV1N
Computer
Disk drives
Display adapters
Human Interface Devices
IDE ATA/ATAPI controllers
Keyboards
Mice and other pointing devices
Monitors
Network adapters
Other devices
Unknown device
Ports (COM & LPT)
Processors
Sound, video and game controllers
System devices
Universal Serial Bus controllers

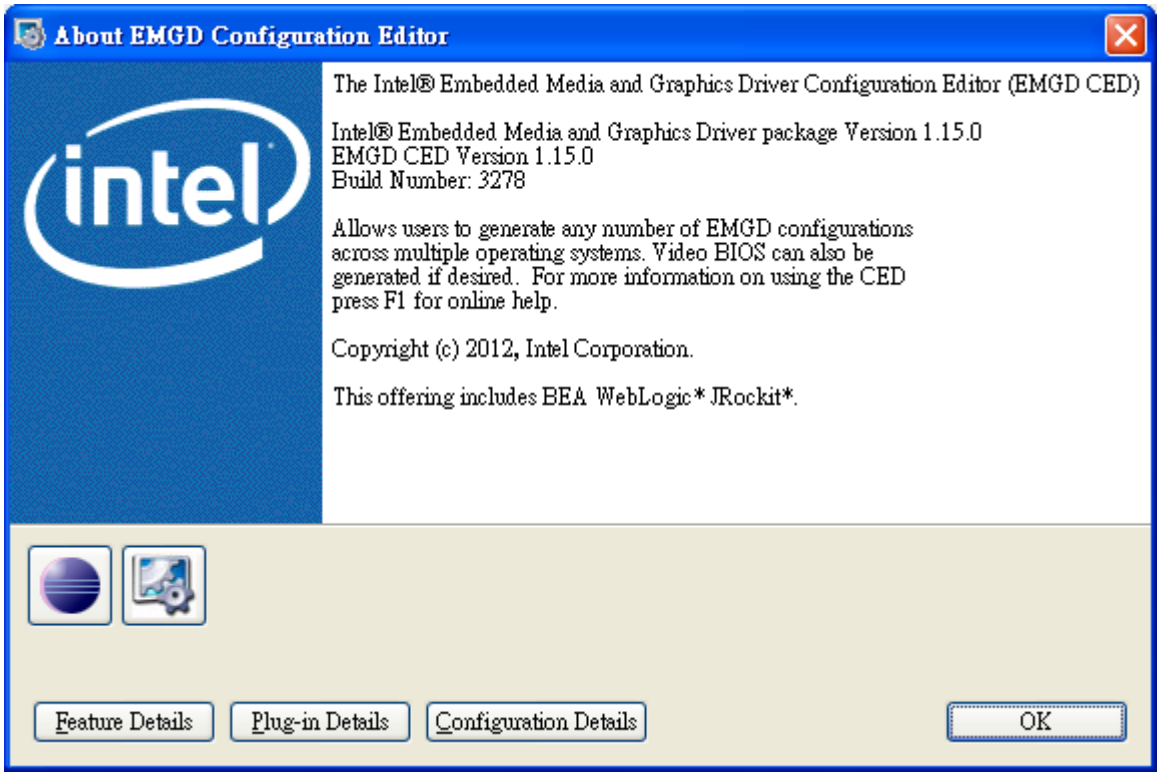
About EMGD Configuration Editor
The Intel® Embedded Media and Graphics Driver Configuration Editor (EMGD CED)
Intel® Embedded Media and Graphics Driver package Version 1.15.0
EMGD CED Version 1.15.0
Build Number: 3278
Allows users to generate any number of EMGD configurations across multiple operating systems. Video BIOS can also be generated if desired. For more information on using the CED press F1 for online help.
Copyright (c) 2012, Intel Corporation.
This offering includes BEA WebLogic* JRockit*.
Feature Details
Plug-in Details
Configuration Details
OK

1.2 Dimensions

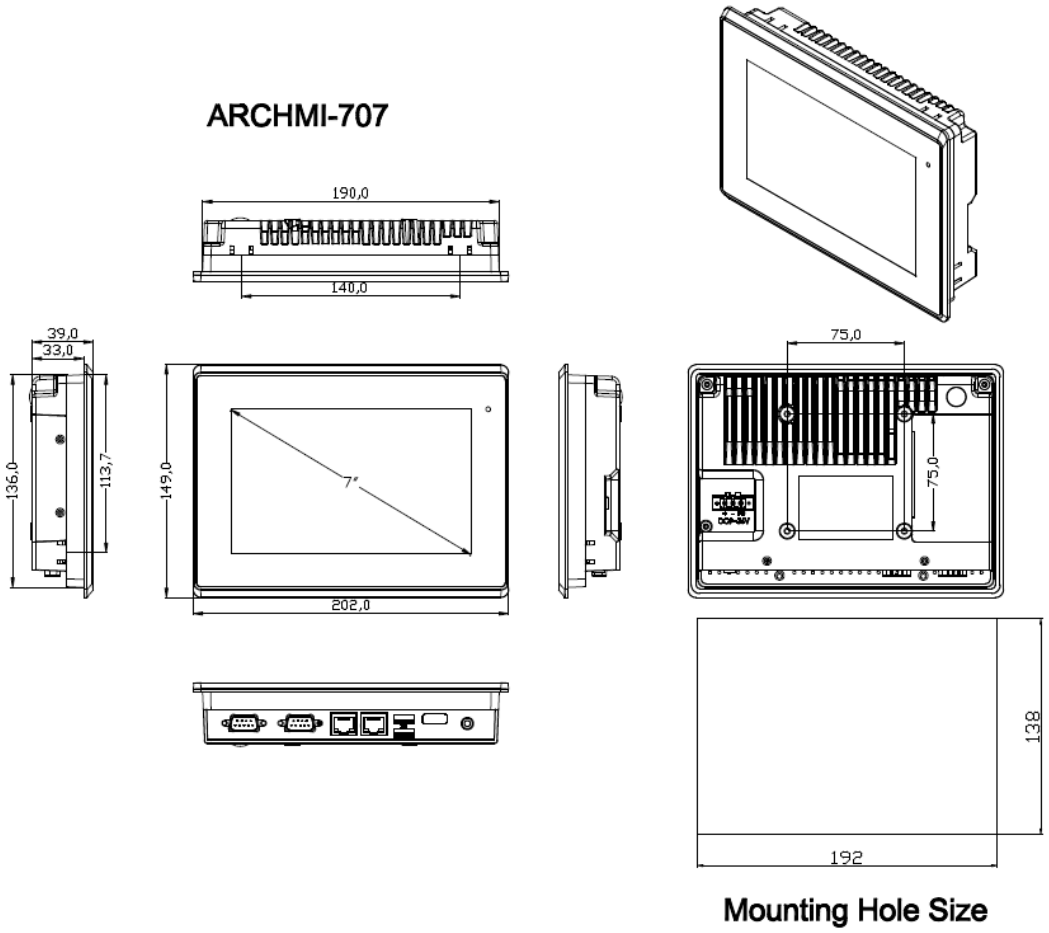

Figure 1.1: Dimensions of ARCHMI-707

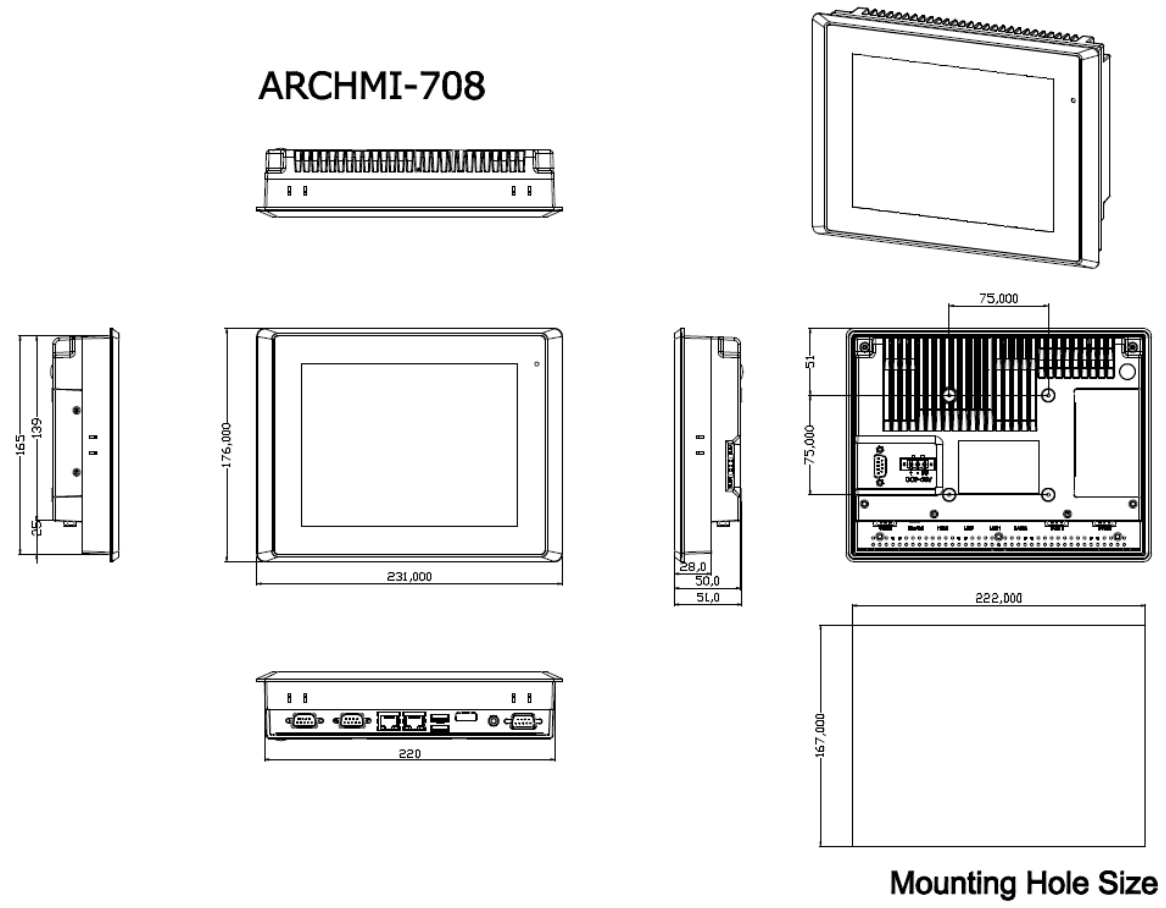

Figure 1.2: Dimensions of ARCHMI-708

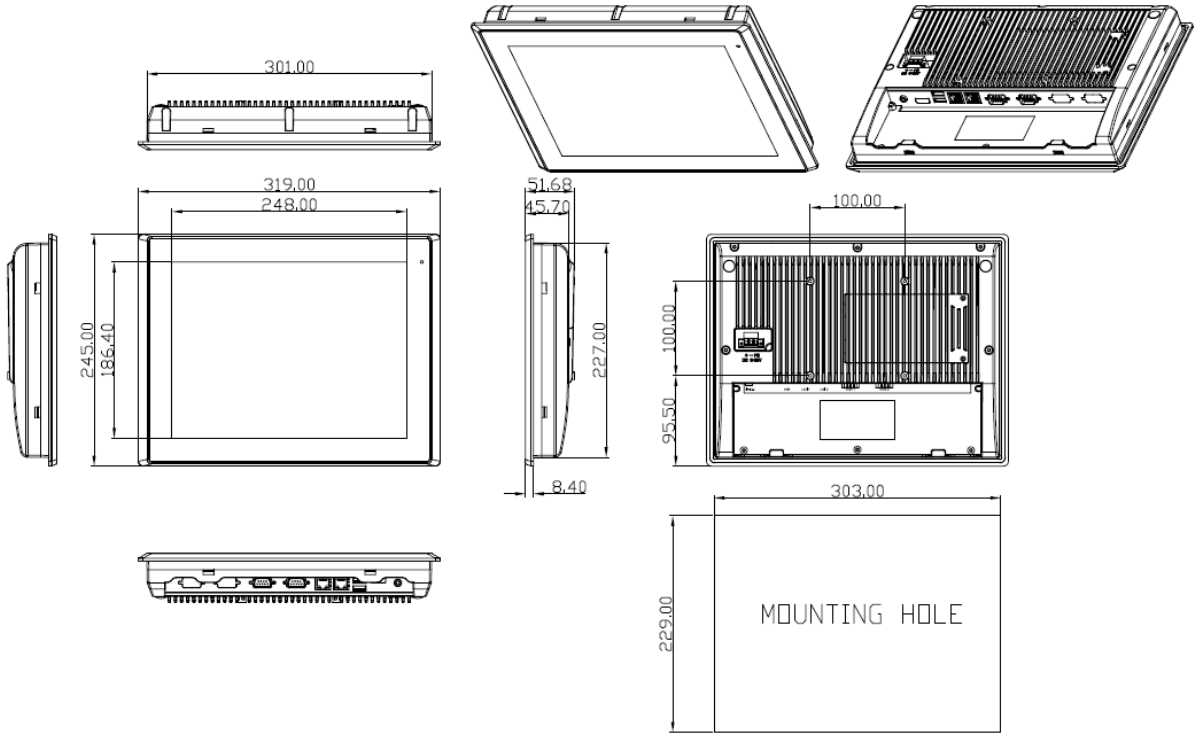

Figure 1.3: Dimensions of ARCHMI-712

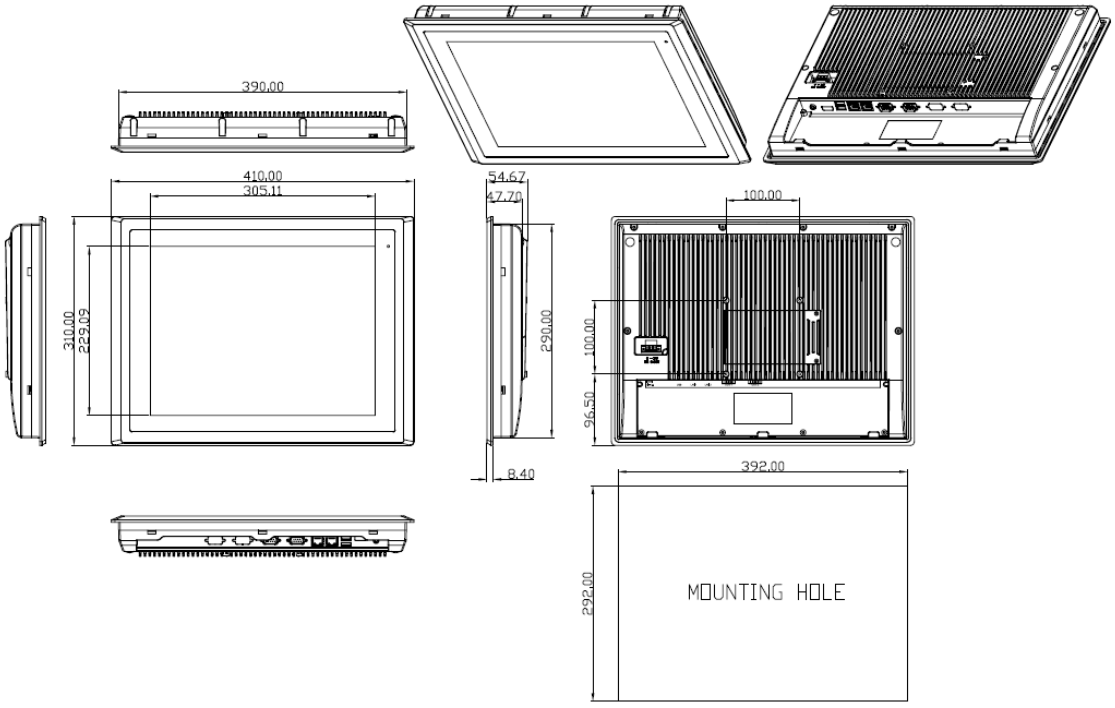

Figure 1.4: Dimensions of ARCHMI-715

1.3 Brief Description of ARCHMI SERIES

There are 7”, 8”, 12”,15” Industrial Compact Size Panel PC in ARCHMI series, which comes with flat front panel touch screen and fanless design. It is powered by an Intel Atom N2600 1.6GHz CPU built-in, 2GB DDR III 800 MHz. ARCHMI series is 9~36VDC wide-ranging power input and IP65 compliant front panel. Optional projected capacitive touchscreen support 7H anti-scratch surface is ideal for use as a PC-based controller for Industrial Automation & Factory Automation.

Figure 1.5: Front View of ARCHMI SERIES

Figure 1.6: Rear View of ARCHMI -707/ARCHMI -708

Figure 1.7: Rear View of ARCHMI -712/ ARCHMI- 715

1.4 Installation of HDD(ARCHMI-707/ARCHMI-708)

Step 1 There are 2 screws to deal with when enclosing or removing the chassis. Gently remove 2 screws.	
Step 2 There is a SSD card in the bracket. Gently remove the screw, then carefully pull SSD card.	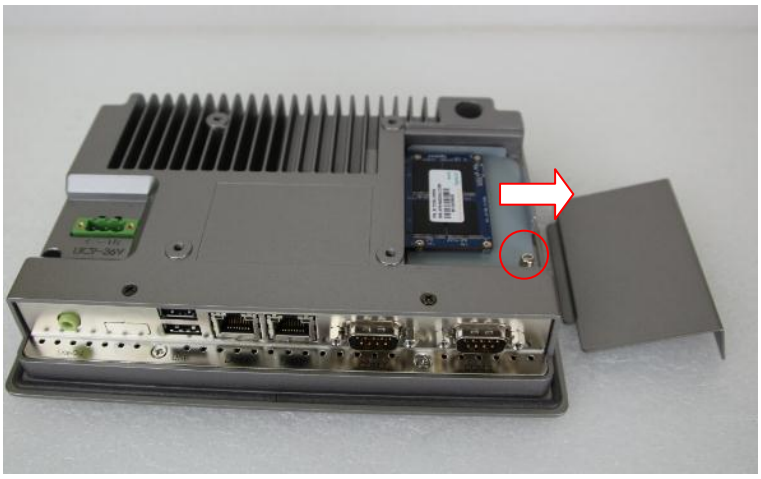

Step 3 Take out SSD Card bracket.	
Step 4. You can replace SSD card by unscrewing 4 screws as shown in the picture. Note: 4 screws are packed in the packing list.	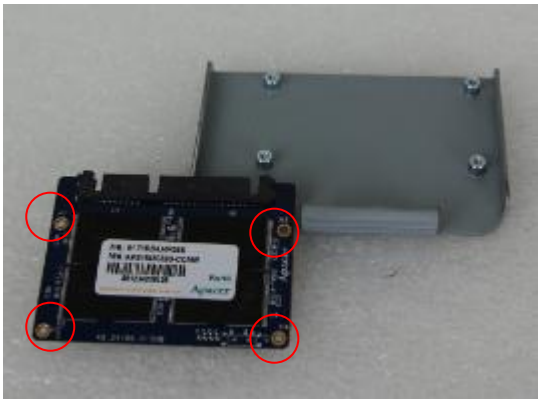
Step 5 There is a SD card hole in the side of the machine. You can replace SD card from there.	

Step 6. Gently screw the screws.	

Installation of HDD(ARCHMI-712 / ARCHMI-715)

Step 1 There are 2 screws to deal with when enclosing or removing the chassis. Gently remove 2 screws.	

Step 2

You can put or remove HDD into the machine by pulling the HDD bracket.

Step 3

You can remove HDD by unscrewing 4 screws in the HDD bracket.

Note: 4 screws are packed in the packing package.

Step 4

There is a SD hole in the side of machine.

You can replace SD card from there.

Chapter 2 Hardware

2.1 Mainboard

Specifications	
Board Size	170mm x 113mm
CPU Support	Intel Atom N2600 /1.60GHz
Chipset	Intel NM10 Express
Memory Support	Onboard 2GB DDRIII SDRAM
Graphics	Integrated Intel GMA 3600 (N2600)
Display Mode	1 x CRT Port 1 x LVDS1 (18/24-bit single LVDS)
Support Resolution	Up to 1920 x1200 for CRT Up to 1366 x768 for LVDS1 (N2600)
Dual Display	CRT+LVDS1
Super I/O	Winbond W83627UHG-E
BIOS	AMIBIOS
Storage	1 x SATA Connector (7P) 1 x SATA Connector (7P+15P) 1 x SD Socket (USB to SD)
Ethernet	2 x PCIe GbE LAN by Realtek RTL8111E
USB	2 x USB 2.0 (type A)stack ports (USB4/USB5) 2 x USB 2.0 Pin header via CN3 (USB2/USB3) 2 x USB 2.0 Pin header via CN1 (USB0/USB1) 1 x USB 2.0 for MPCIE1 (USB7) Mini-PCIe(USB7)
Serial	1 x RS-232/RS-422/RS-485, DB9 connector for external (COM1) pin 9 w/5V/12V/Ring select 1 x RS232 port, DB9 connector for external (COM2) pin 9 w/5V/12V/Ring select 1 x RS422/485 header via CN2 (COM3) 2 x UART via CN3 (COM5,COM6)
Digital I/O	8-bit digital I/O Pin header via CN2

	4-bit digital Input 4-bit digital Output 4-bit digital I/O Pin header via CN3 2-bit digital Input 2-bit digital Output
Battery	Support CR2477 Li battery by 2-pin header
Audio	Realtek ALC662 HD audio codec Line-in, Line-out, MIC via 2x6-pin header Audio Line out in phone jack
Keyboard /Mouse	1 x PS2 keyboard/mouse 1x6 box pin header via CN3
Expansion Bus	1 x mini-PCI-express slot 1 x PCI-express via CN3
Touch Ctrl	1 x Touch control header for TCH1 (COM4)
Power Management	Wide Range DC 9~36V input 1 x 3-pin power input connector
Switches and LED Indicators	1 x Power on/off switch via CN1 1 x Reset switch via CN1 1 x Power LED status via CN1 1 x HDD LED status via CN1 1 x Buzzer
External I/O port	2 x COM Ports (COM1/COM2) 2 x USB 2.0 Ports (USB4/USB5) 2 x GbE LAN Ports 1 x Line out Audio phone jack
Watchdog Timer	Software programmable 1 – 255 second by Super I/O
Temperature	Operating: -20℃ to 70℃ Storage: -40℃ to 85℃
Humidity	5% - 95%, non-condensing, operating
Power Consumption	12V /0.95A (Intel Atom N2600 processor with 2GB DDR3 DRAM)
EMI/EMS	Meet CE/FCC class A

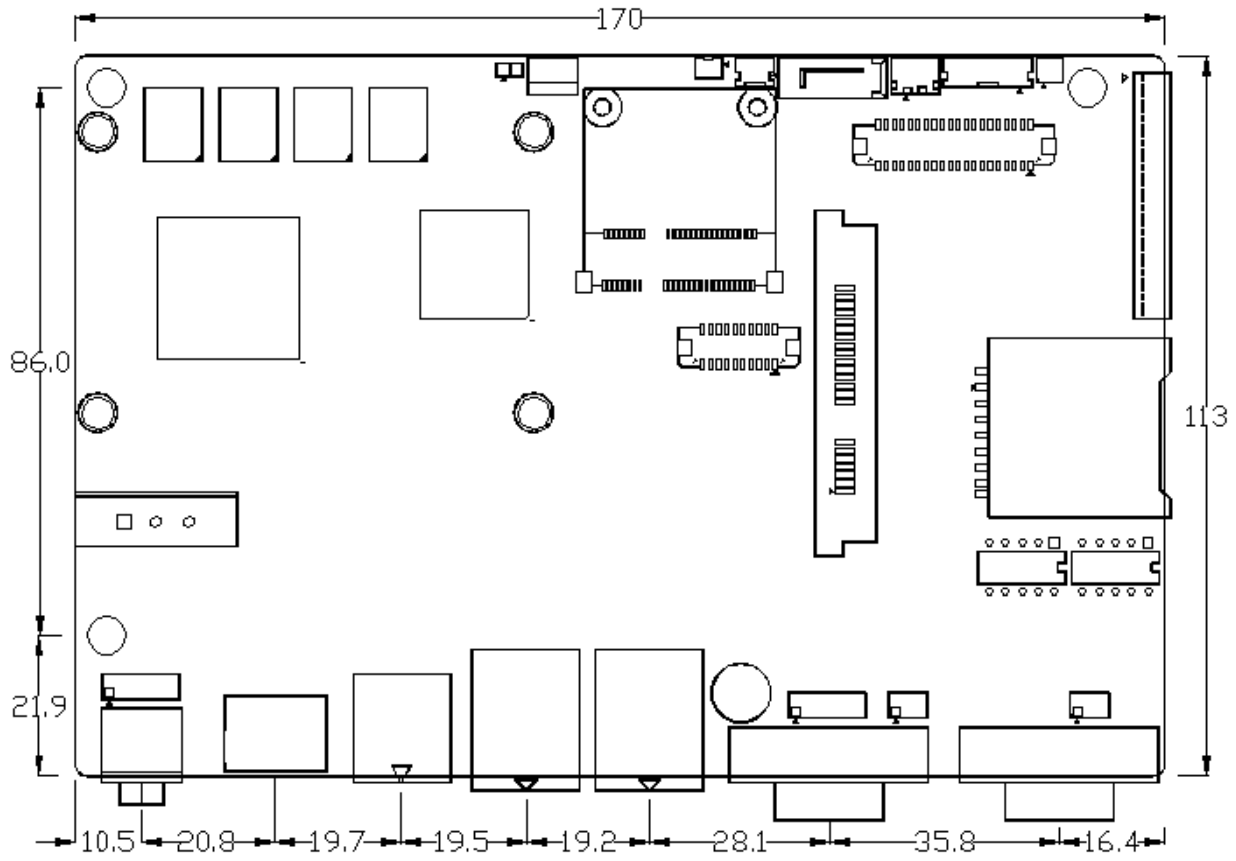

(units :mm)

Figure 2.1: Mainboard Dimensions

2.2 Installations

SBC-7106 is a 4" industrial motherboard developed on the basis of Intel Cedarview-M Processors and NM10, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual GbE ports, 3-COM ports and one Mini PCIE configuration, one VGA port, one HDMI port, one LVDS interface. To satisfy the special needs of high-end customers, CN1 and CN2 and CN3 richer extension functions. The product is widely used in various sectors of industrial control.

2.2.1 Jumpers Setting and Connectors

Board Top

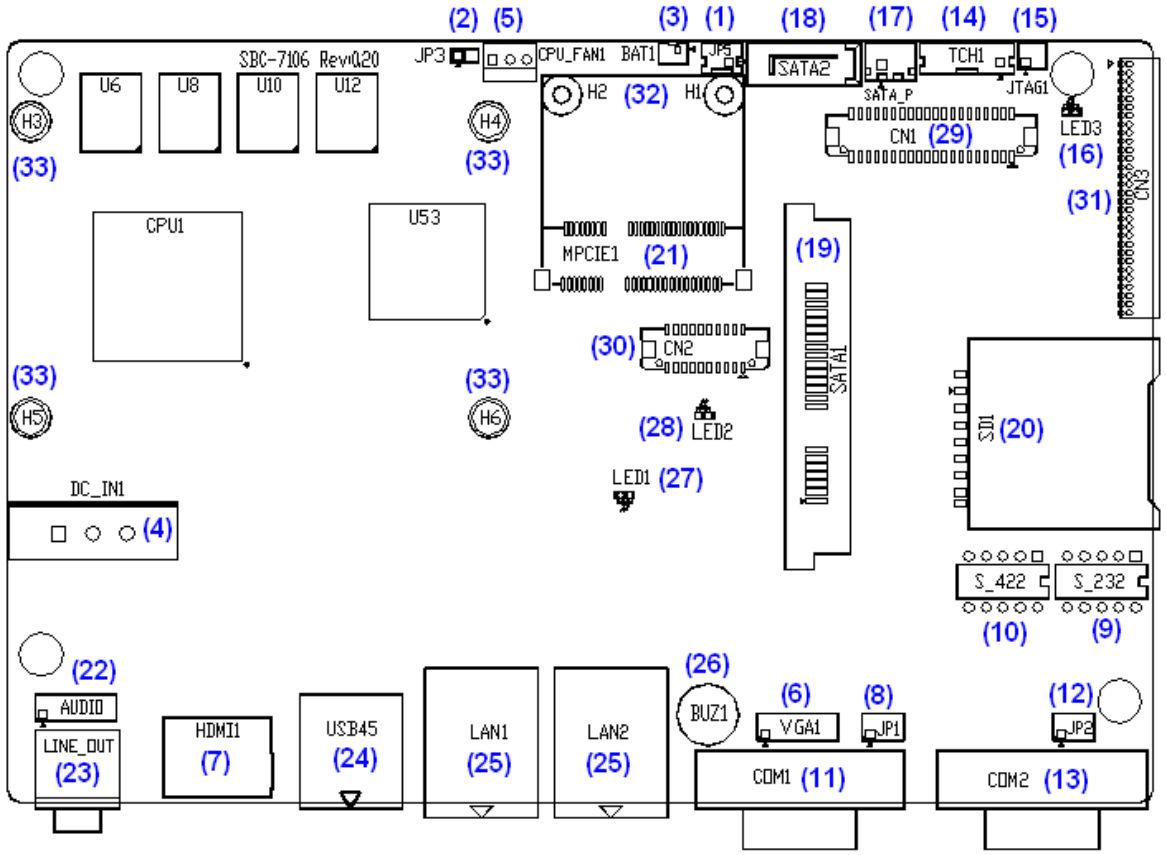

Figure 2.2: Jumpers and Connectors Location_ Board Top

Board Bottom

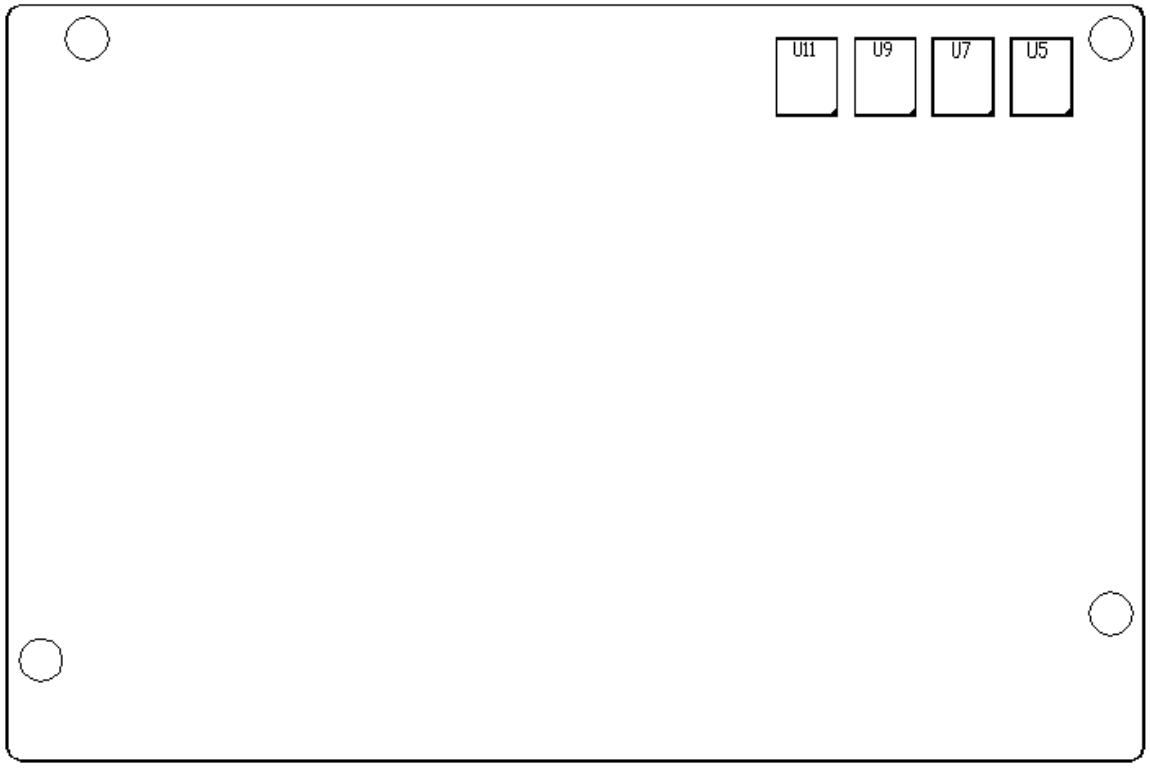

Figure 2.3: Jumpers and Connectors Location_ Board Bottom

2.3 Jumpers Setting and Connectors

1. JP5:

(2.0mm Pitch 1X2 box Pin Header),ATX Power and Auto Power on jumper setting**.**

JP5	Mode
Open	ATX Power
Close	**Auto Power on (Default)**

3. BAT1 :

(1.25mm Pitch 1X2 box Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

Pin#	Signal Name
Pin1	VBAT
PIN2	Ground

4. DC_IN1:

(5.08mm Pitch 1x3 Pin Connector),DC9V~36V System power input connector。

Pin#	Power Input
Pin1	DC+9V~32V
Pin2	Ground
Pin3	FG

6. VGA1:

(CRT 2.0mm Pitch 2X6 Pin Header), Video Graphic Array Port, Provide 2x6Pin cable to VGA Port.

Signal Name	Pin#	Pin#	Signal Name
CRT_RED	1	2	Ground
CRT_GREEN	3	4	Ground
CRT_BLUE	5	6	Ground
CRT_H_SYNC	7	8	CRT_DDCDATA
CRT_V_SYNC	9	10	CRT_DDCCLK
Ground	11	12	Ground

8. JP1:

(2.0mm Pitch 2x3 Pin Header),COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.

JP1 Pin#	Function
Close 1-2	**COM1 RI (Ring Indicator) (default)**
Close 3-4	COM1 Pin9=+5V (option)
Close 5-6	COM1 Pin9=+12V (option)

9. RS-232:

(Switch),COM1 jumper setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

Function	S_232 Pin#
RS232 (Default)	**ON: Pin1, Pin2, Pin3, Pin4, Pin5**
RS422 (option)	OFF: Pin1, Pin2, Pin3, Pin4, Pin5
RS485 (option)	OFF: Pin1, Pin2, Pin3, Pin4, Pin5

10. RS-422:

(Switch),COM1 setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

Function	RS_422 Pin#
RS232 (Default)	**OFF: Pin1, Pin2, Pin3, Pin4, Pin5**
RS422 (option)	ON: Pin1, Pin2, Pin3, Pin4, Pin5
RS485 (option)	ON: Pin1, Pin2, Pin3, Pin4, Pin5

Note: Must keep the setting with BIOS setting.

11. COM1:

(Type DB9),Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices. COM1 port is controlled by pins No.1~6 of JP1,select output Signal RI or 5V or 12V, For details, please refer to description of JP1 and S_232 and S_422 setting.

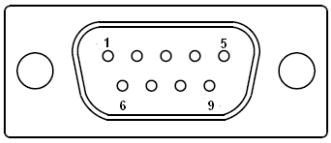

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	**JP1 select Setting (RI/5V/12V)**
BIOS Setup： Advanced/W83627UHG Super IO Configuration/Serial Port 1 Configuration【RS-232】	

RS422 (option):	
Pin#	Signal Name
1	422_RX+
2	422_RX-
3	422_TX-
4	422_TX+
5	Ground
6	NC
7	NC
8	NC
9	NC
BIOS Setup： Advanced/W83627UHG Super IO Configuration/Serial Port 1 Configuration【RS-422】	

RS485 (option):	
Pin#	Signal Name
1	NC
2	NC
3	485-
4	485+
5	Ground
6	NC
7	NC
8	NC
9	NC
BIOS Setup： Advanced/W83627UHG Super IO Configuration/Serial Port 1 Configuration【RS-485】	

12 JP2:

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.

JP2 Pin#	Function
Close 1-2	**COM1 RI (Ring Indicator) (default)**
Close 3-4	COM1 Pin9=+5V (option)
Close 5-6	COM1 Pin9=+12V (option)

13. COM2:

(Type DB9),Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

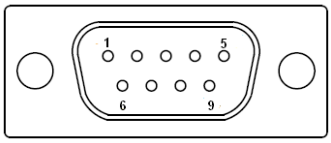

Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	RI **(**Ring Indicator**)**

16. LED3:

LED STATUS. Green LED for Touch Power status.

19 SATA1:

(SATA 7Pin+15Pin), SATA Connectors, one SATA connectors are provided, with transfer speed up to 3.0Gb/s.

20 SD1:

(SD card socket),Secure Digital Memory Card socket.

23. LINE_OUT:

(Diameter 3.5mm Jack), HD Audio port, An onboard Realtek ALC662 codec is used to provide high quality audio I/O ports. Line Out can be connected to a headphone or amplifier.

24. USB45:

USB4/USB5：(Double stack USB type A), Rear USB connector, it provides up to 4 USB2.0 ports, High-speed USB 2.0 allows data transfers up to480 Mb/s ,support USB full-speed and low-speed signaling.

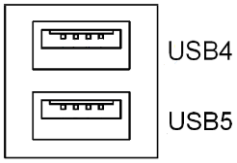

Each USB Type A Receptacle (2 Ports) Current limited value is 1.5A.
If the external USB device current exceeds 1.5A, please separate connectors into different Receptacle.

25. LAN1/LAN2:

LAN1/LAN2: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Used Realtek RTL8111E chipset, LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

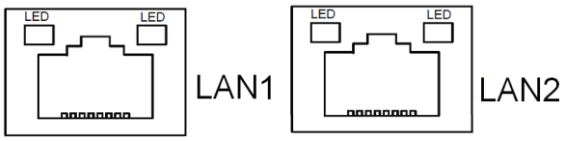

26. BUZ1:

Onboard buzzer.

27 LED1:

LED STATUS. Green LED for Motherboard Power status.

28. LED2:

LED STATUS. Green LED for Motherboard Standby Power Good status.

31. CN3:

(1.27mm Pitch 2X30 Pin Header), For expand output connector, It provides four GPIO, Two USB 2.0,one PS/2 mouse，one PS/2 keyboard,two uart,one PCIe x1,one SMbus.

Function	Signal Name	Pin#	Pin#	Signal Name	Function
	5V_S5_USB	1	2	5V_S5_USB	
	5V_S5_USB	3	4	5V_S5_USB	
	USB23_OC	5	6	CLKREQPSON_ATX-	
USB2	USB2_N	7	8	USB2_P	USB2
USB3	USB3_N	9	10	USB3_P	USB3
	Ground	11	12	Ground	
PS/2 MS	PS2_MSCLK	13	14	PS2_MSDATA	PS/2 MS
PS/2 KB	PS2_KBCLK	15	16	PS2_KBDATA	PS/2 KB
COM6 (UART)	COM6_RI	17	18	COM6_DCD-	COM6 (UART)
	COM6_TXD	19	20	COM6_RXD	
	COM6_DTR	21	22	RICOM6_RTS-	
	COM6_DSR	23	24	COM6_CTS-	
	Ground	25	26	Ground	
COM5 (UART)	COM5_RI	27	28	COM5_DCD-	COM5 (UART)
	COM5_TXD	29	30	COM5_RXD	
	COM5_DTR	31	32	DSRCOM5_RTS-	
	COM5_DSR	33	34	DTRCOM5_CTS-	
GPIO24	ICH_GPIO24	35	36	ICH_GPIO13	GPIO13
GPIO26	ICH_GPIO26	37	38	ICH_GPIO27	GPIO27
	Ground	39	40	Ground	
PCIE	PE1_TX_N0	41	42	PE1_TX_P0	PCIE
	PE1_RX_N0	43	44	PE1_RX_P0	
	Ground	45	46	Ground	
	CLK_100M_PE1_N	47	48	CLK_100M_PE1_P	
	PM_PCIE_WAKE	49	50	PLTRST_BUF-	
SMBUS	SMB_CLK_S5	51	52	SMB_DATA_S5	SMBUS
PCIE	PE1_CLKREQ	53	54	Ground	PCIE
	3P3V_S5	55	56	3P3V_S5	

	3P3V_S5	57	58	3P3V_S5	
12V	12V_S0	59	60	12V_S0	12V

3 BIOS Setup Description

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation,.Press [Delete] key to enter CMOS Setup.

American Megatrends
Version 2.15.1226. Copyright (C) 2012 American Megatrends, Inc.
BIOS Date: 12/17/2012 02:22:46 Ver: 7106V002
Press 〈DEL〉or〈F2〉to enter setup
A3

After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

3.2 BIOS SETUP UTILITY

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

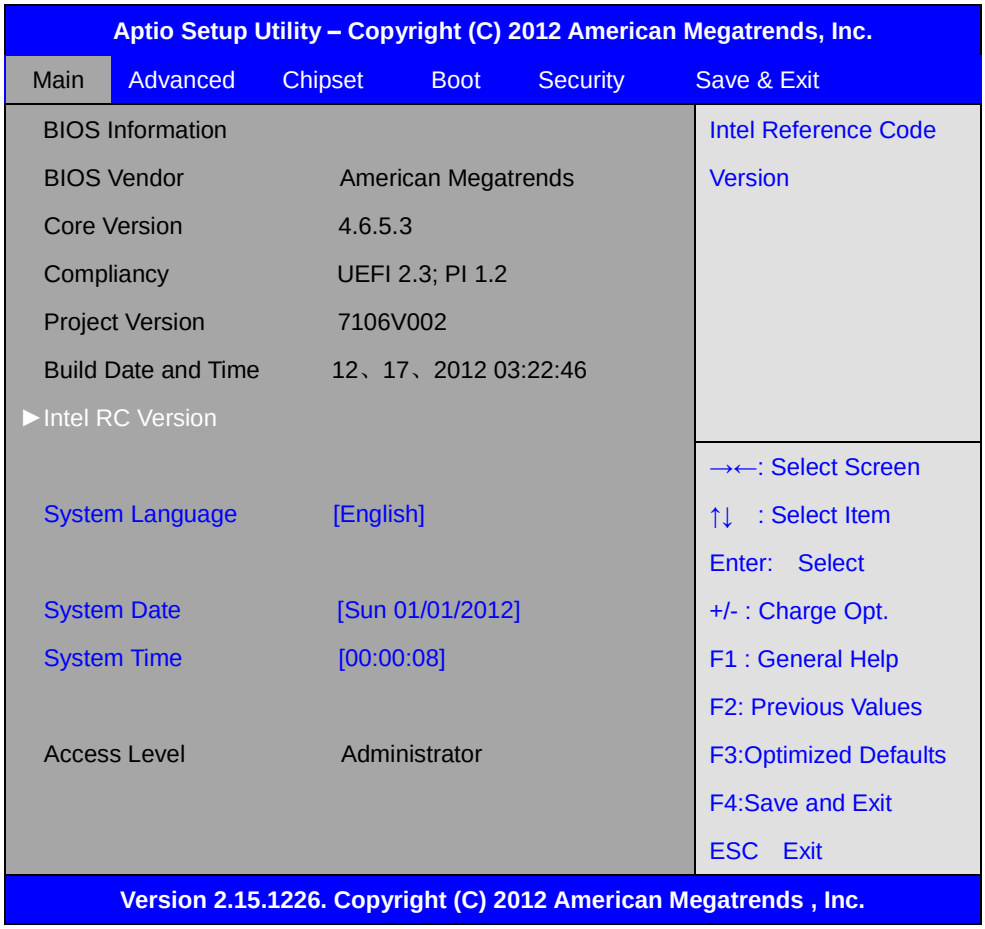

3.3 Main Settings

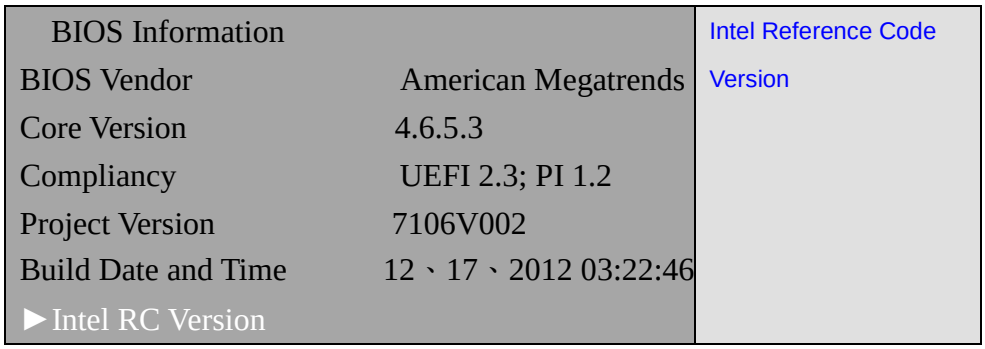

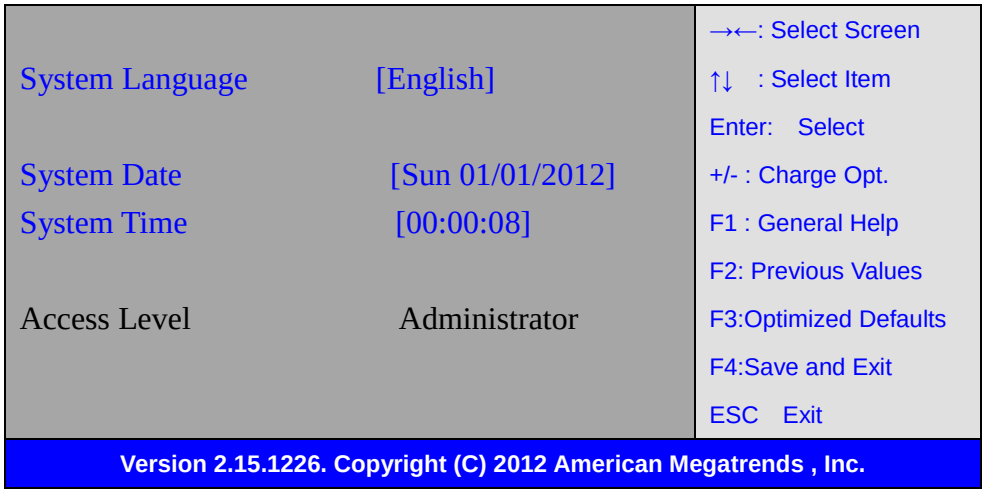

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:

Set the system date, the date format is:

Day: Note that the 'Day' automatically changes when you set the date.

Month: 01 to 12

Date: 01 to 31

Year: 1998 to 2099

3.4 Advanced Settings

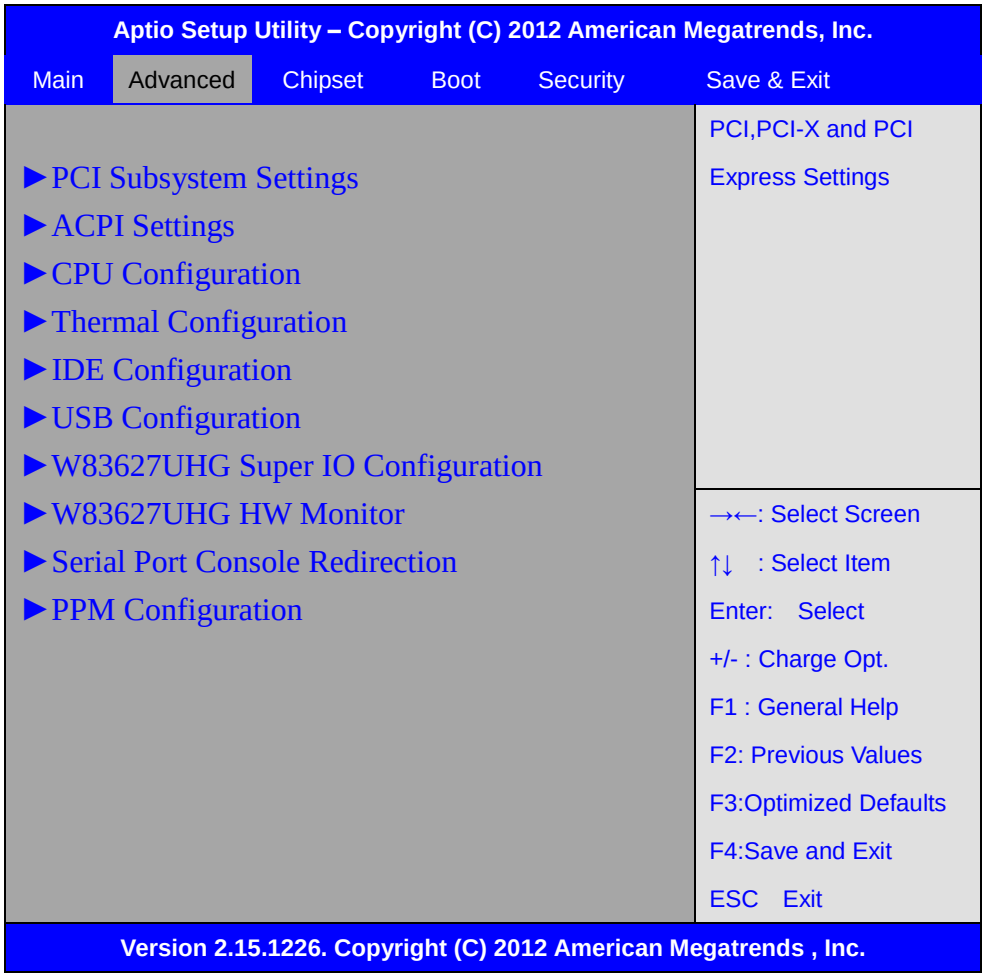

3.4.1 PCI Subsystem Settings

PCI Bus Driver Versio V2.05.02

PCI Common Settings:

PCI Latency Timer:

[32 PCI Bus Clocks]
[64 PCI Bus Clocks]
[96 PCI Bus Clocks]
[128 PCI Bus Clocks]
[160 PCI Bus Clocks]
[192 PCI Bus Clocks]
[224 PCI Bus Clocks]
[248 PCI Bus Clocks]

VGA Palette Snoop:

[Disabled]
[Enabled]

PERR# Generation:

[Disabled]
[Enabled]

SERR# Generation:

[Disabled]
[Enabled]

3.4.2 ACPI Settings

Enable ACPI Auto Conf:

[Disabled]
[Enabled]

Enable Hibernation:

[Enabled]
[Disabled]

ACPI Sleep State:

[Both S1 and S3 available for OS to choose from]
[Suspend Disabled]
[S1 only(CPU Stop Clock)]
[S3 only (Suspend to RAM)]

Lock Legacy Resources:

[Disabled]
[Enabled]

S3 Video Repost:

[Disabled]
[Enabled]

3.4.3 CPU Configuration

Processor Type	Intel(R) Atom(TM) CPU N2600
EMT64	Not Supported
Processor Speed	1600 MHz
System Bus Speed	400MHz
Ratio Status	16
Actual Ratio	16
System Bus Speed	400 MHz
Processor Stepping	30661
Microcode Revision	269

L1 Cache RAM 2x56 k
L2 Cache RAM 2x512 k
Processor Core Dual
Hyper-Threading Supported

Hyper-Threading:
[Enabled]
[Disabled]

Execute Disable Bit:
[Enabled]
[Disabled]

Limit CPUID Maximum:
[Disabled]
[Enabled]

3.4.4 Thermal Configuration

CPU Thermal Configuration
DTS SMM
[Disabled]
[Enabled]

Platform Thermal Configuration
Critical Trip Point [POR]
Active Trip Point Lo [55 C]
Active Trip Point Hi [71C]
Passive Trip Point [95]
Passive TC1 Value 1
Passive TC2 Value 5
Passive TSP Value 10

3.4.5 IDE Configuration

SATA Port0 Not Present
SATA Port1 Not Present

SATA Controller(S):
[Enabled]
[Disabled]
Configure SATA as:
[IDE]

[AHCI]

Misc Configuration for hard disk

3.4.6 USB Configuration

USB Configuration

USB Devices:

1 Drive ，1 keyboard

Legacy USB Support:

[Enabled]

[Disabled]

EHCI Hand-off:

[Disabled]

[Enabled]

USB hardware delays a

USB transfer time-out:

[20 sec]

[10 sec]

[5 sec]

[1 sec]

Device reset time-out:

[20 sec]

[10 sec]

[30 sec]

[40 sec]

Device power-up delay

[Auto]

[Manual]

Mass Storage Devices：

Multiplecard Reader 1

[Auto]

[Floppy]

[Forced FDD]

[Hard Disk]

[CD-ROM]

3.4.7 W83627UHG Super IO Configuration

W83627UHG Super IO ch W83627UHG

Serial Port 1 Configuration

UART Mode Selection：

[RS-232]

[RS-485]
[RS-422]

Serial Port 2 Configuration
Serial Port 3 Configuration
UART Mode Selection：
[RS-485]
[RS-422]

Serial Port 4 Configuration
Serial Port 5 Configuration
Serial Port 6 Configuration
Power Failure
[Keep last state]
[Always off]
[Always on]

3.4.8 W83627UHG HW Monitor

PC Health Status

System temperature1 : +38
System Speed : N/A
VCORE : +0.968 V
+12V : +12.302 V
+3.3V : +3.320 V
+1.5V : +1.528 V
AVCC : +5.203 V
VCC5V : +5.216 V
VSB5 : +5.203 V
VBAT : +3.334 V

3.4.9 Serial Port Console Redirection

COM0

Console Redirection
[Enabled]
[Disabled]
Console Redirection Settings
Serial Port for Out-of-Band Management/
Windows Emergency Management Services (EMS)
Console Redirection

[Disabled]
[Enabled]
Console Redirection Settings

3.4.10 PPM Configuration

PPM Configuration
EIST:
[Enabled]
[Disabled]
CPU C state Report
[Enabled]
[Disabled]
Enhanced C state
[Enabled]
[Disabled]
CPU Hard C4E
[Enabled]
[Disabled]
CPU C6 state
[Enabled]
[Disabled]
C4 Exit Timing
[Fast]
[Default]
[Slow]
C-state POPDOWN
[Enabled]
[Disabled]
C-state POPUP
[Enabled]
[Disabled]

3.5 Chipset Settings

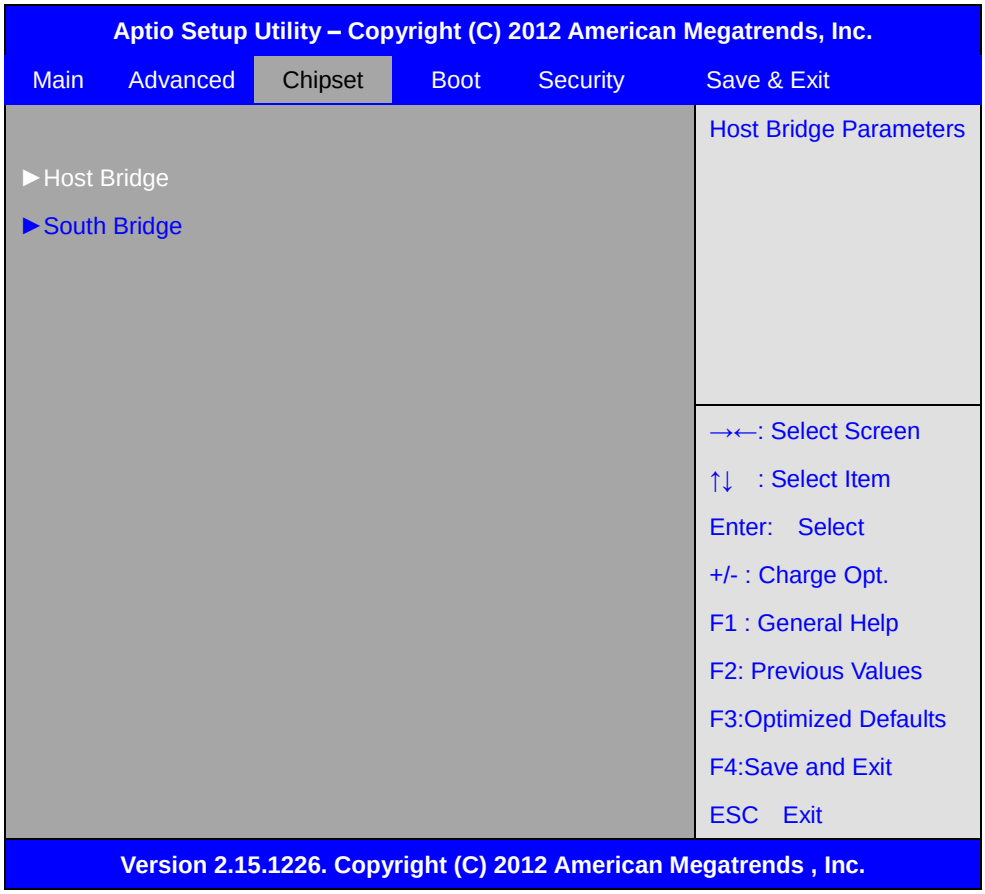

3.5.1 Host Bridge

►Memory Frequency and Timing

►Intel IGD Configuration

******* Memory Information *******

Memory Frequency	800 MHz(DDR3)
Tot al Memory	2048 MB
DIMM#0	Not Present
DIMM#1	2048 MB

Memory Frequency and Timing

MRC Fast Boot

[Enabled]

[Disabled]

Max TOLUD

[Dynamic]

[1GB]

[1.25GB]

[1.5GB]
[1.75GB]
[2GB]
[2.25GB]
[2.5GB]
[2.75GB]
[3GB]
[3.25GB]

Intel IGD Configuration

IGFX – Boot Type

[VBIOS Default]
[VGA]
[LVDS]
[VGA + LVDS]

LCD Panel Type

[VBIOS Default]
[640x480，18bit]
[800x480，18bit]
[800x600，18bit]
[1024x600，18bit]
[1024x768，18bit]
[1280x768，18bit]
[1280x800，18bit]
[1280x1024，18bit]
[1366x768，18bit]
[1024x768，24bit]
[1280x768，24bit]
[1280x800，24bit]
[1280x1024，24bit]

Panel Scaling

[Auto]
[Force Scaling]
[off]
[Maintain Aspect Ratio]

Active LFP

[LVDS]
[No LVDS]
[EDP]

IGD Clock Source

[External Clock]

[Internal Clock]

Fixed Graphics Memory

[128MB]

[256MB]

ALS Support

[Disabled]

[Enabled]

Back light Control

[DC]

[PWM]

Back light Logic

[Positive]

[Negative]

Back light Control Lev

[Auto]

[Disabled]

[Level 8]

[Level 1]

[Level 2]

[Level 3]

[Level 4]

[Level 5]

[Level 6]

[Level 7]

[Level 8]

[Level 9]

[Level 10]

[Level 11]

[Level 12]

[Level 13]

[Level 14]

[Level 15]

3.5.2 South Bridge

TPT Devices

PCI Express Root Port 0

PCI Express Root Port 1

PCI Express Root Port 2

PCI Express Root Port 3

DMI Link ASPM Control

[Enabled]

[Disabled]

PCI-Exp. High Priorit

[Disabled]

[Enabled]

High Precision Event Timer Configuration

High Precision Timer

[Enabled]

[Disabled]

SLP_S4 Assertion Widt

[1-2 Seconds]

[2-3 Seconds]

[3-4 Seconds]

[4-5 Seconds]

Restore AC Power Loss

[Last State]

[Power off]

[Power on]

3.6 Boot Settings

Setup Prompt Timeout [1]

Bootup Numlock State

[On]

[off]

Quiet Boot

[Disabled]

[Enabled]

Fast Boot

[Enabled]

[Disabled]

Skip VGA

[Enabled]

[Disabled]

Skip USB

[Disabled]

[Enabled]

Skip PS2

[Disabled]

[Enabled]

CSM16 Module Version 07.69

Gatea20 Active

[Upon Request]

[Always]

Option ROM Messages

[Force BIOS]

[Keep Current]

Interrupt 19 Capture

[Immediate]

[Postponed]

Boot Option #1

Boot Option #2

……

Sets the system boot order

Hard Drive BBS Priorities [SATA PM:*** …]

Boot Option #1

SATA PM:***…

******

Disabled

CSM Parameters

Launch CSM

[Always]

[Never]

Boot option filter

[UEFI and Legacy]
[Legacy only]
[UEFI only]

Launch PXE OpROM poli

[Do not Launch]
[UEFI only]
[Legacy only]

Launch Storage OpROM

[Legacy only]
[Do not Launch]
[UEFI only]

Launch Video OpROM po

[Do not Launch]
[UEFI only]
[Legacy only]

Other PCI device ROM

[UEFI OpROM]
[Legacy OpROM]

3.7 Security Settings

Aptio Setup Utility – Copyright (C) 2012
American Megatrends, Inc.
Main
Advanced
Chipset
Boot
Security
Save & Exit
Password Description
If ONLY the Administrator's password is set,
Then this only limits access to Setup and is
Only asked for when entering Setup.
If ONLY the User's password is set, then this
Is a power on password and must be entered to
Is a power on password and must be entered to
Boot or enter Setup. In Setup the User will
Have Administrator rights.
The password length must be
In the following range:
Minimum length 3
Maximum length 20
Administrator Password
User Password
Set Administrator Password
→←: Select Screen
↑↓ : Select Item
Enter: Select
+/- : Charge Opt.
F1 : General Help
F2: Previous Values
F3:Optimized Defaults
F4:Save and Exit
ESC Exit
Version 2.15.1226. Copyright (C) 2012 American Megatrends , Inc.

6.4.1 Administrator Password



6.4.2 User Password



Type the password with up to 20 characters and then press ⩤Enter⩥ key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press ⩤Enter⩥ key. You may press ⩤Esc⩥ key to abandon password entry operation.

To clear the password, just press ⩤Enter⩥ key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled.

You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.

3.8 Save and Exist Settings

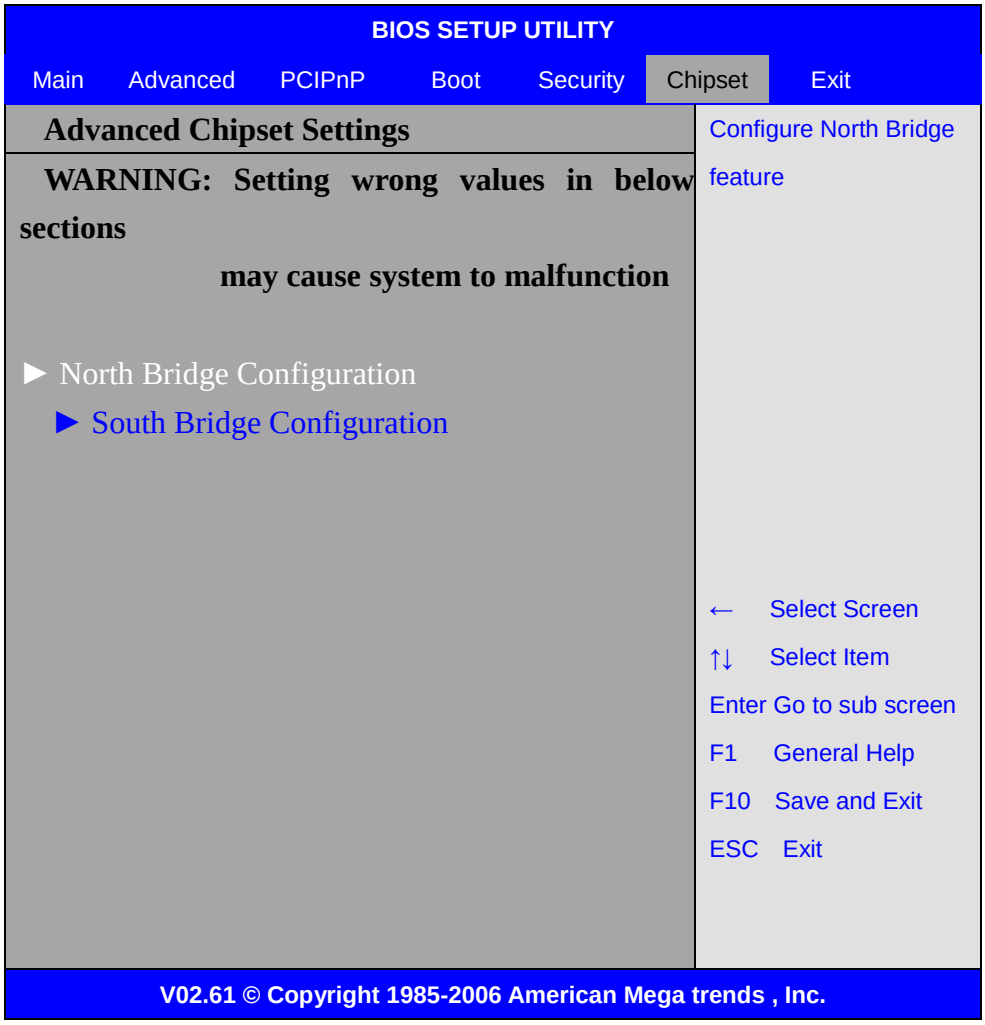

Note: Due to limited address length of BIOS, only a portion of panel parameters are listed in BIOS Setup. If the connected panel is not included in the parameter list, display problem will occur. In this case, Please do not change BIOS setup.

3.8.1 North Bridge Configuration

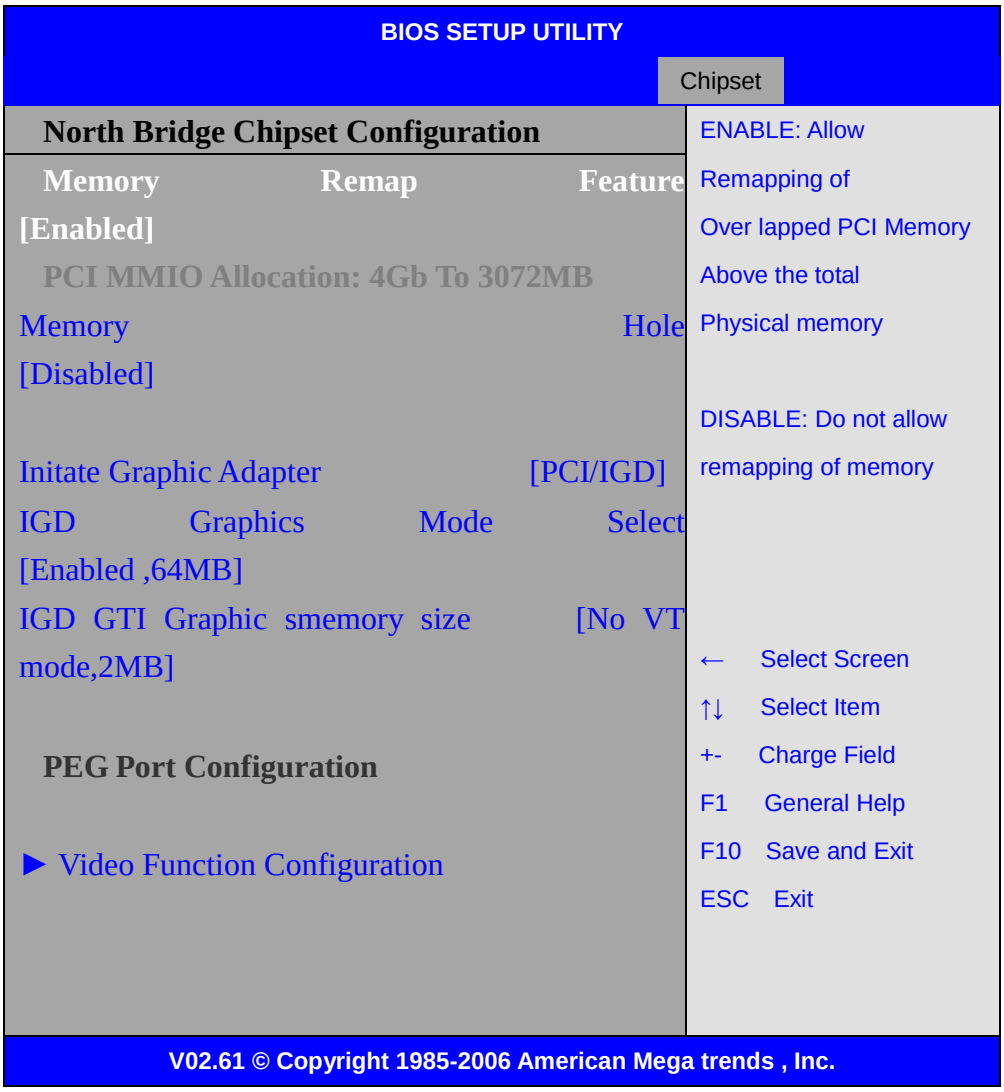
BIOS SETUP UTILITY
Chipset
North Bridge Chipset Configuration
Memory Remap Feature [Enabled]
PCI MMIO Allocation: 4Gb To 3072MB
Memory Hole [Disabled]
Initate Graphic Adapter [PCI/IGD]
IGD Graphics Mode Select [Enabled ,64MB]
IGD GTI Graphic smemory size [No VT mode,2MB]
PEG Port Configuration
► Video Function Configuration
ENABLE: Allow Remapping of Over lapped PCI Memory Above the total Physical memory
DISABLE: Do not allow remapping of memory
← Select Screen
↑↓ Select Item
+- Charge Field
F1 General Help
F10 Save and Exit
ESC Exit
V02.61 © Copyright 1985-2006 American Mega trends , Inc.

Memory Remap Feature:

[**Enabled**]
[Disabled]

Memory Hole:

[Disabled]
[15MB-16MB]

Initate Graphic Adapter:

Select which graphics controller to use as the primary boot device.

[**IGD**]
[PCI/IGD]

IGD Graphics Mode Select:

[**Enabled, 64MB**]
[Disabled]

[Enabled, 32MB]
[Enabled, 128MB]

Video Function Configuration:

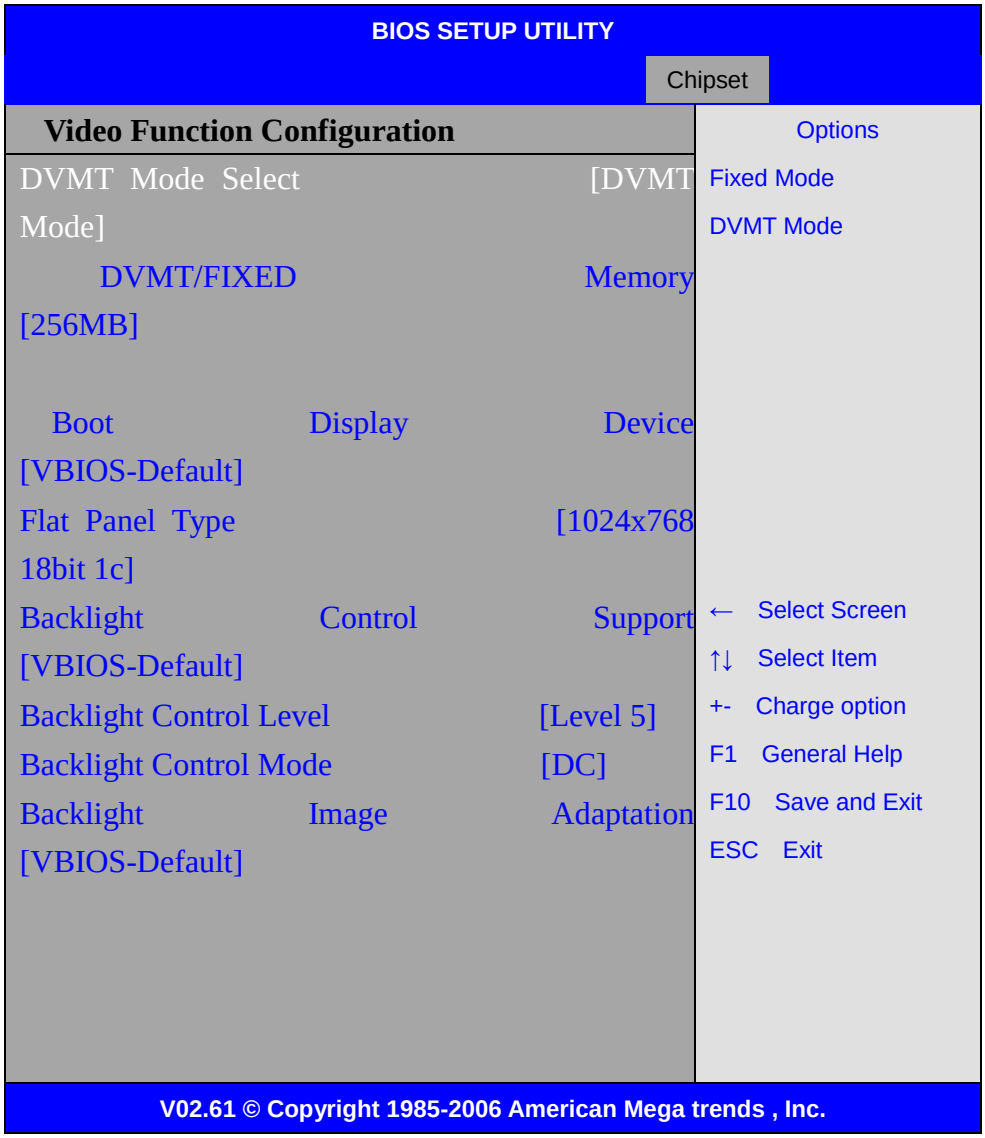

DVMT Mode Select:

[**DVMT Mode**]
[FIXED Mode]

DVMT/FIXED Memory Size**:**

[**256MB**]
[128MB]
[Maximum DVMT]

Boot Display Device:

[**BIOS-Default**]
[CRT]

[LVDS]
[CRT + LVDS]

Flat Panel Type:

[1024x 768 18bit 1ch]
[640x480 18bit 1ch]
[800x600 18bit 1ch]
[1280x800 18bit 1ch]
[1366x768 18bit 1ch]
[1024x 768 24bit 2ch]
[1440x900 24bit 2ch]
[1600x900 24bit 2ch]
[1680x1050 24bit 2ch]
[1920x1080 24bit 2ch]

Backlight Control Support

[VBIOS-Default]
[Both BLC & BIA Disabled]
[BLC Enabled]

Backlight Control Control:

[Level5]
[Level0]
[Level1]
[Level2]
[Level3]
[Level4]
[Level6]
[Level7]

Note: Panel support PWM Function.

Backlight Control Mode:

[DC]
[PWM]

Backlight Image Adaptation:

[VBIOS-Default]
[BIA Disabled]
[BIA Enabled at Level1]
[BIA Enabled at Level2]

[BIA Enabled at Level3]
[BIA Enabled at Level4]
[BIA Enabled at Level5]

3.8.2 South Bridge Configuration:

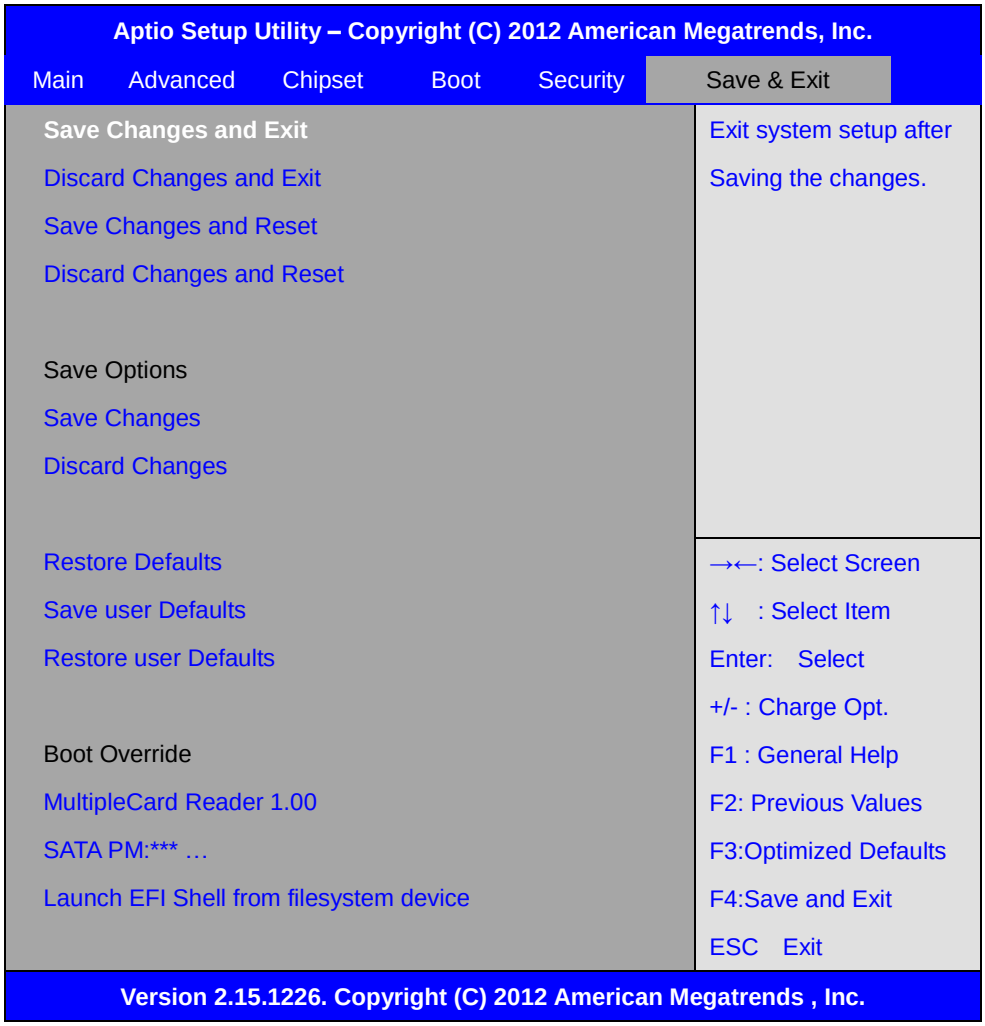

Save Changes and Exit

Save & Exit Setup save Configuration and exit ?

[Yes]

[No]

Discard Changes and Ext

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

Save & reset Save Configuration and reset?

[Yes]

[No]

Discard Changes and Reset

Reset Without Saving Reset without saving?

[Yes]

[No]

Save Changes

Save Setup Values Save configuration?

[Yes]

[No]

Discard Changes

Load Previous Values Load Previous Values?

[Yes]

[No]

Restore Defaults

Load Optimized Defaults Load optimized Defaults?

[Yes]

[No]

Save user Defaults

Save Values as User Defaults Save configuration?

[Yes]

[No]

Restore user Defaults

Restore User Defaults Restore User Defaults?

[Yes]

[No]

Launch EFI Shell from filesystem device

WARNING Not Found

[ok]

3.9 Exit Options

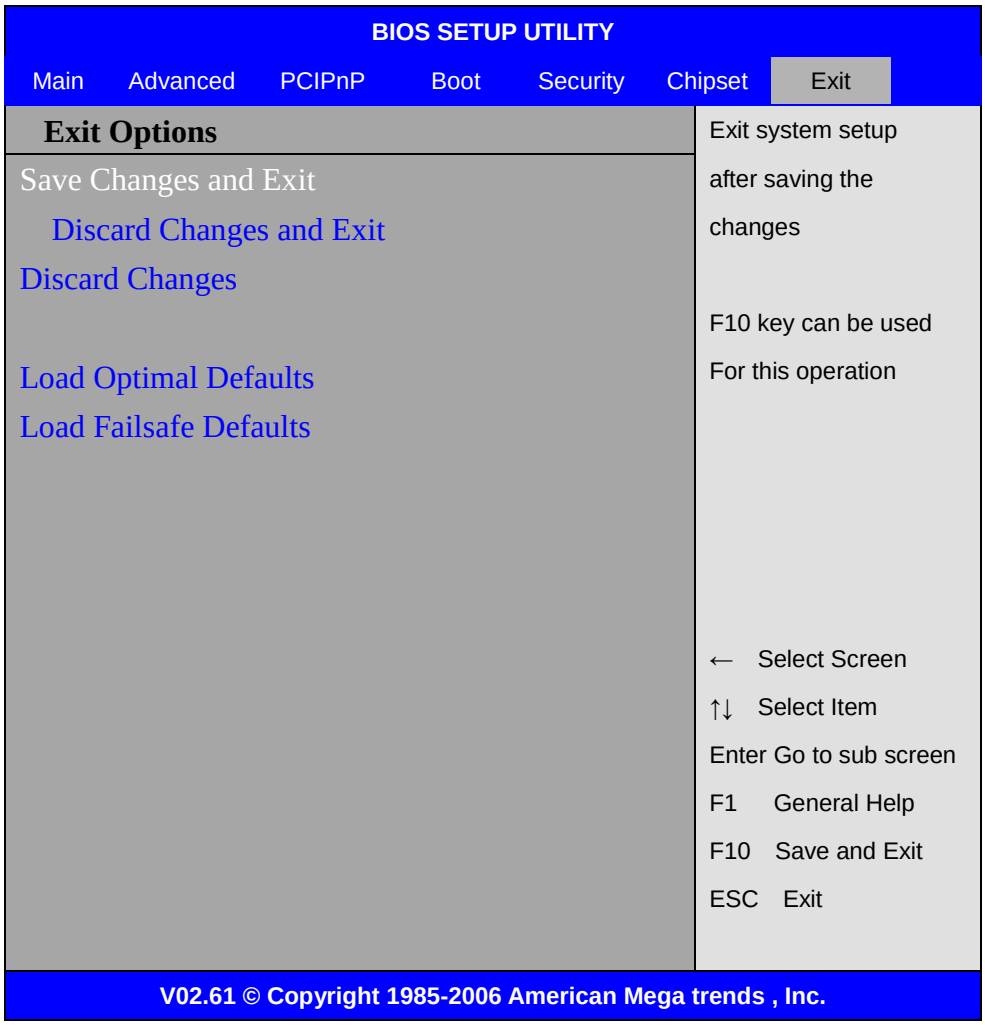

Save Changes and Exit:

Save configuration changes and exit setup?

(F10 key can be used for this operation)

[OK]

[Cancel]

Discard Changes and Exit:

Discard Changes and Exit setup?

(ESC key can be used for this operation)

[OK]

[Cancel]

Discard Changes:

Discard changes?

(F7 key can be used for this operation)

[OK]

[Cancel]

Load Optimized Defaults:

Load Optimized Defaults?

(F9 key can be used for this operation)

[OK]

[Cancel]

Load Fail-Safe Defaults:

Load Fail-Safe Defaults?

(F9 key can be used for this operation)

[OK]

[Cancel]

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 7. The software and drivers are included with the motherboard. The contents include **Intel chipset driver, VGA driver, LAN drivers, Audio driver Installation instructions are given below.**

Important Note:
After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.

4.1 Intel Chipset Driver

To install the Intel chipset driver, please follow the steps below.

Step 1. Select **Intel (R) Chipset NM10 Express** from the list

Step 2. Click **Next** to setup program.

Intel® Chipset Device Software
Intel® Chipset Device Software
intel
Welcome to the Setup Program
This setup program will install the Intel® Chipset Device Software onto this computer. It is strongly recommended that you exit all programs before continuing.
< Back
Next >
Cancel
Intel® Installation Framework

Step 3. Read the license agreement. Click **Yes** to accept all of the terms of the license agreement.

Intel® Chipset Device Software
Intel® Chipset Device Software
License Agreement
intel
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
< Back
Yes
No
Intel® Installation Framework

Step 4. Click **Next** to continue.

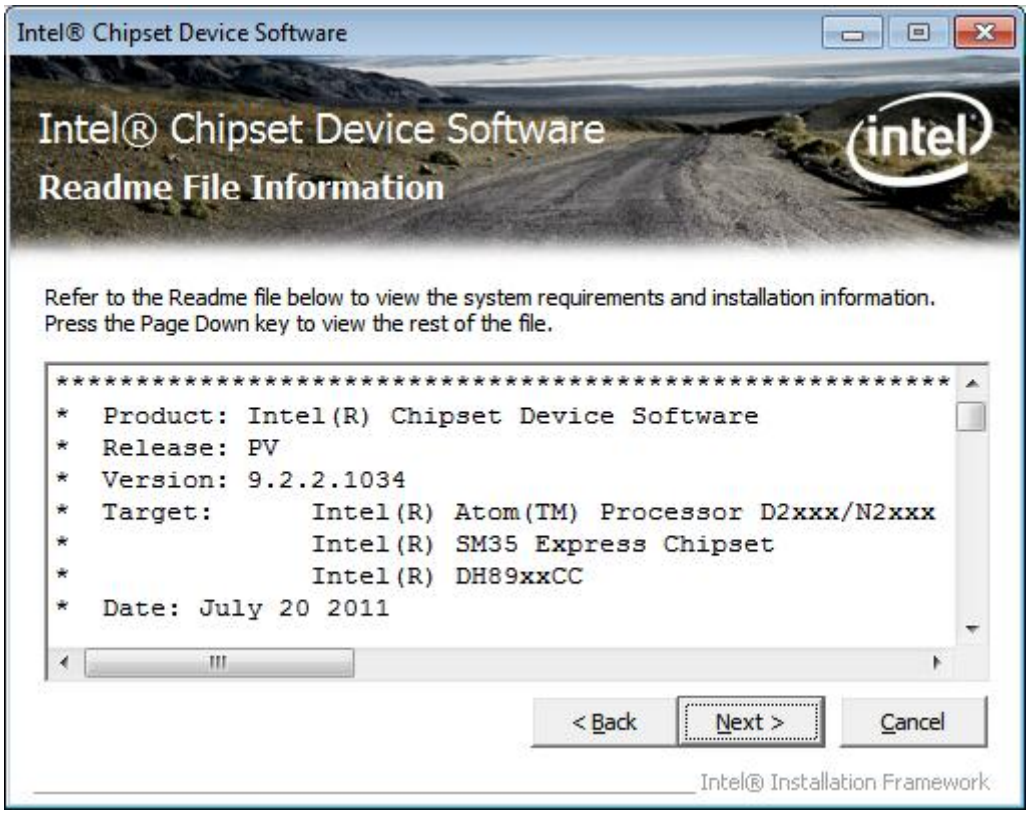
Intel® Chipset Device Software
Intel® Chipset Device Software
Readme File Information
intel
Refer to the Readme file below to view the system requirements and installation information.
Press the Page Down key to view the rest of the file.
****
* Product: Intel(R) Chipset Device Software
* Release: PV
* Version: 9.2.2.1034
* Target: Intel(R) Atom(TM) Processor D2xxx/N2xxx
* Intel(R) SM35 Express Chipset
* Intel(R) DH89xxCC
* Date: July 20 2011
< Back
Next >
Cancel
Intel® Installation Framework

Step 5. Click **Next**.

Intel® Chipset Device Software
Intel® Chipset Device Software
Setup Progress
Please wait while the following setup operations are performed:
Installing Driver: Intel(R) N10/ICH7 Family PCI Express Root Port - 27D6
Version: 9.1.1.1016
Installing Driver: Intel(R) N10/ICH7 Family SMBus Controller - 27DA
Version: 9.1.1.1016
Installing Driver: Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
Version: 9.1.1.1016
Installing Driver: Intel(R) N10/ICH7 Family PCI Express Root Port - 27D4
Version: 9.1.1.1016
Installing Driver: Intel(R) NM10 Family LPC Interface Controller - 27BC
Version: 9.1.1.1022
Click Next to continue.
Next
Intel® Installation Framework

Step 6. Select **Yes, I want to restart this computer now**. Click **Finish**, then remove any installation media from the drives.

Intel® Chipset Device Software
Intel® Chipset Device Software
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

4.2 Intel Graphics Media Accelerator driver

To install the VGA drivers, follow the steps below to proceed with the installation.

Step 1.Select **Intel(R) VGA Chipset Driver.**

Step 2. Tick **Automatically run WinSAT and enable the Windows Aero desktop theme(if supported).** Click **Next.**

Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Welcome to the Setup Program
intel
This setup program will install the following components:
- Intel® Graphics Media Accelerator Driver
- Intel® Display Audio Driver
It is strongly recommended that you exit all programs before continuing. Click Next to continue.
Automatically run WinSAT and enable the Windows Aero desktop theme (if supported).
< Back
Next >
Cancel
Intel® Installation Framework

Step 3. Read license agreement. Click **Yes.**

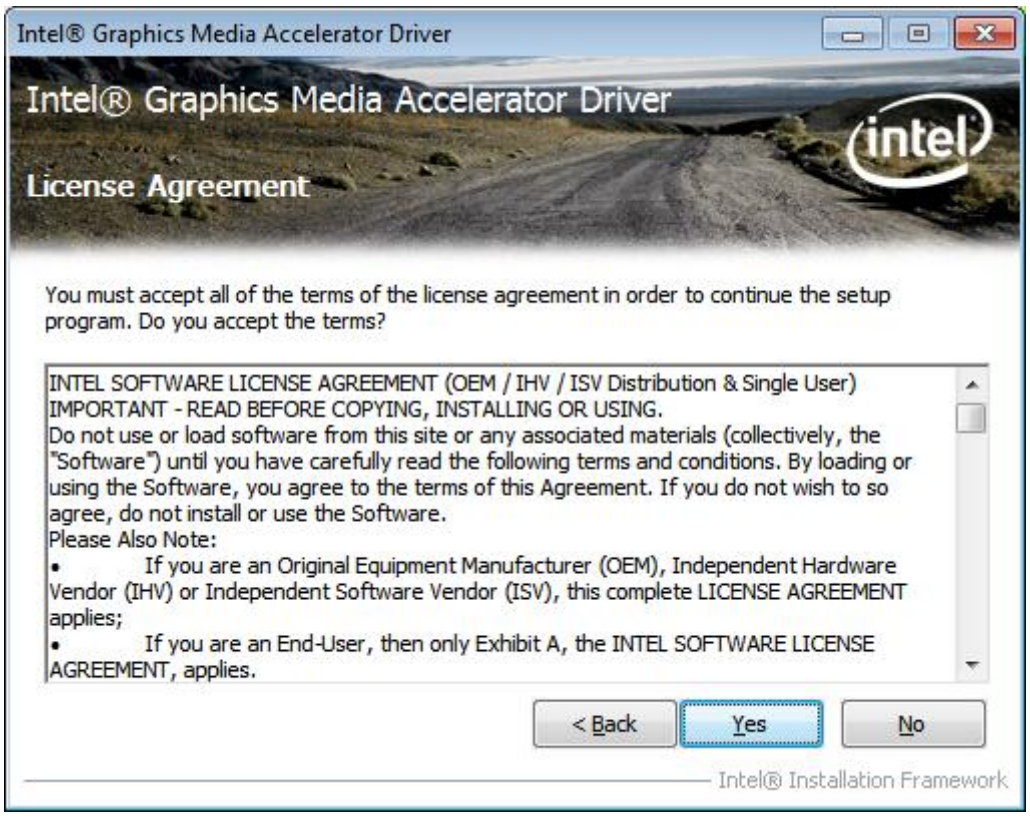
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
License Agreement
intel
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load software from this site or any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
• If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV) or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
• If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT, applies.
< Back
Yes
No
Intel® Installation Framework

Step 4. Click **Next**.

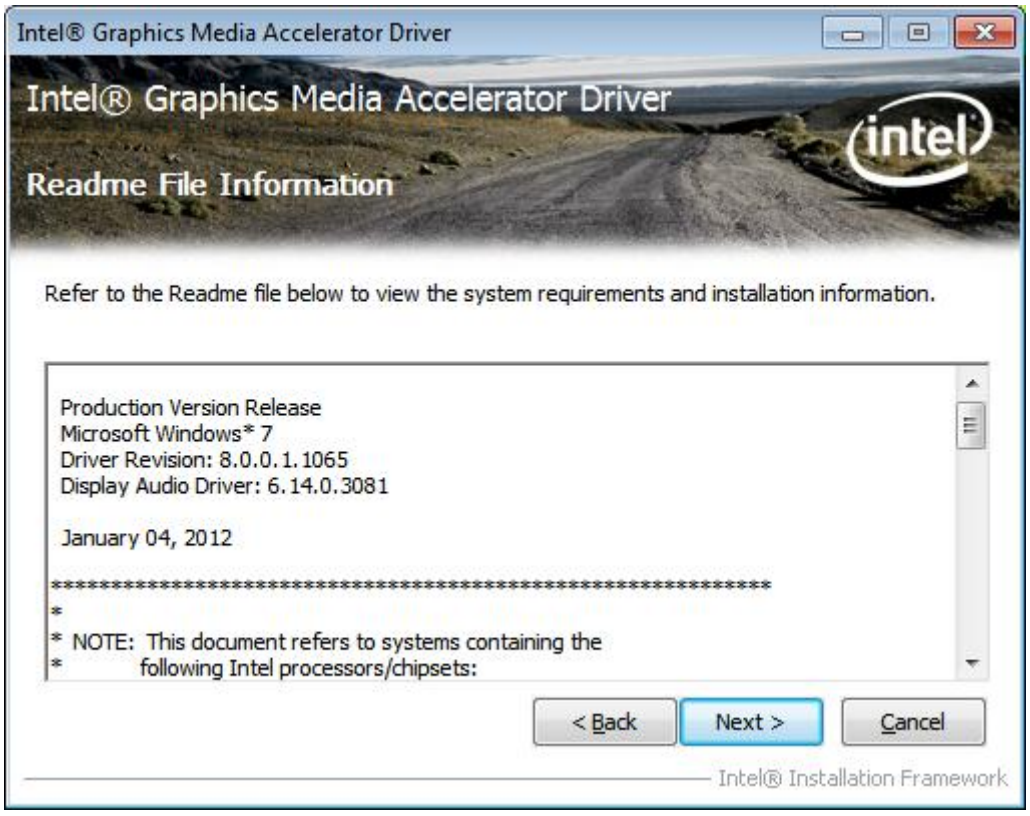

Step 5. Click **Next**.

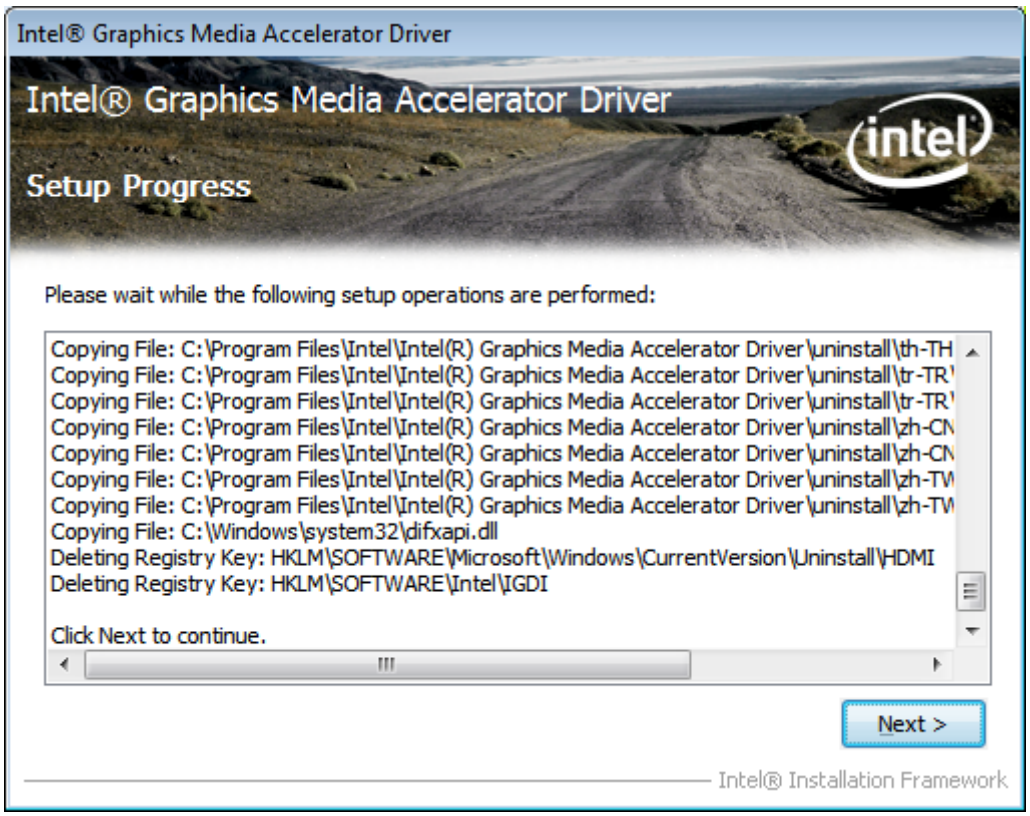
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Setup Progress
Please wait while the following setup operations are performed:
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\th-TH
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\tr-TR
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\tr-TR
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\zh-CN
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\zh-CN
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\zh-TW
Copying File: C:\Program Files\Intel\Intel(R) Graphics Media Accelerator Driver\uninstall\zh-TW
Copying File: C:\Windows\system32\difxapi.dll
Deleting Registry Key: HKLM\SOFTWARE\Microsoft\Windows\CurrentVersion\Uninstall\HDMI
Deleting Registry Key: HKLM\SOFTWARE\Intel\IGDI
Click Next to continue.
Next >
Intel® Installation Framework

Step 6. To restart the computer, select **Yes, I want to restart this computer now**. Then click **Finish**.

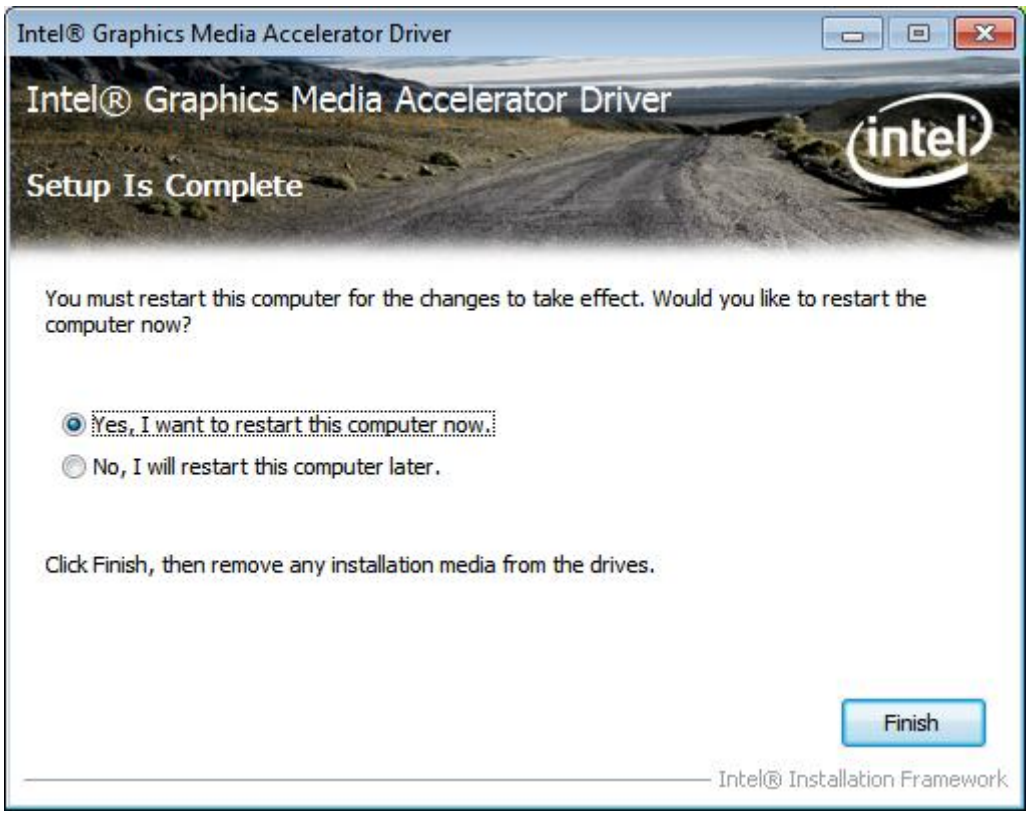
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

4.3 Intel (R) Network Adapter

To install the Intel (R) Network Adapter device driver, please follow the steps below.

Step 1. Select **Realtek RTL8111D Driver**.

Step 2. Click **Next** to continue.

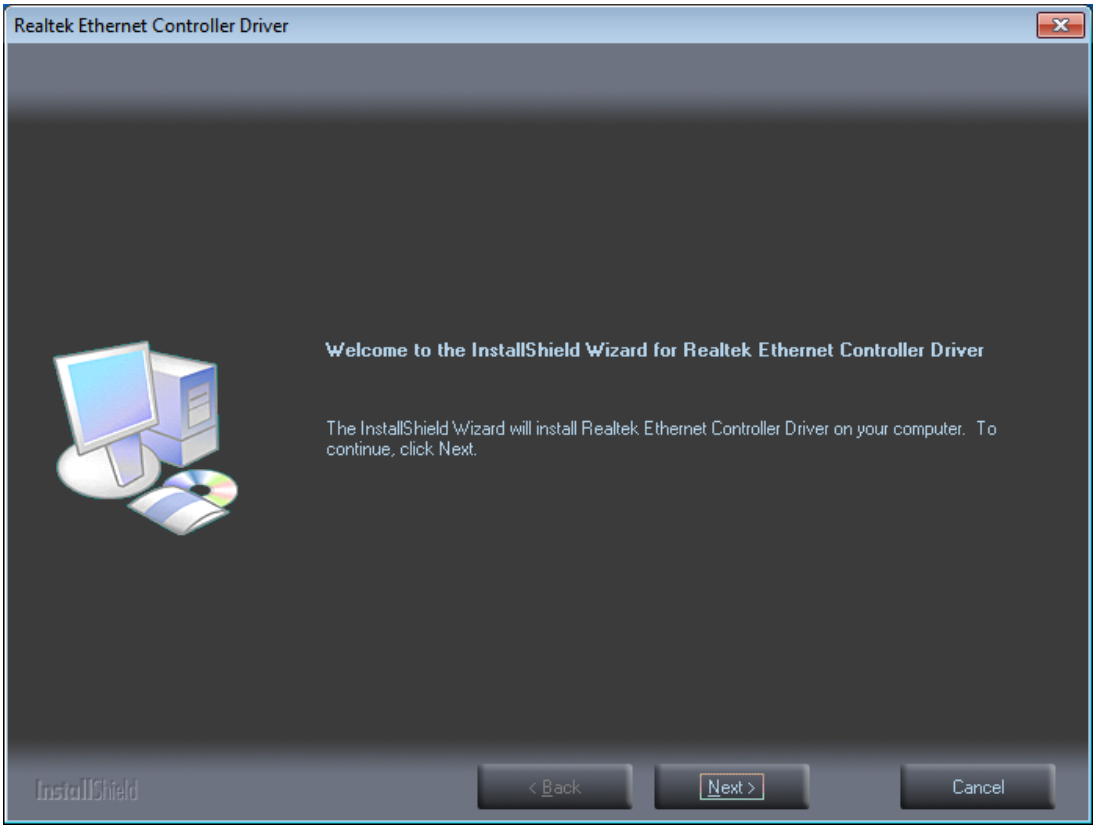
Realtek Ethernet Controller Driver
Welcome to the InstallShield Wizard for Realtek Ethernet Controller Driver
The InstallShield Wizard will install Realtek Ethernet Controller Driver on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

Step 3. Click **Install** to begin the installation.

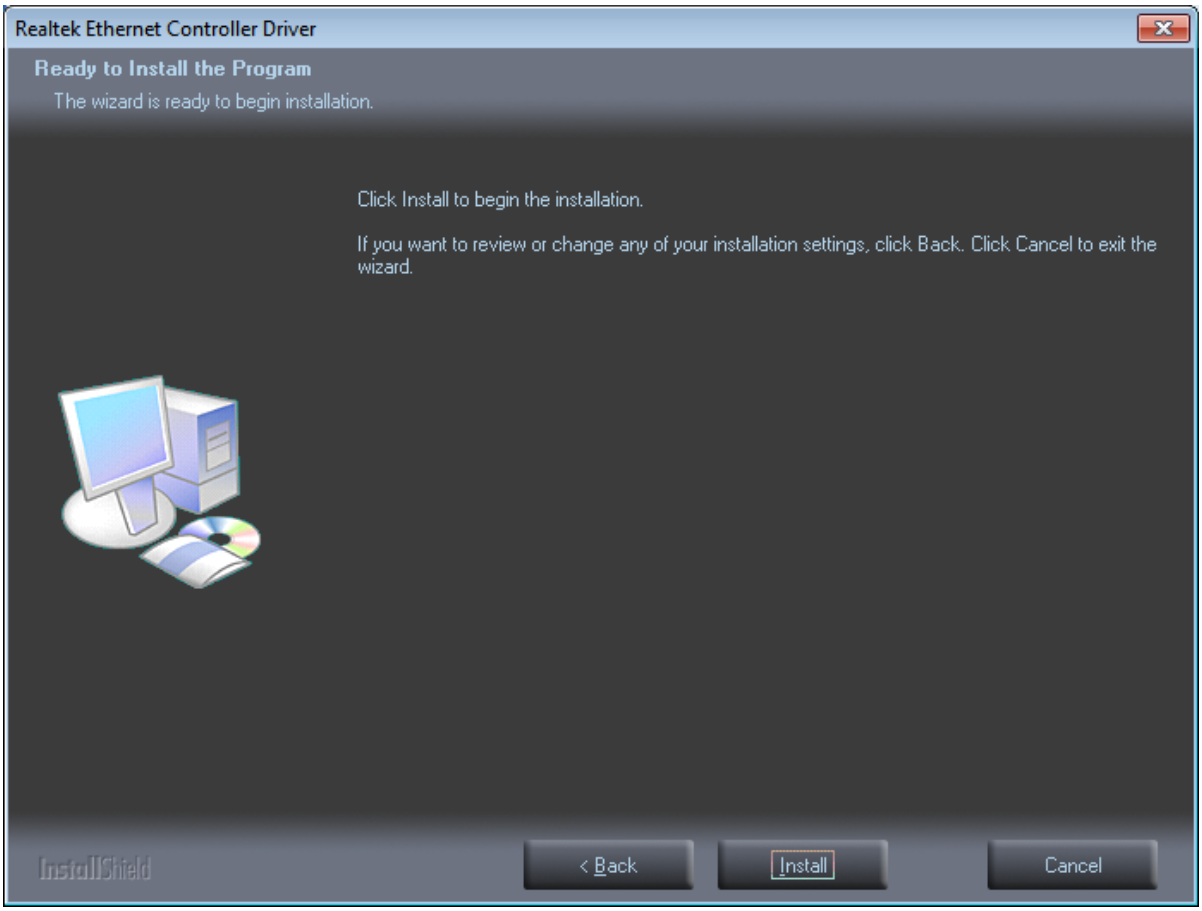
Realtek Ethernet Controller Driver
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

Step 4. Click **Finish** to exist the wizard.

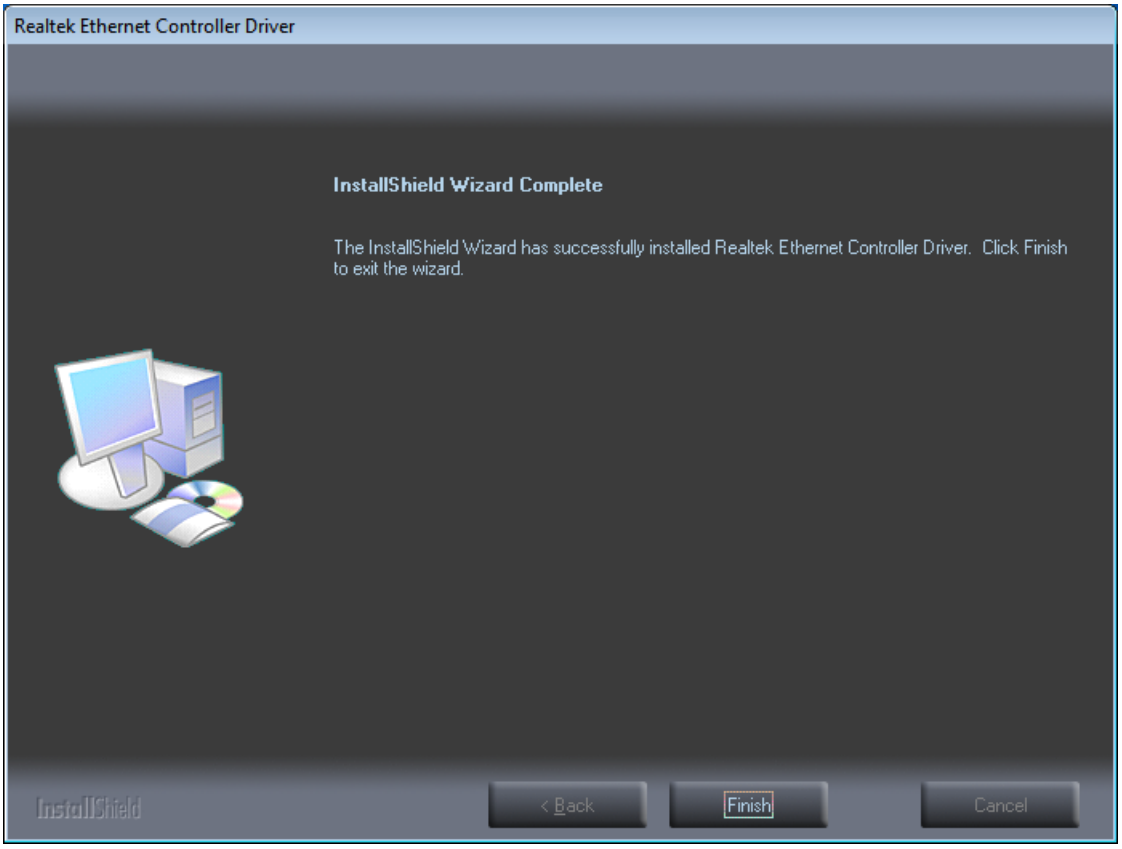
Realtek Ethernet Controller Driver
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Realtek Ethernet Controller Driver. Click Finish to exit the wizard.
InstallShield
< Back
Finish
Cancel

4.4 Realtek ALC662 HD Audio Codec Driver Installation

To install the Realtek ALC662 HD Audio Codec Driver, please follow the steps below.

Step 1. Select **Realtek AL662 Audio Codec Driver** from the list

Step 2. Click **Next** to continue.

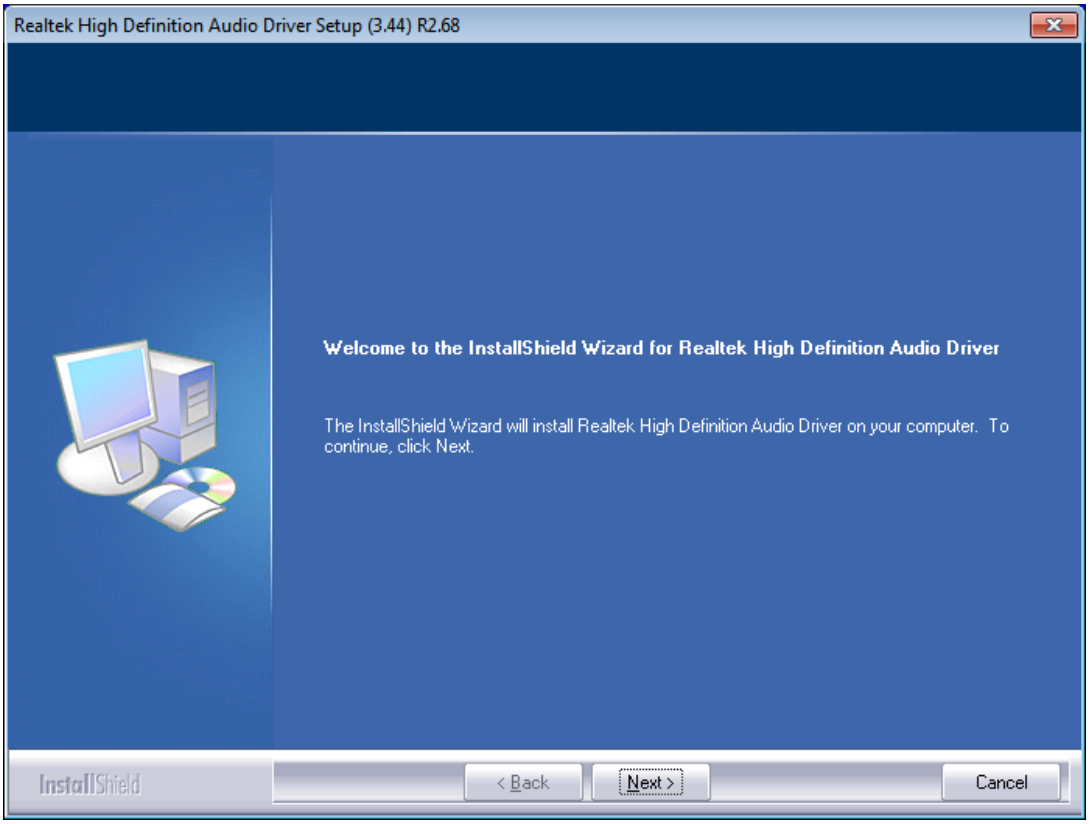
Realtek High Definition Audio Driver Setup (3.44) R2.68
Welcome to the InstallShield Wizard for Realtek High Definition Audio Driver
The InstallShield Wizard will install Realtek High Definition Audio Driver on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

Step 3. Click **Yes, I want to restart my computer now**. Click **Finish** to complete the installation.

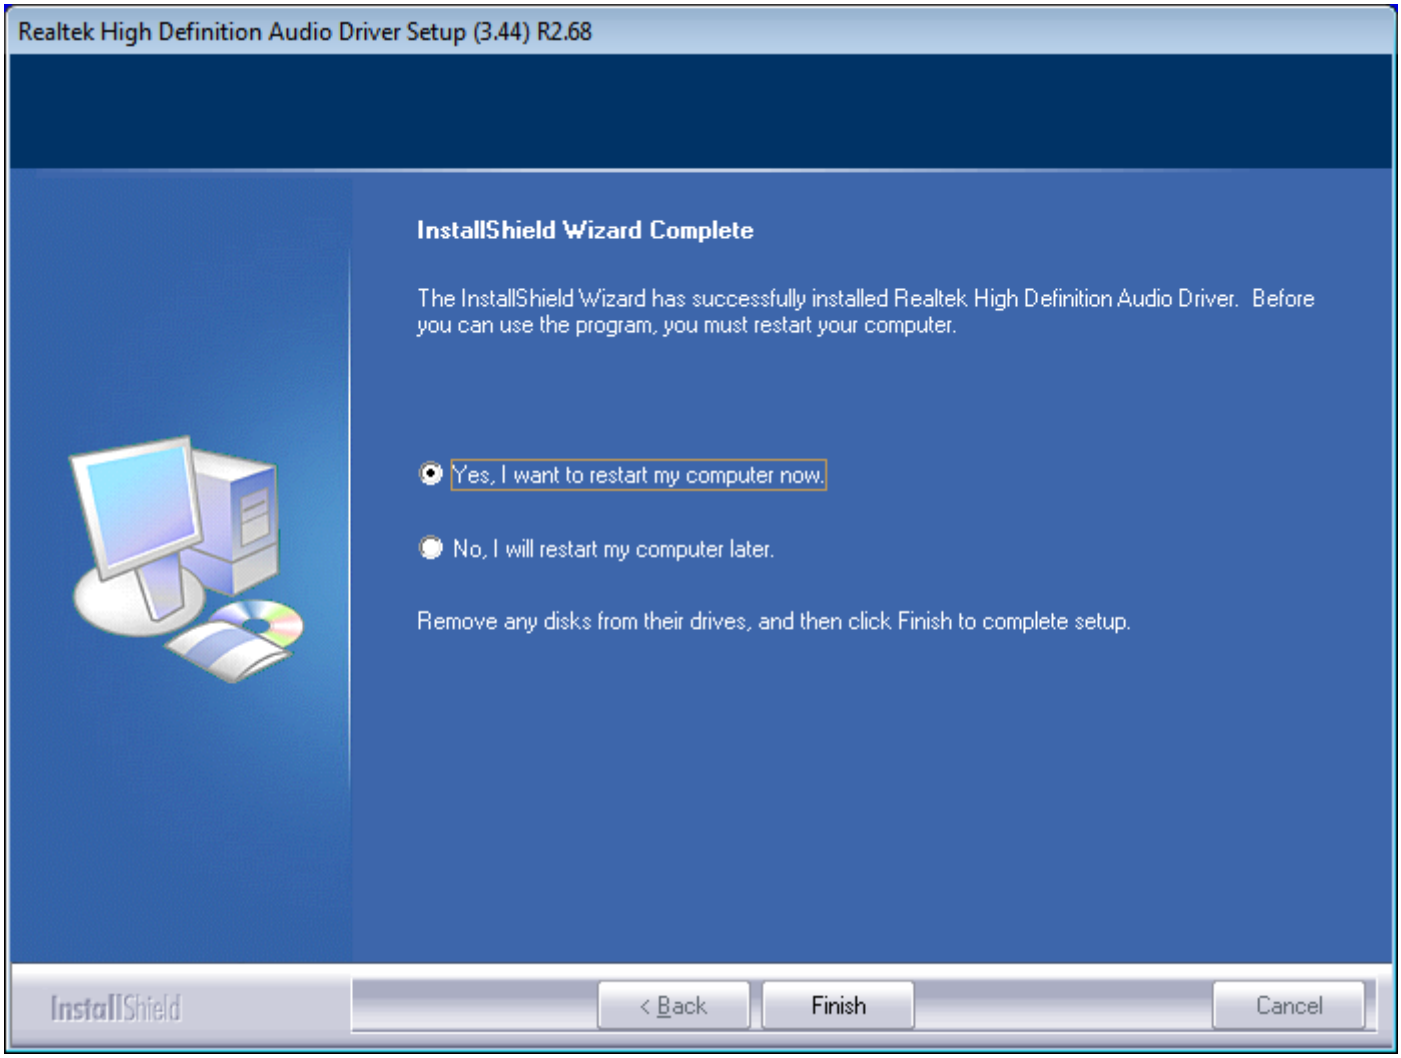
Realtek High Definition Audio Driver Setup (3.44) R2.68
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Realtek High Definition Audio Driver. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
InstallShield
< Back
Finish
Cancel

Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

5.1 Windows 2000/2003/Vista/WIN7 Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 2000/WIN7 driver software, you must have the Windows 2000/WIN 7 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.

5.1.1 Installing Software(Resistive Touch)

If you have an older version of the PenMount Windows 2000/WIN7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 2000/WIN7 driver.

Step 1. Insert the product CD, the screen below would appear. Click touch panel driver.

Step 2. Select **Resistive Touch.**

Step 3. Click **Next** to continue.

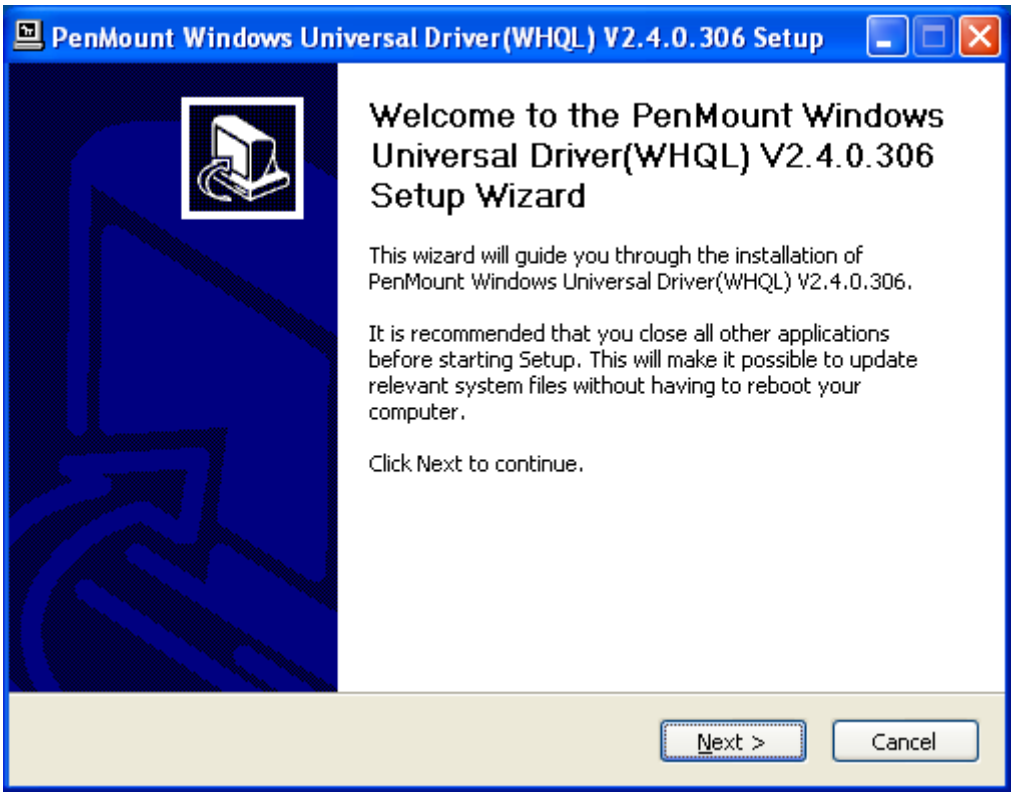
PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup
Welcome to the PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup Wizard
This wizard will guide you through the installation of PenMount Windows Universal Driver(WHQL) V2.4.0.306.
It is recommended that you close all other applications before starting Setup. This will make it possible to update relevant system files without having to reboot your computer.
Click Next to continue.
Next >
Cancel

Step 4. Read the license agreement. Click **I Agree** to agree the license agreement.

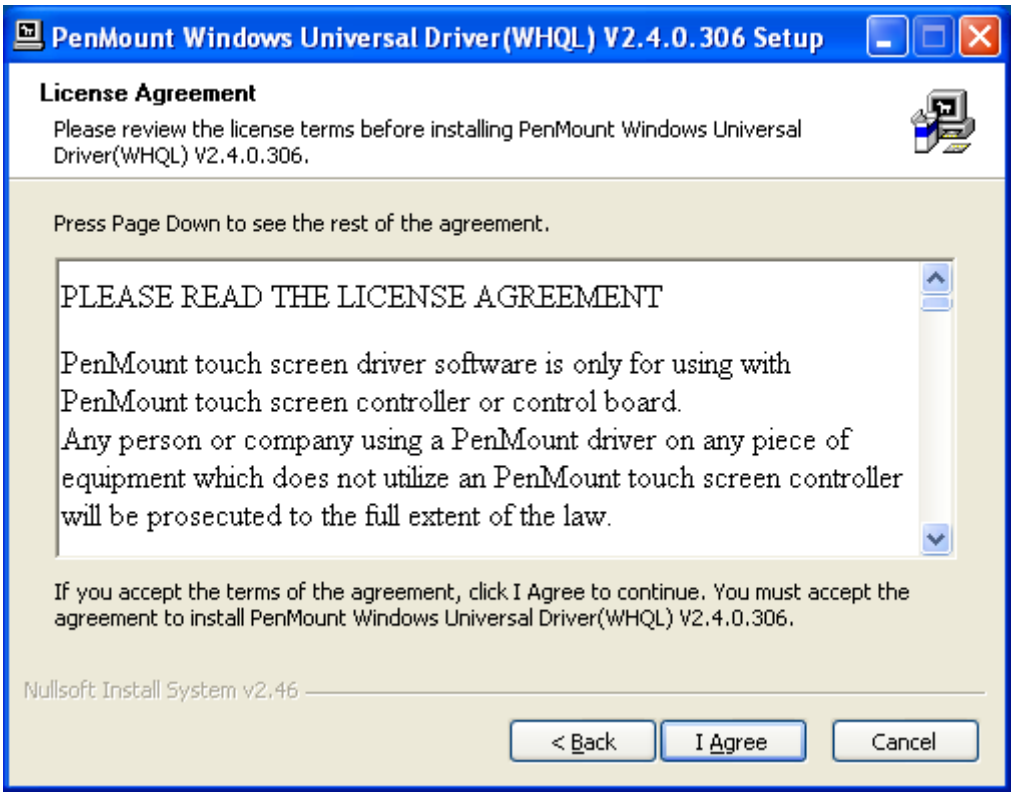
PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup
License Agreement
Please review the license terms before installing PenMount Windows Universal Driver(WHQL) V2.4.0.306.
Press Page Down to see the rest of the agreement.
PLEASE READ THE LICENSE AGREEMENT
PenMount touch screen driver software is only for using with PenMount touch screen controller or control board.
Any person or company using a PenMount driver on any piece of equipment which does not utilize an PenMount touch screen controller will be prosecuted to the full extent of the law.
If you accept the terms of the agreement, click I Agree to continue. You must accept the agreement to install PenMount Windows Universal Driver(WHQL) V2.4.0.306.
Nullsoft Install System v2.46
< Back
I Agree
Cancel

Step 5. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

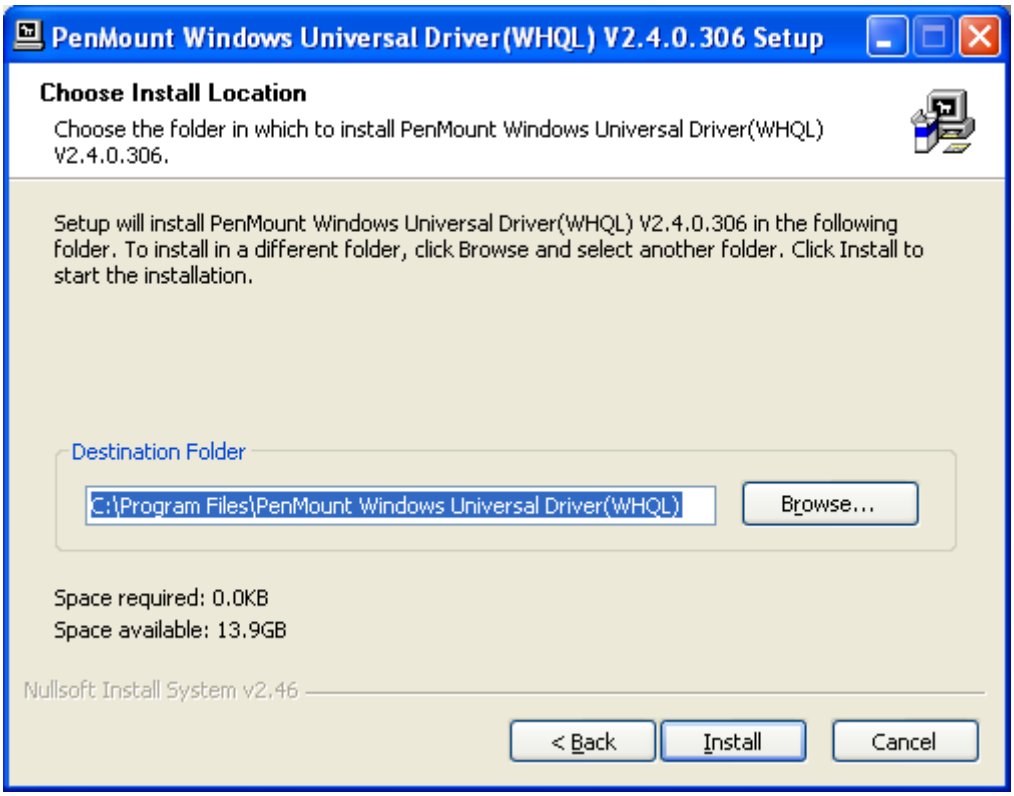
PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup
Choose Install Location
Choose the folder in which to install PenMount Windows Universal Driver(WHQL) V2.4.0.306.
Setup will install PenMount Windows Universal Driver(WHQL) V2.4.0.306 in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation.
Destination Folder
C:\Program Files\PenMount Windows Universal Driver(WHQL)
Browse...
Space required: 0.0KB
Space available: 13.9GB
Nullsoft Install System v2.46
< Back
Install
Cancel

Step 6. Wait for installation. Then click **Next** to continue.

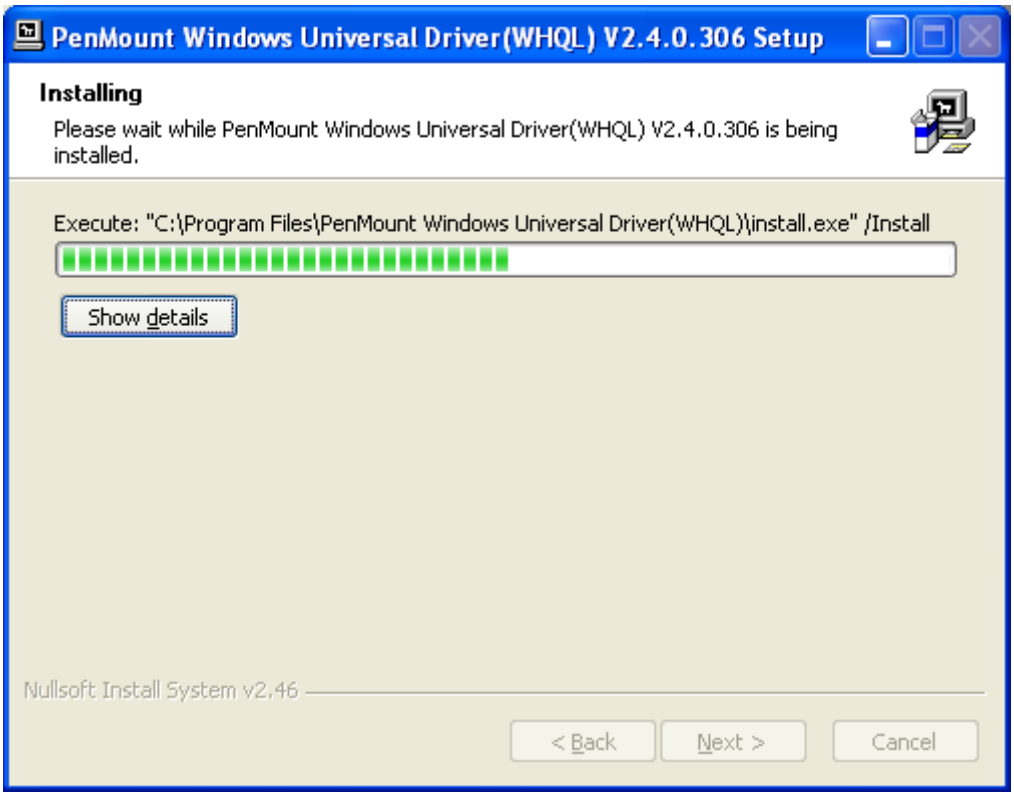
PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup
Installing
Please wait while PenMount Windows Universal Driver(WHQL) V2.4.0.306 is being installed.
Execute: "C:\Program Files\PenMount Windows Universal Driver(WHQL)\install.exe" /Install
Show details
Nullsoft Install System v2.46
< Back
Next >
Cancel

Step 7. Click **Continue Anyway**.

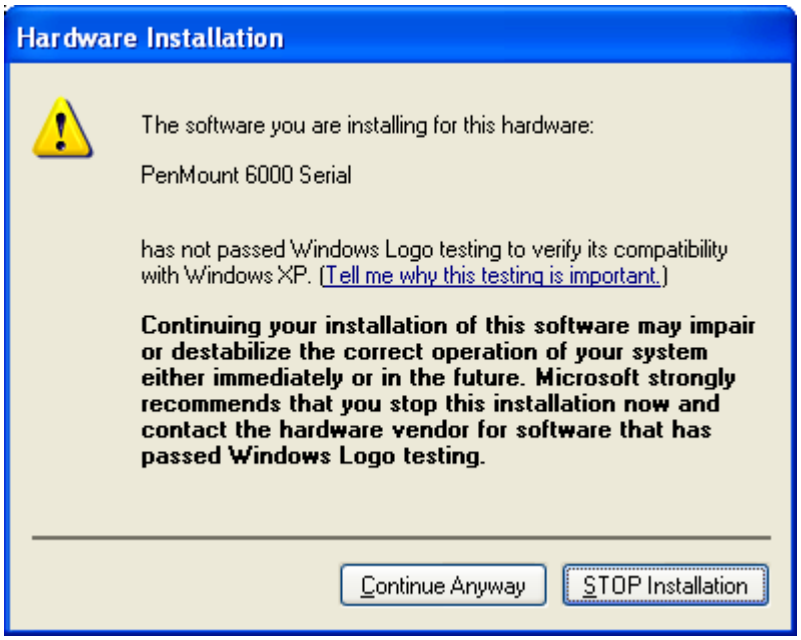
Hardware Installation
The software you are installing for this hardware:
PenMount 6000 Serial
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Step 8. Click **Finish** to complete installation.

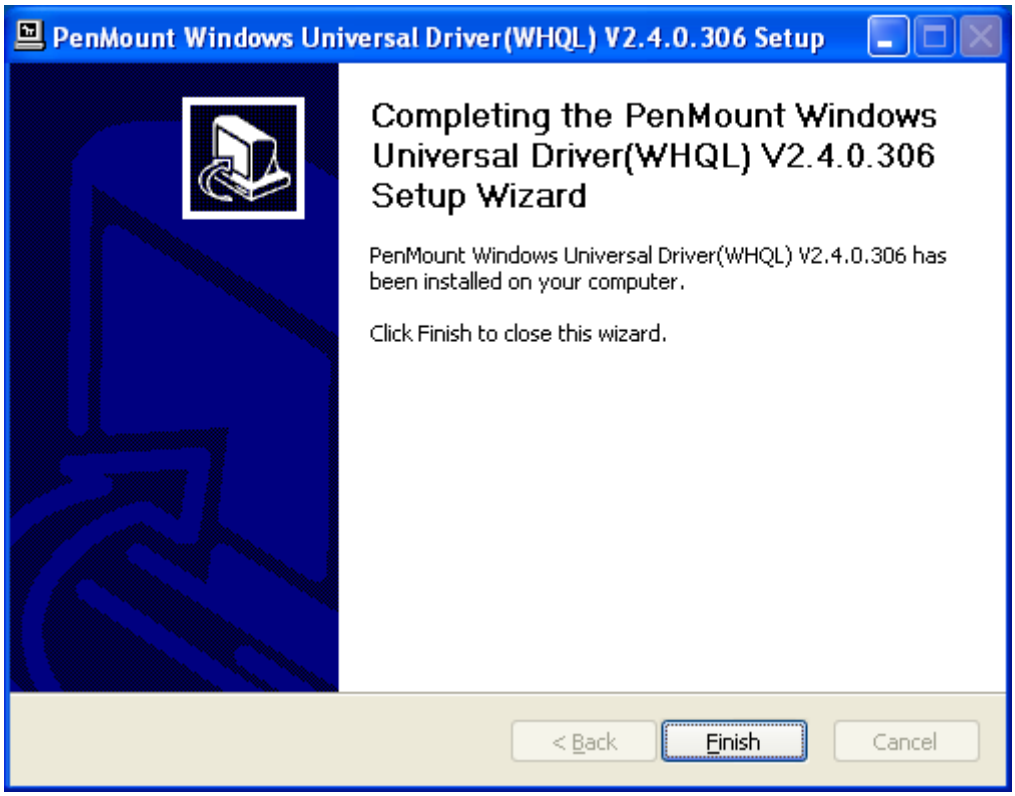
PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup
Completing the PenMount Windows Universal Driver(WHQL) V2.4.0.306 Setup Wizard
PenMount Windows Universal Driver(WHQL) V2.4.0.306 has been installed on your computer.
Click Finish to close this wizard.
< Back
Finish
Cancel

5.1.2 Installing Software (Projected Capacitive)

Step 1. Insert the product CD, the screen below would appear. Click touch panel driver.

Step 2. Select **Projected Capacitive.**

Step 3. Click **Next** to continue.

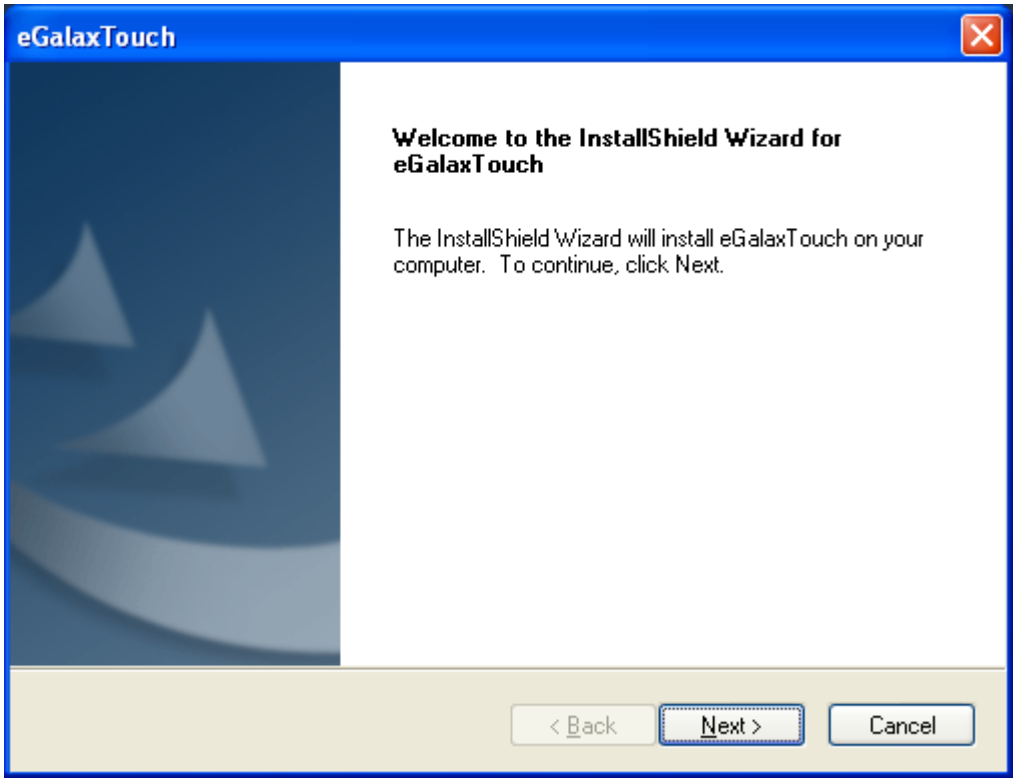
eGalaxTouch
Welcome to the InstallShield Wizard for eGalaxTouch
The InstallShield Wizard will install eGalaxTouch on your computer. To continue, click Next.
< Back
Next >
Cancel

Step 4. Select **I accept the terms of the license agreement**. Click **Next.**

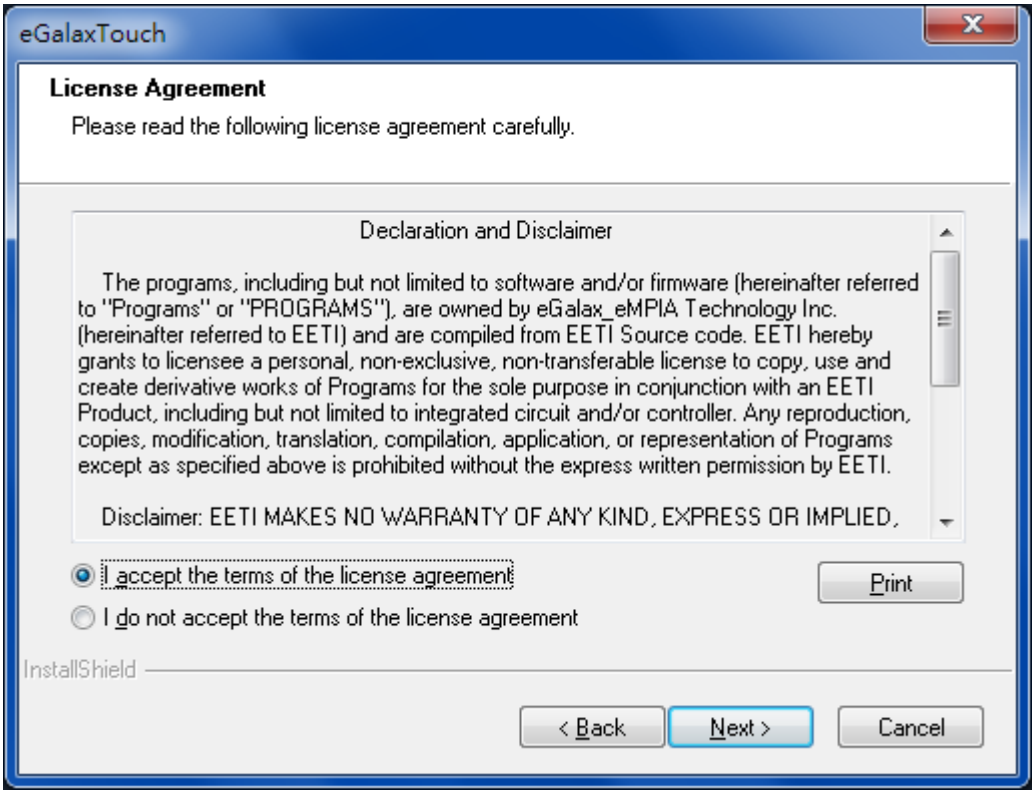
eGalaxTouch
License Agreement
Please read the following license agreement carefully.
Declaration and Disclaimer
The programs, including but not limited to software and/or firmware (hereinafter referred to "Programs" or "PROGRAMS"), are owned by eGalax_eMPIA Technology Inc. (hereinafter referred to EETI) and are compiled from EETI Source code. EETI hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use and create derivative works of Programs for the sole purpose in conjunction with an EETI Product, including but not limited to integrated circuit and/or controller. Any reproduction, copies, modification, translation, compilation, application, or representation of Programs except as specified above is prohibited without the express written permission by EETI.
Disclaimer: EETI MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED,
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Step 5. Tick **Install RS232 interface driver**. Click **Next**.

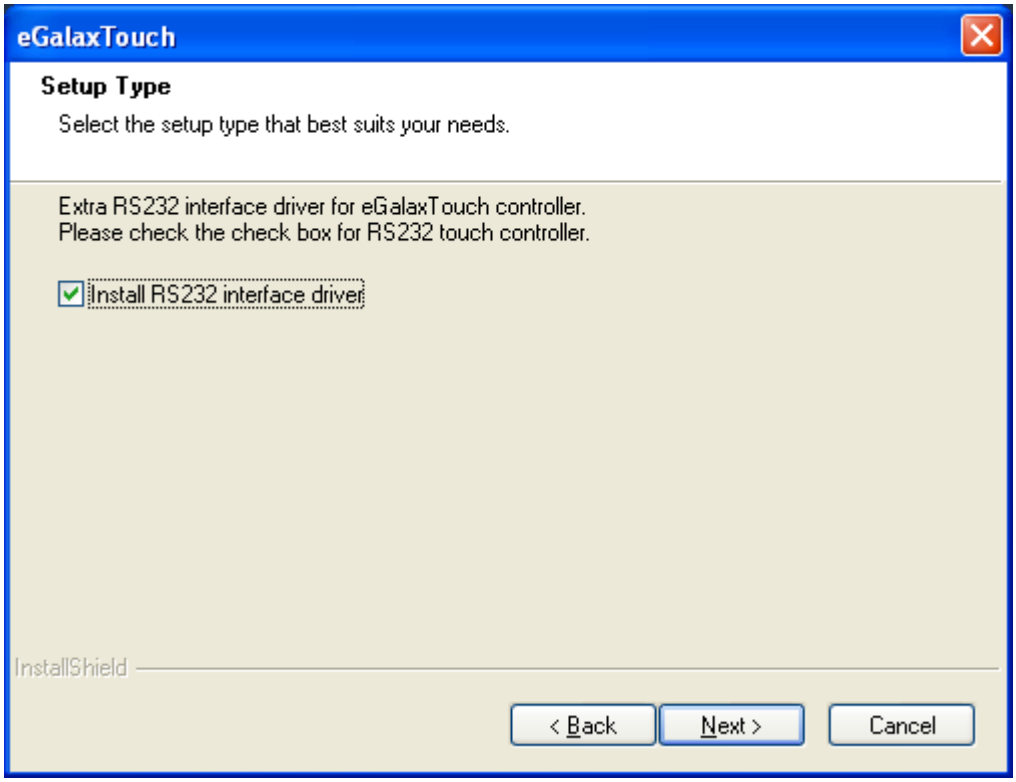
eGalaxTouch
Setup Type
Select the setup type that best suits your needs.
Extra RS232 interface driver for eGalaxTouch controller.
Please check the check box for RS232 touch controller.
Install RS232 interface driver
InstallShield
< Back
Next >
Cancel

Step 6. Select **None**. Click **Next**.

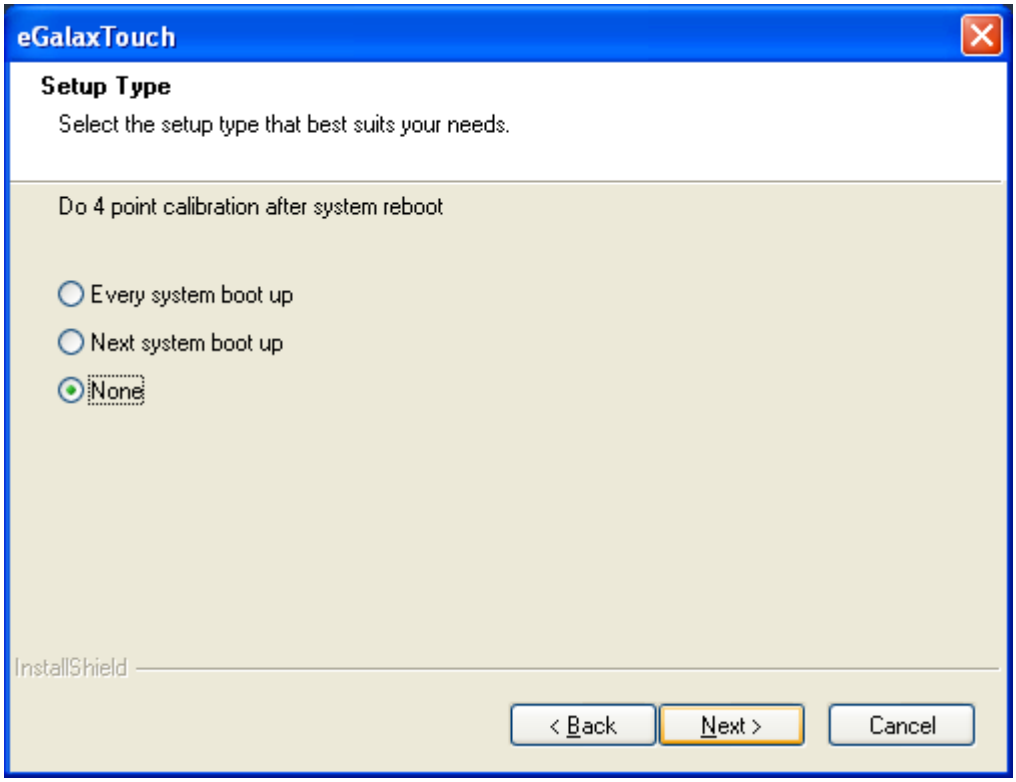

Step 7. Click **OK.**

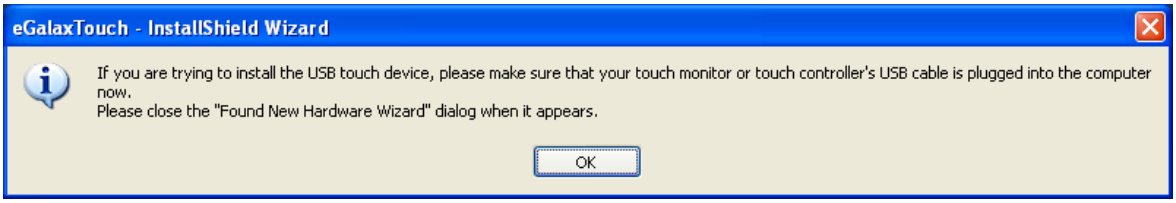
eGalaxTouch - InstallShield Wizard
If you are trying to install the USB touch device, please make sure that your touch monitor or touch controller's USB cable is plugged into the computer now.
Please close the "Found New Hardware Wizard" dialog when it appears.
OK

Step 8. Tick **Support Muti-Monitor System**. Click **Next.**

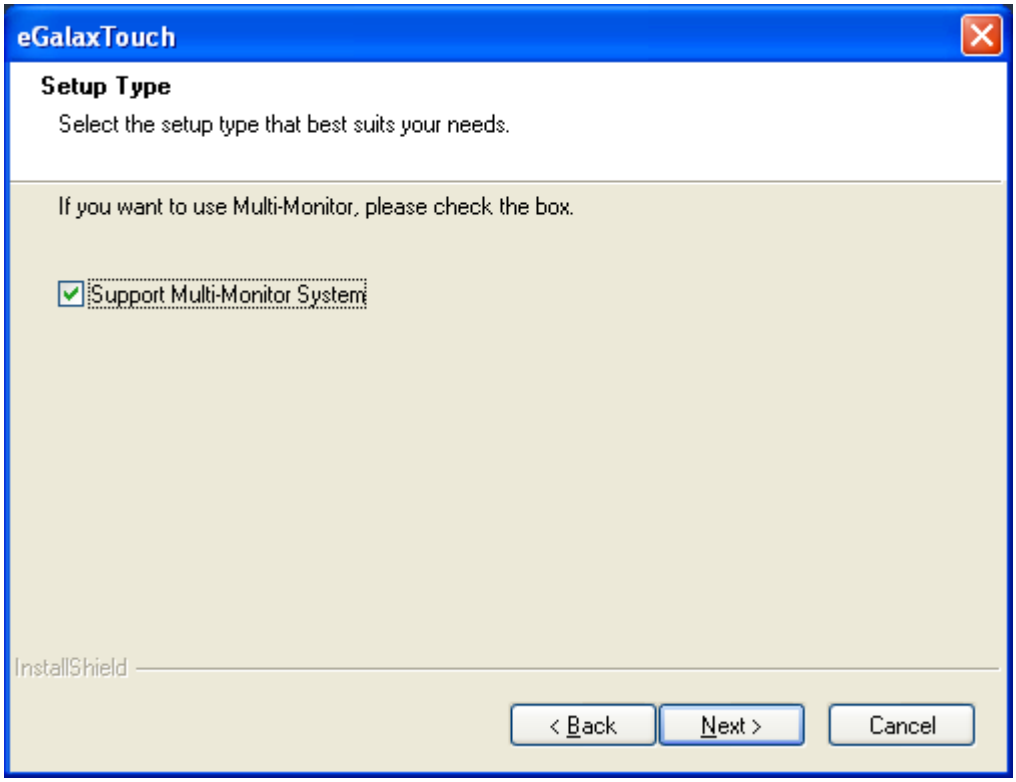

Step 9. Go to **C:\Program Files\eGalaxTouch**. Click **Next**.

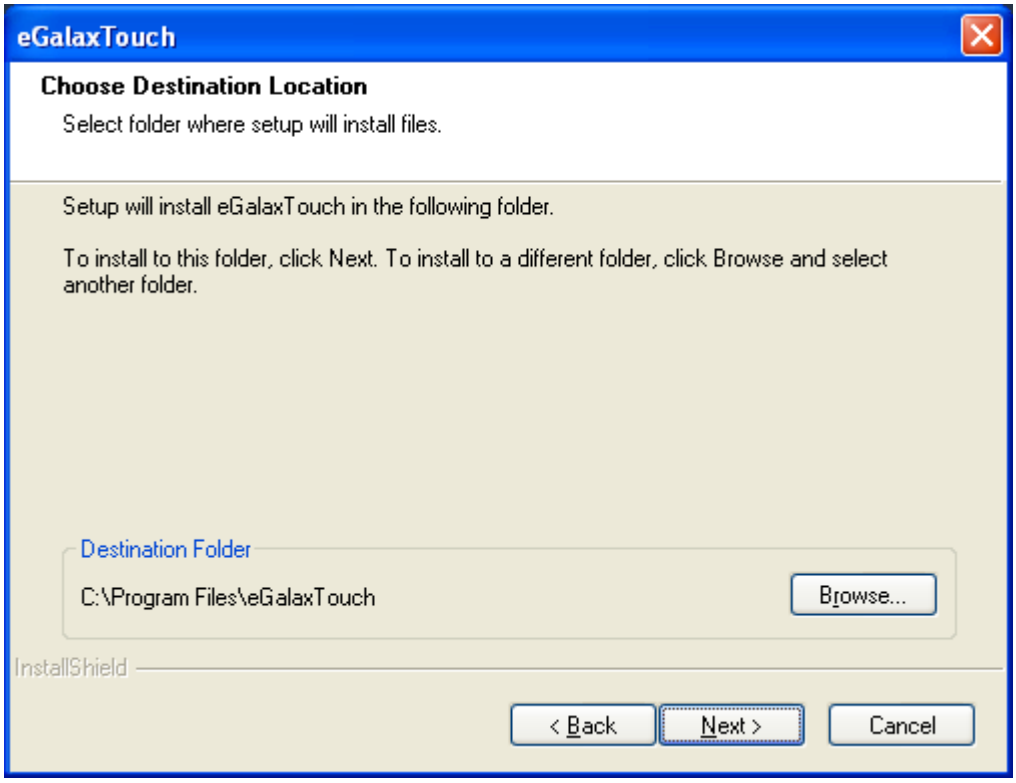
eGalaxTouch
Choose Destination Location
Select folder where setup will install files.
Setup will install eGalaxTouch in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\eGalaxTouch
Browse...
InstallShield
< Back
Next >
Cancel

Step 10. Click **Next.**

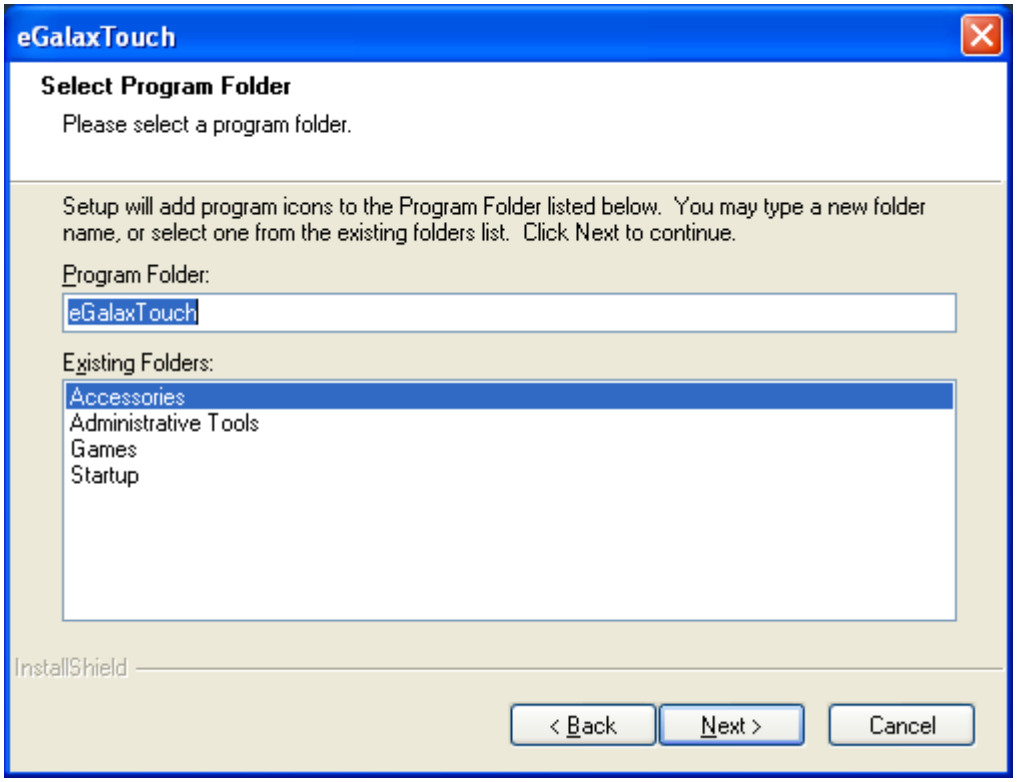

Step 11. Tick **Create a eGalaxTouch Utility shortcut on desktop**. Click **Next**.

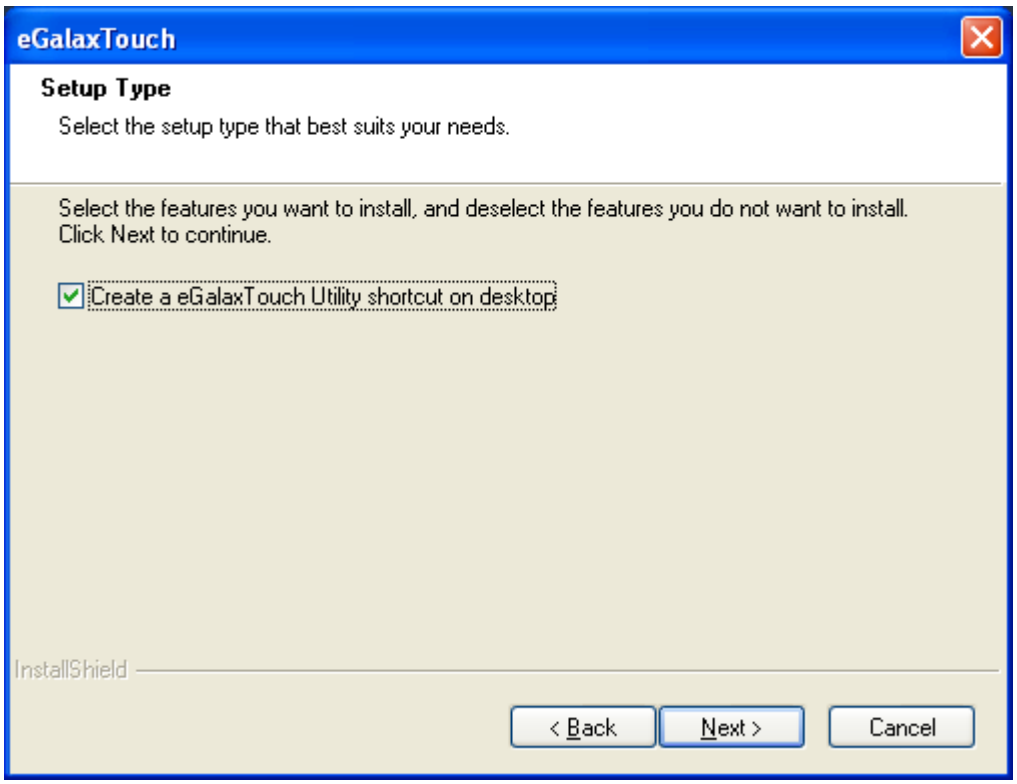
eGalaxTouch
Setup Type
Select the setup type that best suits your needs.
Select the features you want to install, and deselect the features you do not want to install. Click Next to continue.
Create a eGalaxTouch Utility shortcut on desktop
InstallShield
< Back
Next >
Cancel

Step 12. Wait for installation.

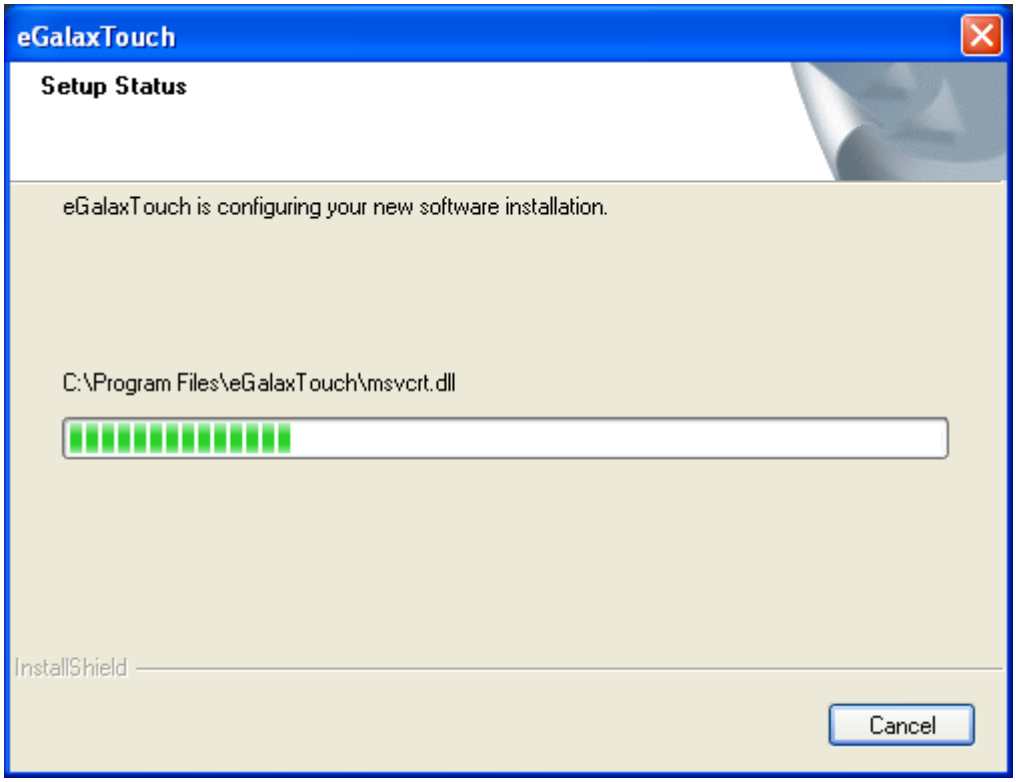

Step 13. Click **Yes** to do 4 point calibration.

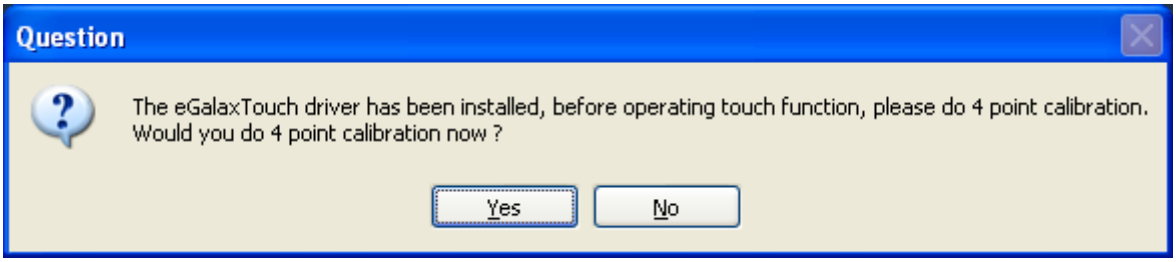
Question
The eGalaxTouch driver has been installed, before operating touch function, please do 4 point calibration.
Would you do 4 point calibration now ?
Yes
No

5.2.1 Software Functions(Resistive Touch)

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.

1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel(Resistive Touch)

The functions of the PenMount Control Panel are **Device, Multiple Monitors** ,**Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

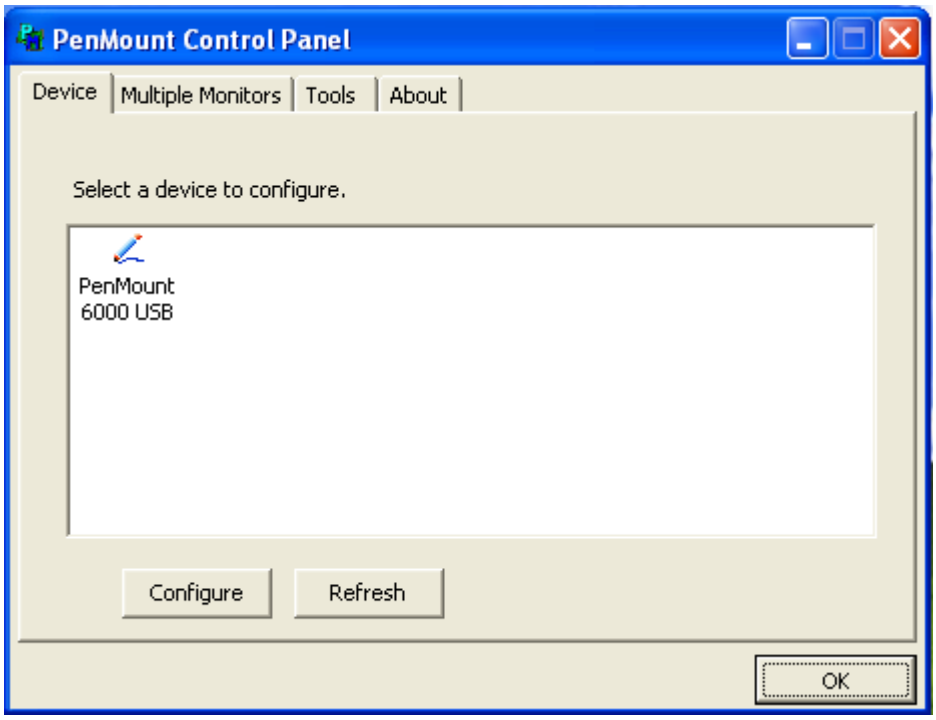

Calibrate

This function offers two ways to calibrate your touch screen. ‘Standard Calibration’ adjusts most touch screens. ‘Advanced Calibration’ adjusts aging touch screens.

Standard Calibration	**Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press ‘ESC’.**
Advanced Calibration	**Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC’.**

Command Calibration	**Command call calibration function. Use command mode call calibration function, this can uses Standard, 4, 9, 16 or 25 points to calibrate** E.g. Please run ms-dos prompt or command prompt c:\Program Files\PenMount Universa Driver\Dmcctrl.exe -calibration 0 (Standard Calibration) Dmcctrl.exe - calibration ($) 0= Standard Calibration 4=Advanced Calibration 4 9=Advanced Calibration 9 16=Advanced Calibration 16 25=Advanced Calibration 25

Step 1. Please select a device then click “Configure”. You can also double click the device too.

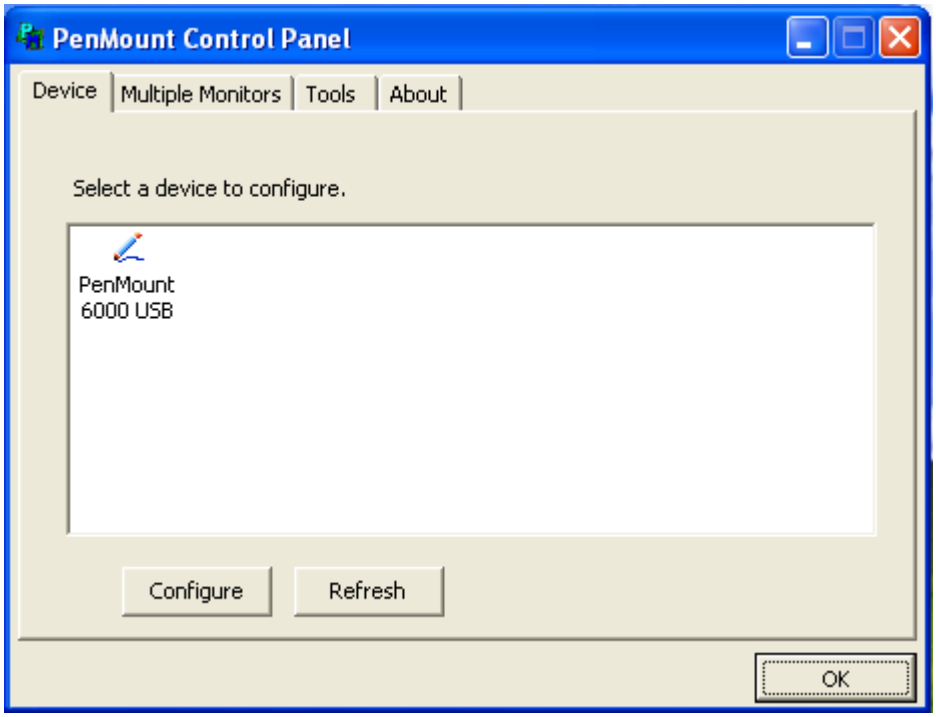

Step 2. Click “Standard Calibration” to start calibration procedure

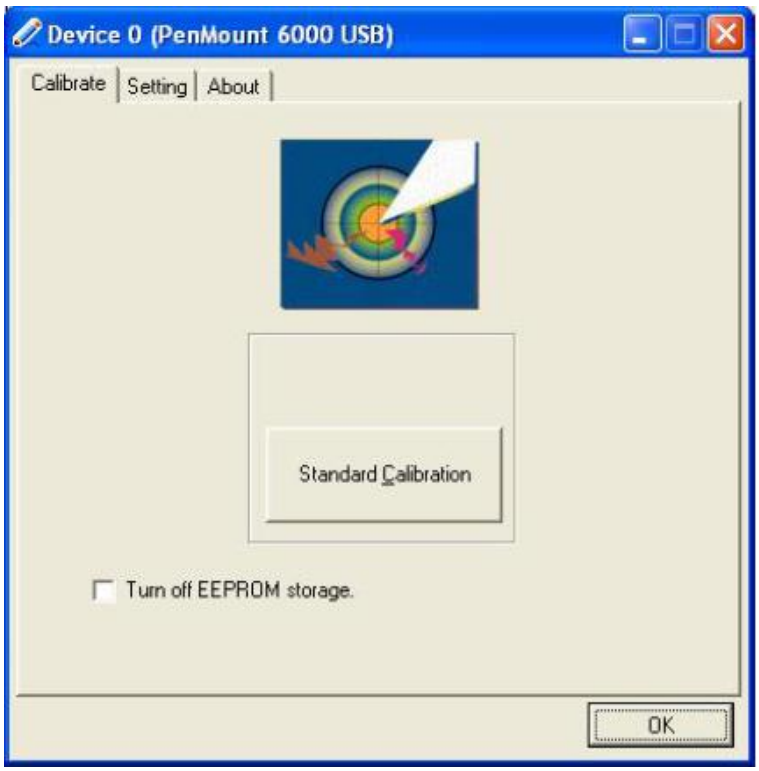

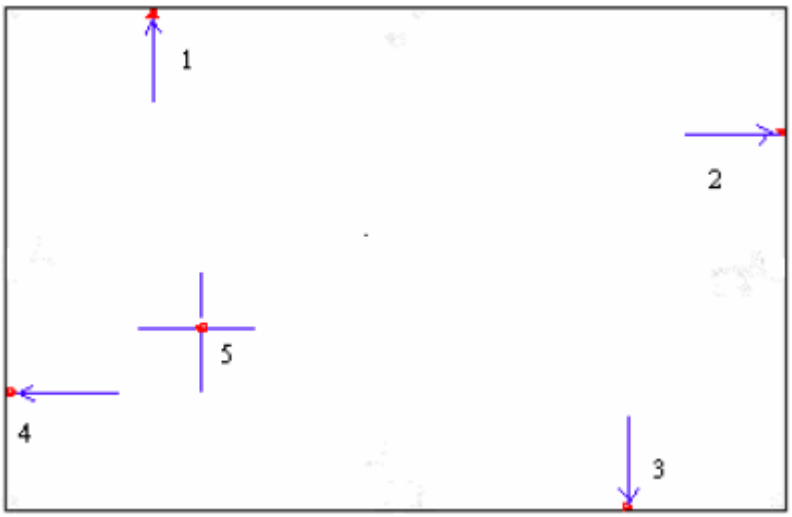

NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Come back to “PenMount Control Panel” and select **Tools** then click **Advanced Calibration**.

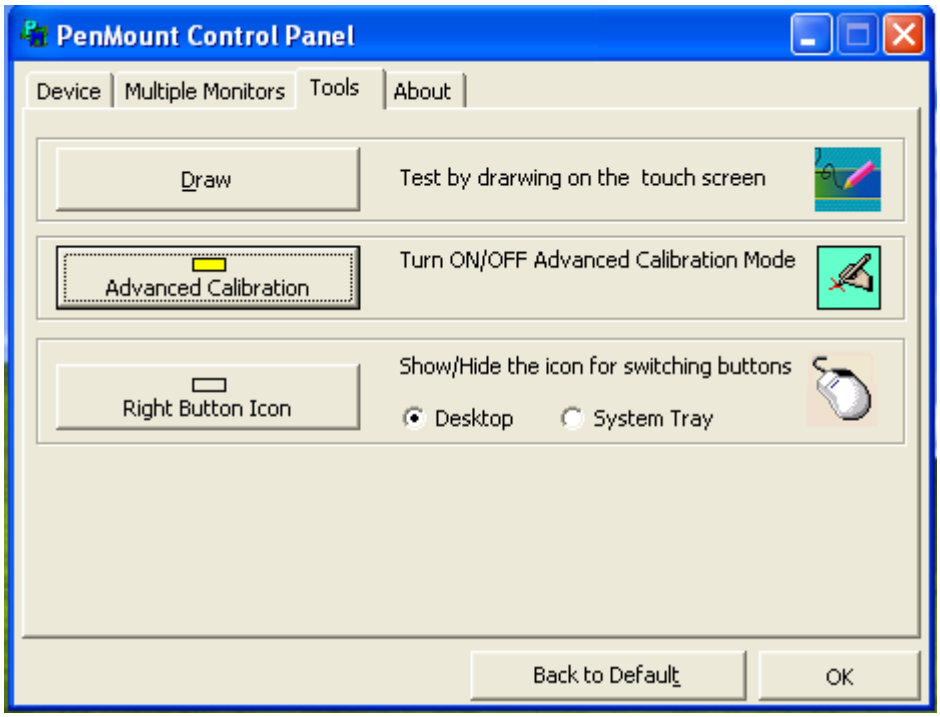

Step 4. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

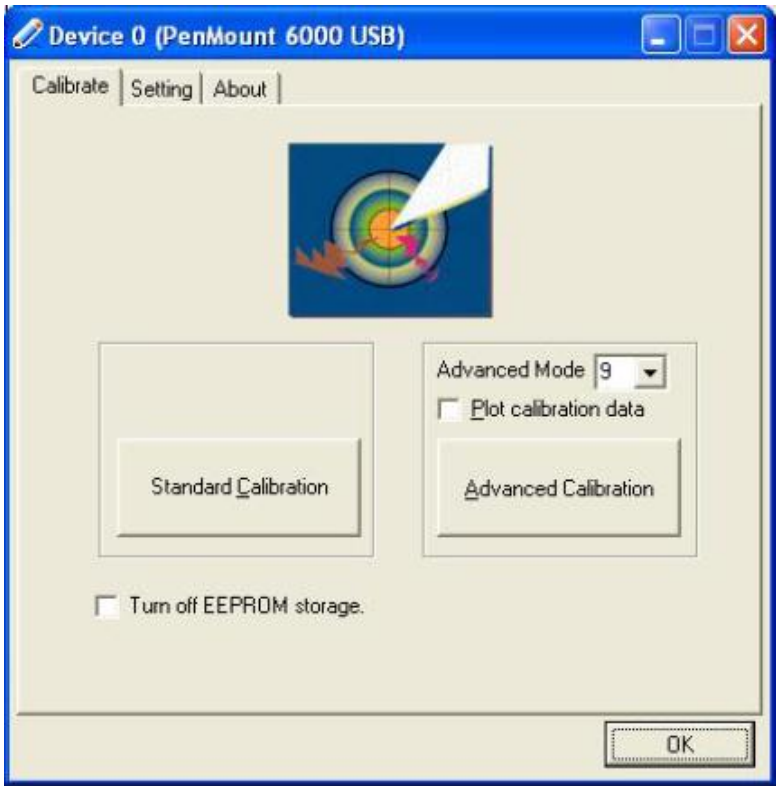

NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.

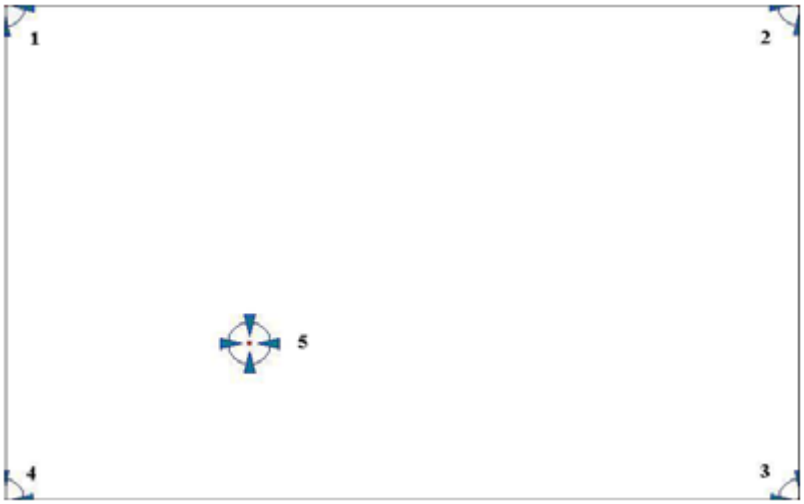

Plot Calibration Data	**Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.**
Turn off EEPROM storage	**The function disable for calibration data to write in Controller. The default setting is Enable**

Setting

Touch Mode	**This mode enables and disables the mouse's ability to drag on-screen icons—useful for configuring POS terminals.** **Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.** **Click on Touch – Select this mode and the mouse only provides a click function, and dragging is disabled**
Beep Sound	**Enable Beep Sound – turns beep function on and off** **Beep on Pen Down – beep occurs when pen comes down** **Beep on Pen Up – beep occurs when pen is lifted up** **Beep on both – beep occurs when comes down and lifted up** **Beep Frequency – modifies sound frequency** **Beep Duration – modifies sound duration**
Cursor Stabilizer	**Enable the function support to prevent cursor shake.**
Use press and hold as right click	**You can set the time out and area for you need**

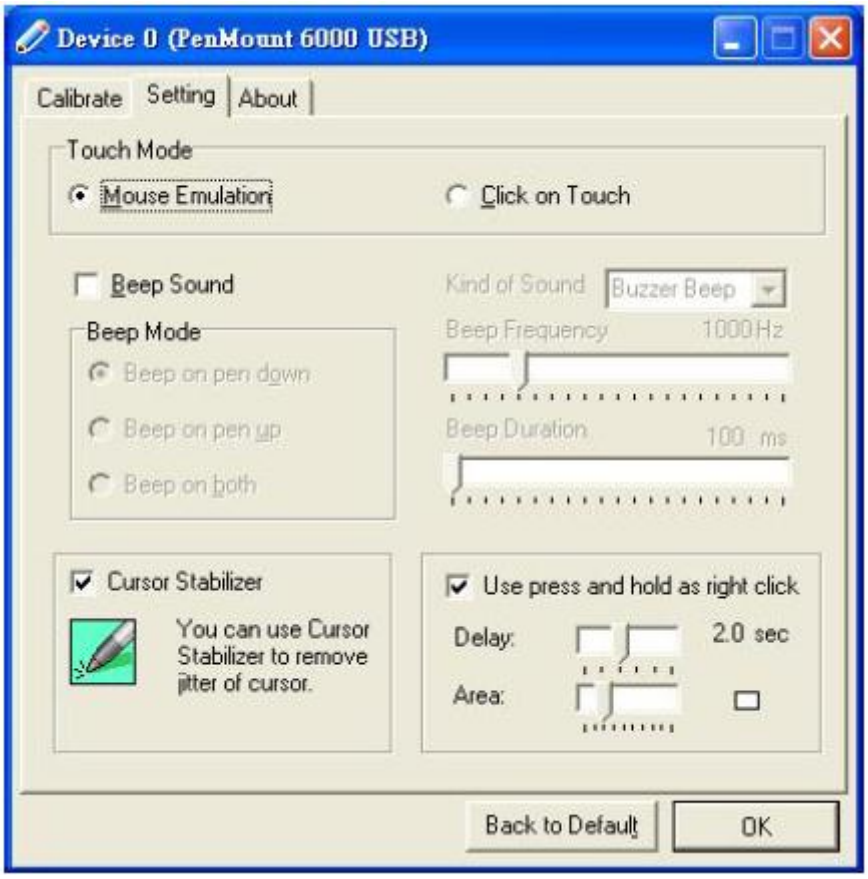

About

This panel displays information about the PenMount controller and driver version.

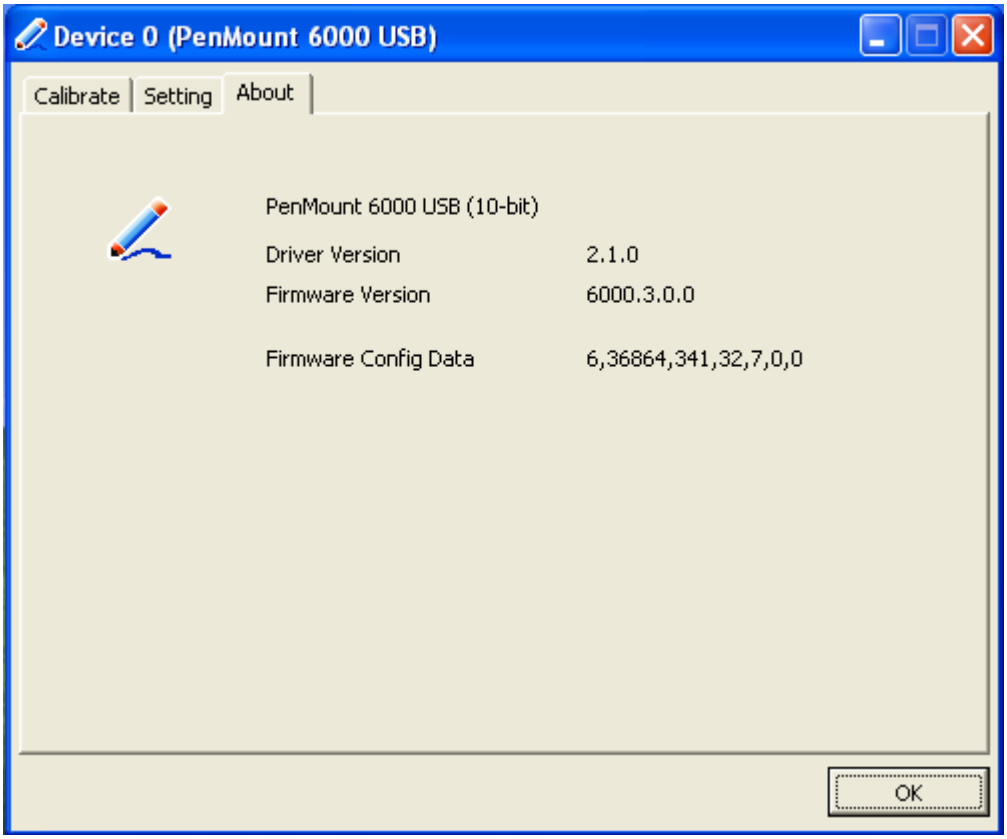

Multiple Monitors

Multiple Monitors support from two to six touch screen displays for one system.
The PenMount drivers for Windows 2000/WIN 7 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the RS-232 interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:

Windows Extends Monitor Function
Matrox DualHead Multi-Screen Function
nVidia nView Function

NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:

1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens** to assign touch controllers to displays.

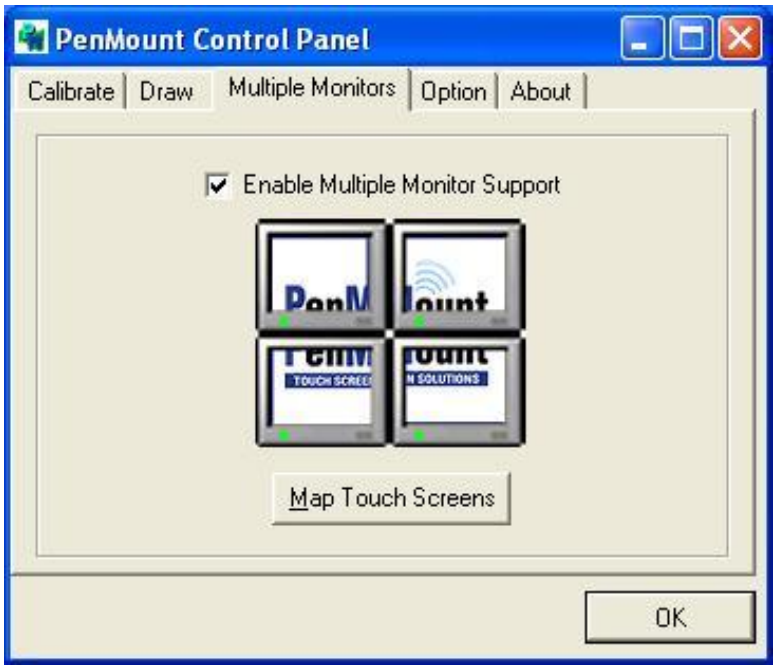

2. When the mapping screen message appears, click OK.

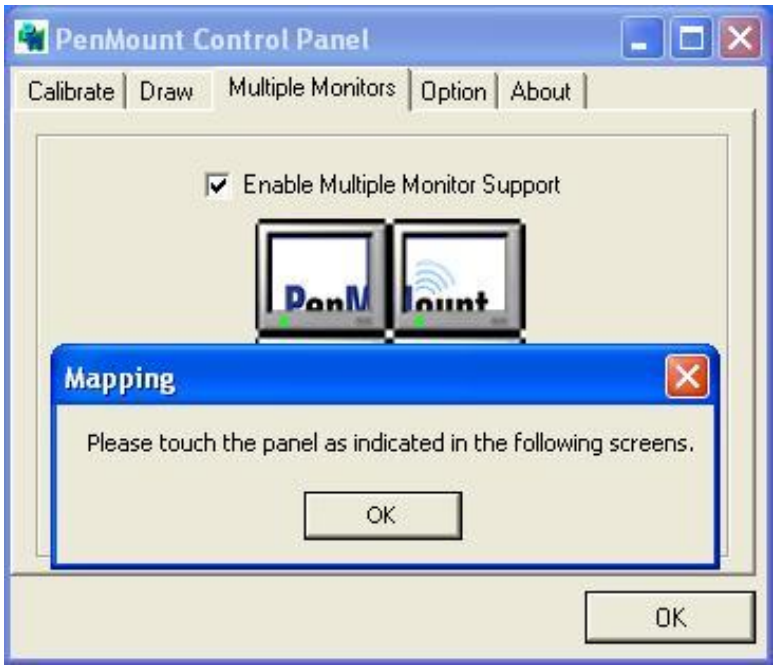

3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.

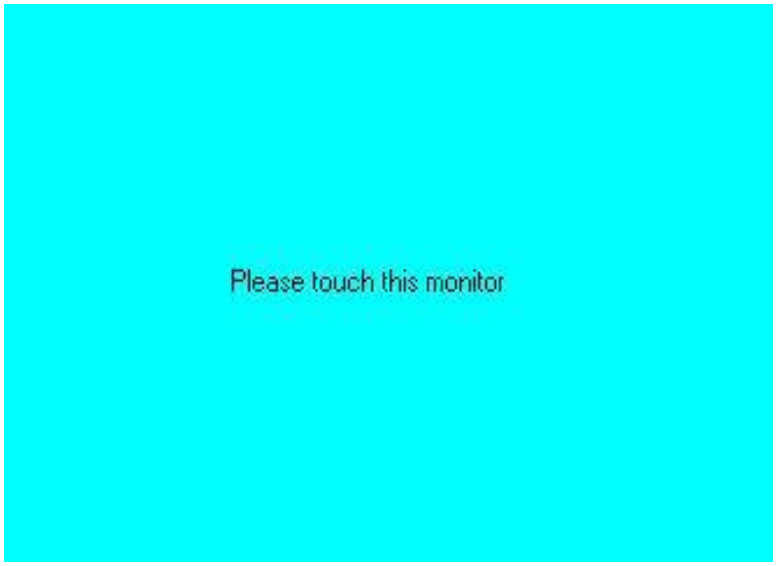

4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the “Calibration” function. A message to start calibration appears. Click OK.

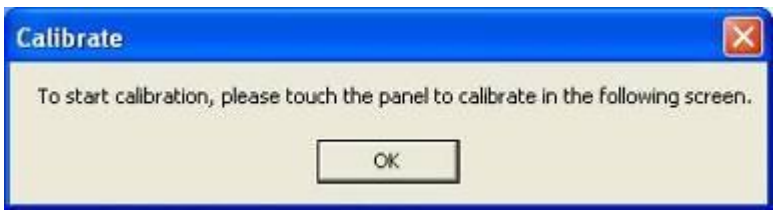

6. “Touch this screen to start its calibration” appears on one of the screens. Touch the screen.
7. “Touch the red square” messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

NOTES: 1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.

2. The Rotating function is disabled if you use the Multiple Monitor function.

3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens,** so the system understands where the displays are.

About

This panel displays information about the PenMount controller and this driver version.

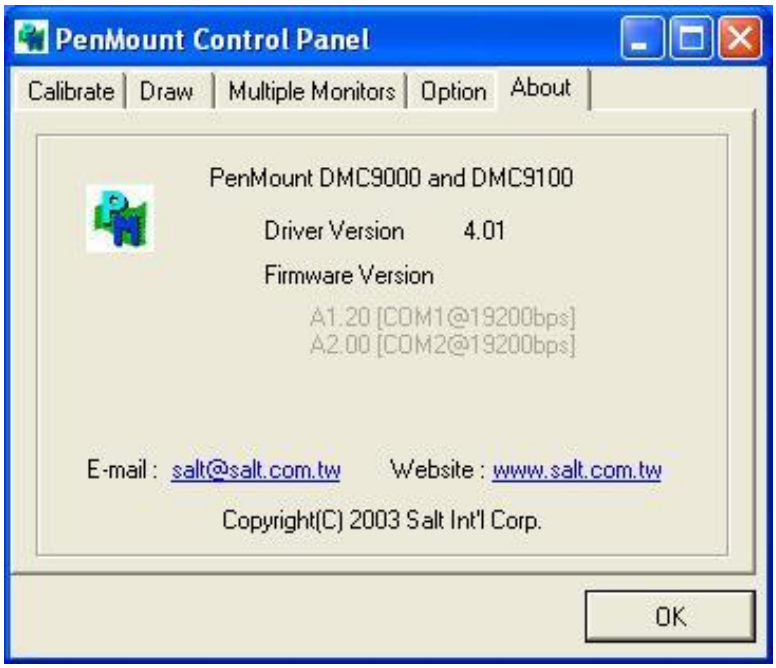

PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 2000/WIN7 system when you turn on PenMount Monitor in PenMount Utilities.

PenMount Monitor has the following function

Control Panel	**Open Control Panel Windows**
Beep	**Setting Beep function for each device**
Right Button	**When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions.**
Exit	**Exits the PenMount Monitor function.**

PenMount Rotating Functions

The PenMount driver for Windows 2000/WIN7 supports several display rotating software packages. Windows Me/2000/WIN7 support display rotating software packages such as:

- Portrait's Pivot Screen Rotation Software
- ATI Display Driver Rotate Function
- nVidia Display Driver Rotate Function
- SMI Display Driver Rotate Function
- Intel 845G/GE Display Driver Rotate Function

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

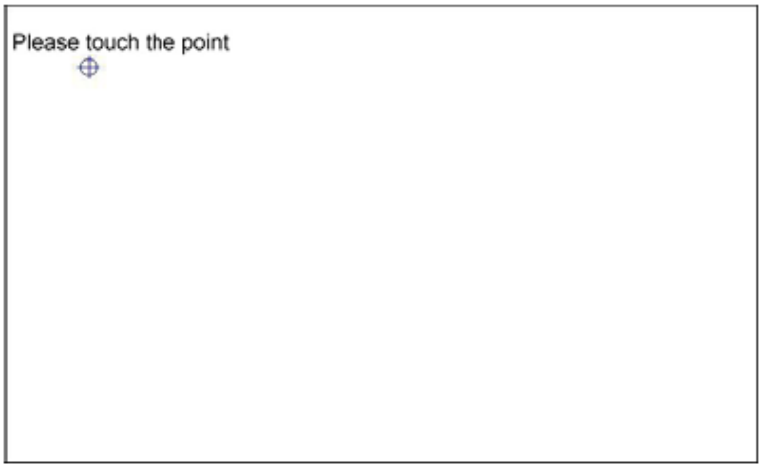

NOTE: The Rotate function is disabled if you use Monitor Mapping

5.2.2 Software Functions(Projected Capacitive)

General

In this window, you can see there is USB Controller. Click **OK** to continue.

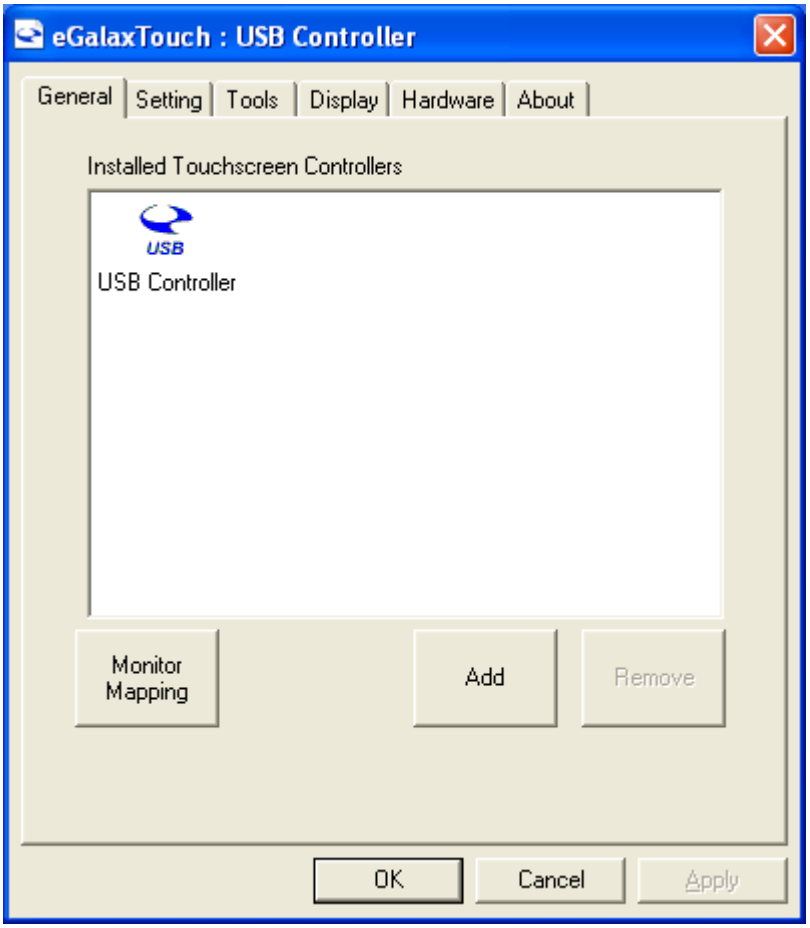

Monitor Mapping

to adjust touch panel

Add

to search for device

Setting

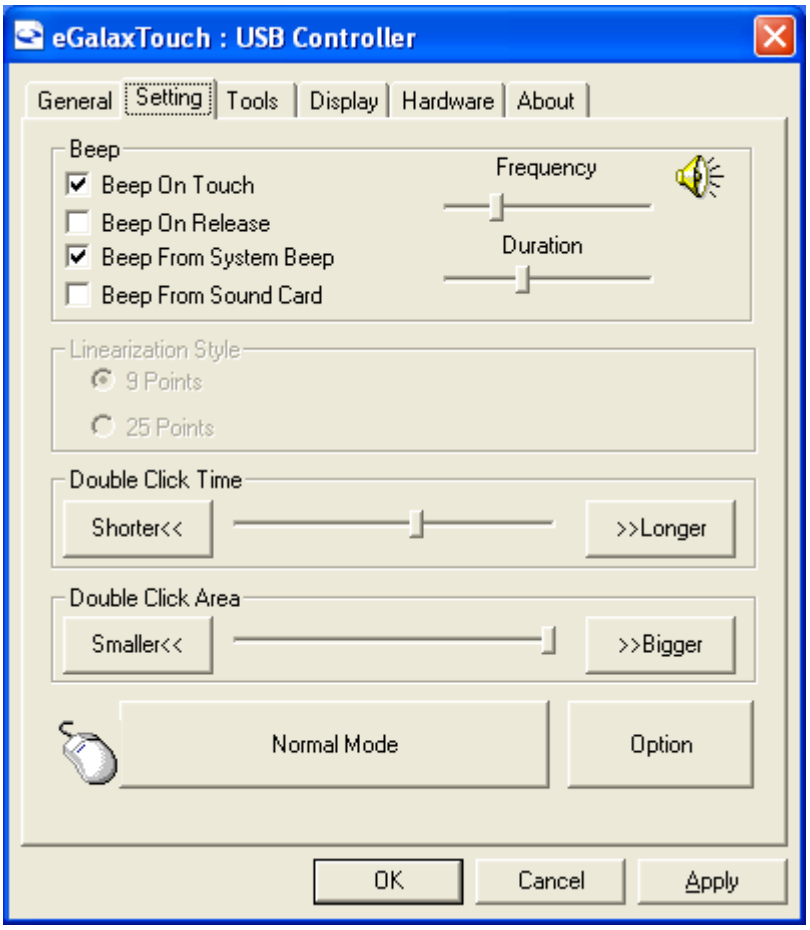

Beep

Beep On Touch

Beep On Release

Beep From System Beep

Beep From Sound Card

Linearization Style

9 points

25 points

Double Click Time

Shorter

Longer

Double Click Area

Smaller

Bigger

Normal mode

Simulate the mouse mode

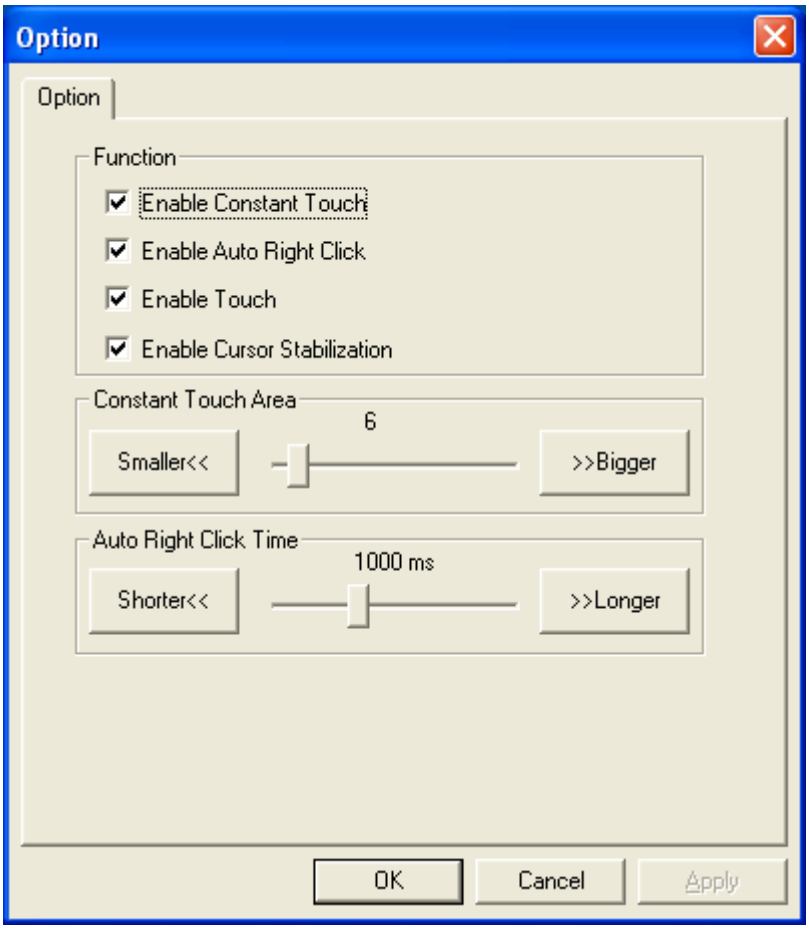

Option

Function

Enable Constant Touch

Enable Auto Right Click

Enable Touch

Enable Cursor Stabilization

Constant Touch Area

Auto Right Click Time

Tools

Click **OK** to continue the settings.

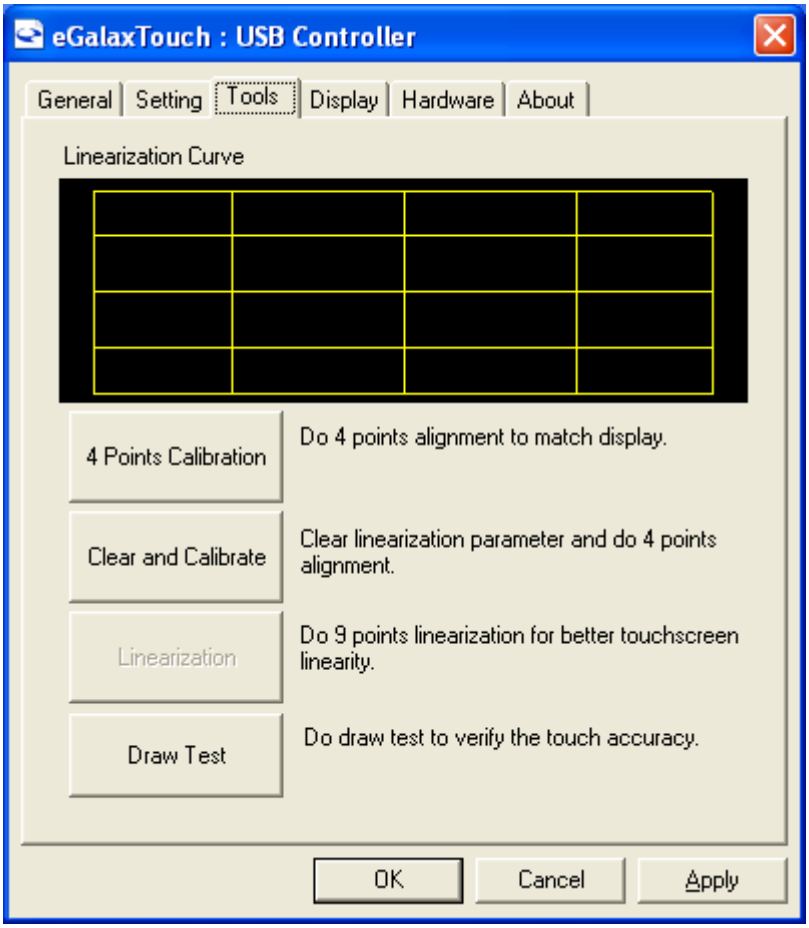

4 Points Calibration

Do 4 points alignment to match display.

Clear and Calibrate

Clear linearization parameter and do 4 points alignment.

Linearization

Do 9 points linearization for better touchscreen linearity.

Draw Test

Do draw test to verify the touch accuracy.

Display

In this window, it shows the mode of display.

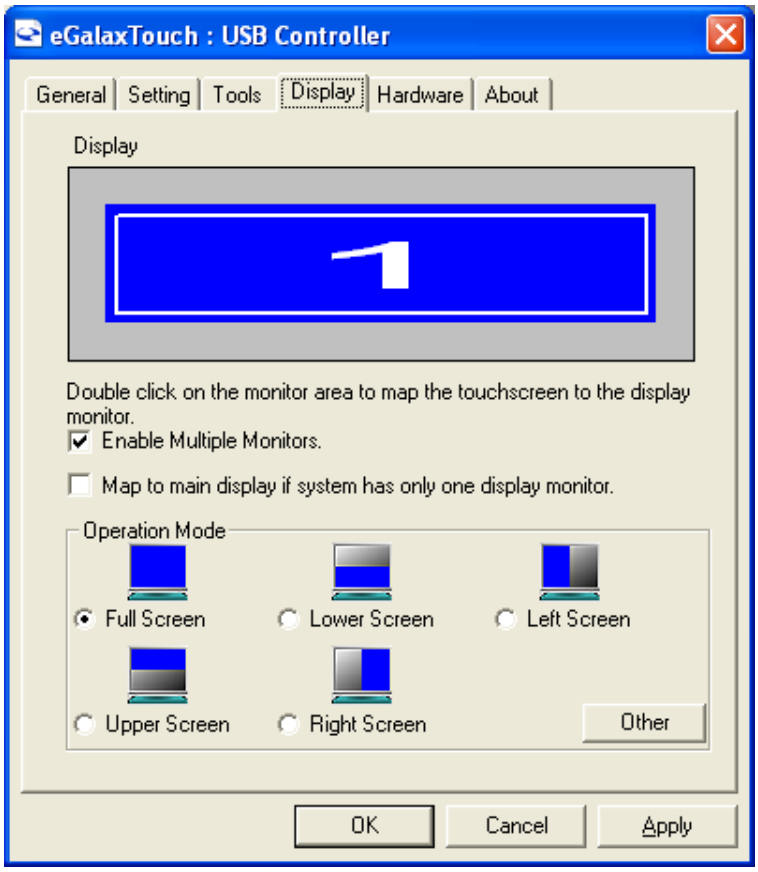

Enable Multiple Monitors.

Map to main display if system has only one display monitor

Full Screen

Lower Screen

Left Screen

Upper Screen

Right Screen

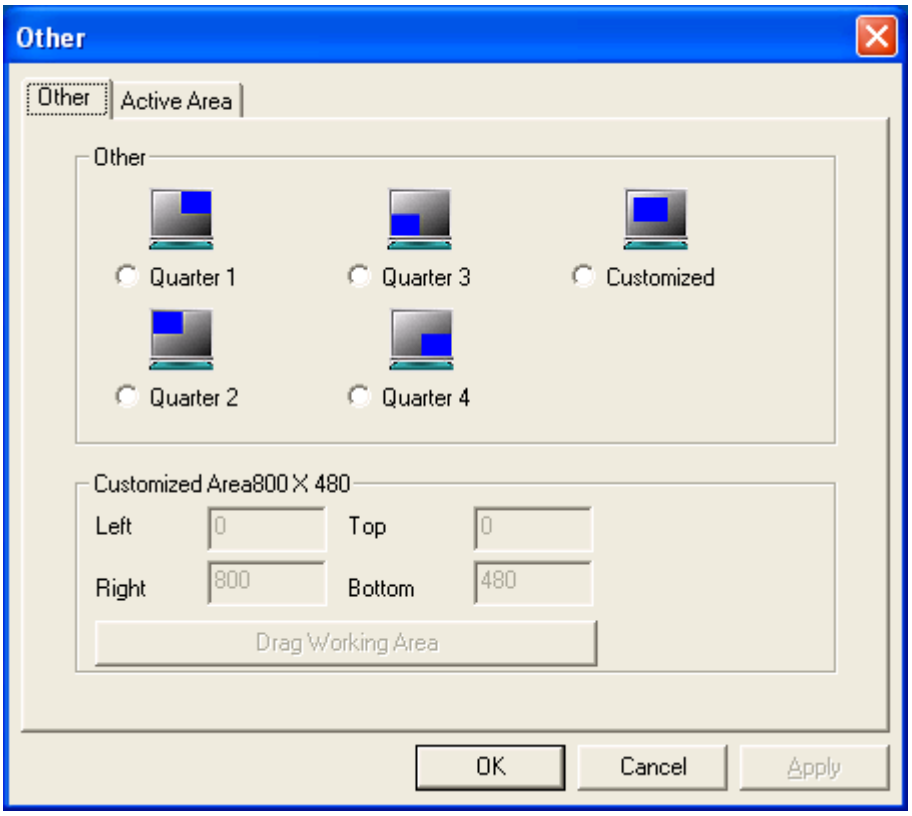

Other

Other mode of display. Quarter1~4 and Customized area.

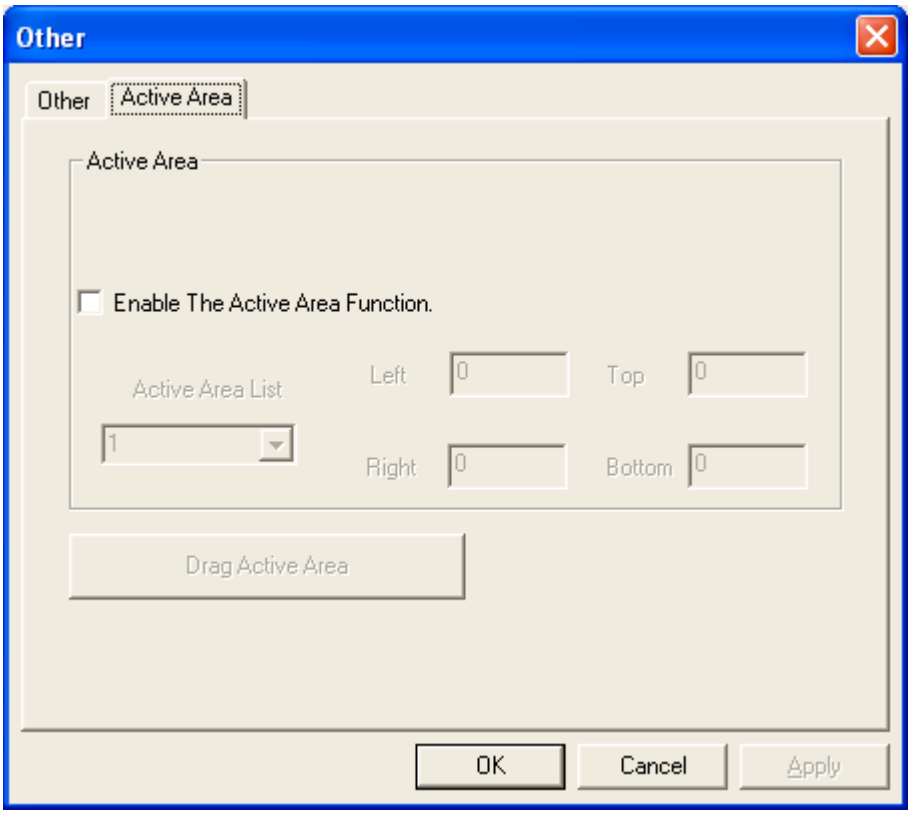

Active Area

Drag active area to enable Active Area Function.

Hardware

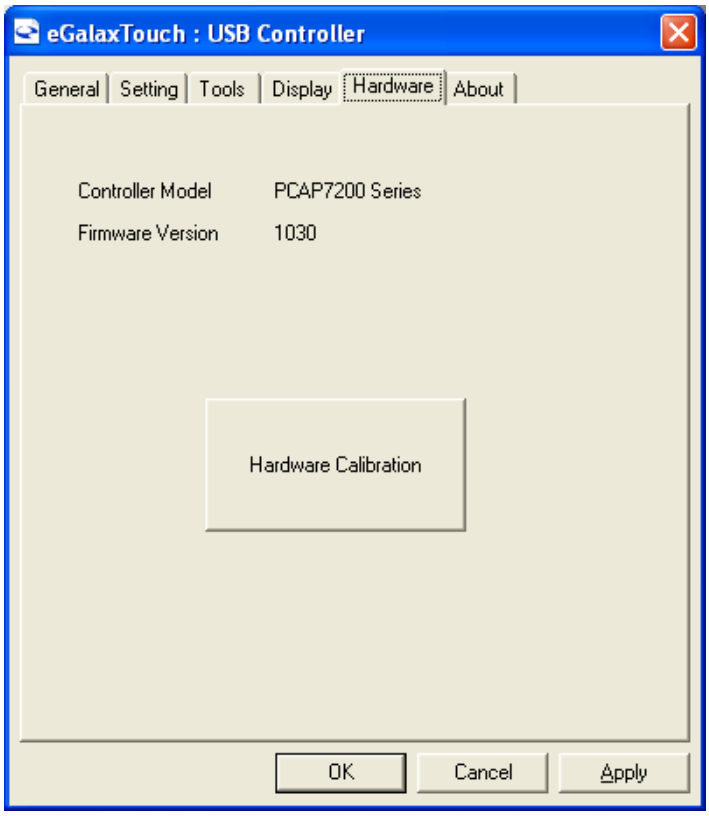

Saturn Hardware Configuration

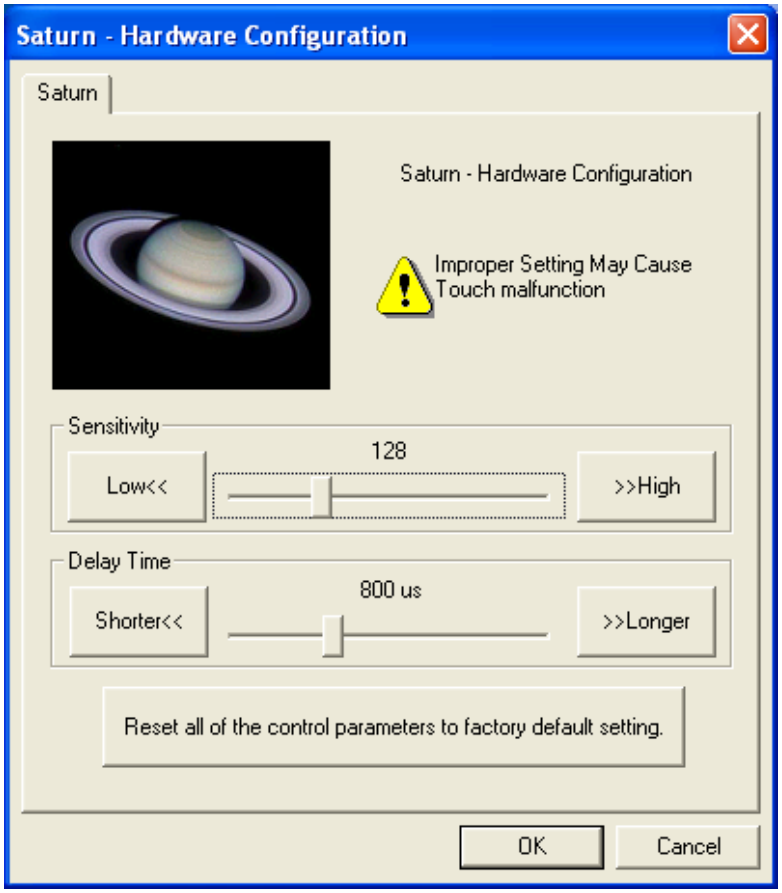

About

To display information about eGalaxTouch and its version.

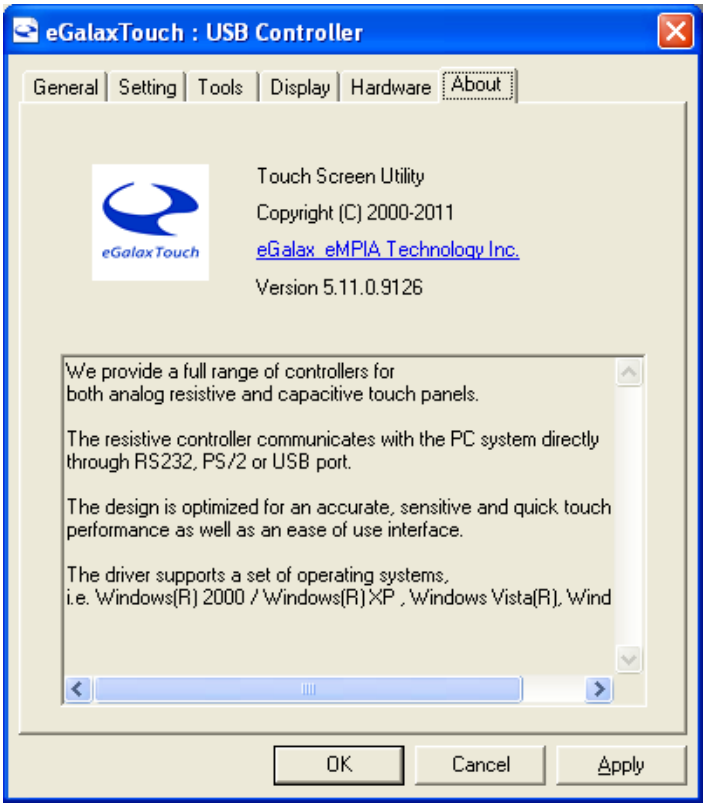
eGalaxTouch : USB Controller
General
Setting
Tools
Display
Hardware
About
eGalaxTouch
Touch Screen Utility
Copyright (C) 2000-2011
eGalax_eMPIA Technology Inc.
Version 5.11.0.9126
We provide a full range of controllers for
both analog resistive and capacitive touch panels.
The resistive controller communicates with the PC system directly
through RS232, PS/2 or USB port.
The design is optimized for an accurate, sensitive and quick touch
performance as well as an ease of use interface.
The driver supports a set of operating systems,
i.e. Windows(R) 2000 / Windows(R) XP , Windows Vista(R), Wind
OK
Cancel
Apply